


INSTALLATION

1. INSTALL WASHER NOZZLES

2. INSTALL WIPER LINK

Install the wiper link through the service hole, then torque the 6 bolts.

Torque: 5.4 N·m (55 kgf·cm, 48 in·lbf)

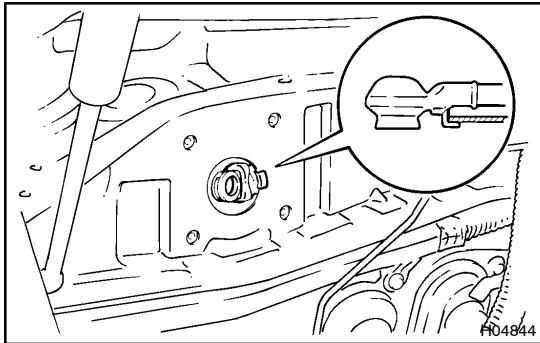

HINT:

When installing the wiper link, connect the claw of wiper link to the panel.

3. INSTALL WIPER MOTOR

- (a) Connect the wiper motor to wiper link.
- (b) Torque the 4 bolts.
- (c) Connect the connector.


4. INSTALL LH AND RH COWL TOP VENTILATOR LOUVERS

- (a) Install the LH cowl top ventilator louver.
- (b) Install the RH cowl top ventilator louver.

5. INSTALL HOOD TO COWL TOP SEAL

6. INSTALL WIPER ARMS

- (a) Operate the wipers once and turn the wiper switch OFF.
- (b) Install the wiper arms and tighten nuts by hand.

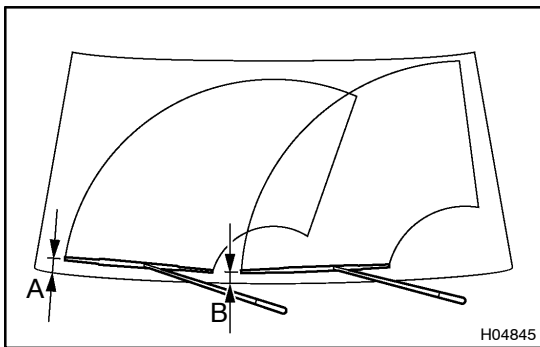

- (c) Adjust the installation position of the wiper arms to the positions shown in the illustration.

A: Approx. 40 mm (1.57 in.)

B: Approx. 16 – 26 mm (0.63 – 1.02 in.)

- (d) Torque the nuts.

Torque: 20 N·m (204 kgf·cm, 15 ft·lbf)

- (e) Install the wiper arm caps.