

REMOVAL


1. REMOVE WIPER ARMS

- (a) Remove the 2 caps and 2 nuts.
- (b) Remove the 2 wiper arms.

2. REMOVE HOOD TO COWL TOP SEAL

3. REMOVE LH AND RH COWL TOP VENTILATOR LOUVERS

- (a) Remove the RH cowl top ventilator louver.
- (b) Remove the LH cowl top ventilator louver.

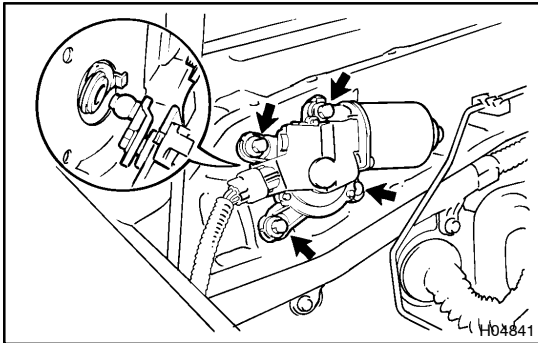


4. REMOVE WIPER MOTOR

- (a) Disconnect the connector, unfasten the 4 bolts.
- (b) Disconnect the wiper motor from the wiper link, then remove the wiper motor.

5. REMOVE WIPER LINK

- (a) Loosen the 6 bolts.
- (b) Remove the wiper link through the service hole.

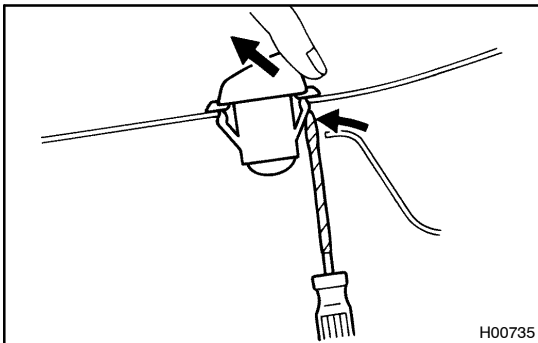

6. REMOVE WASHER NOZZLE

- (a) Disconnect the washer hose.
- (b) Using a screwdriver, remove the washer nozzle.

HINT:

Tape the screwdriver tip before use.

- (c) Employ the same manner described above to the other side.