


DISASSEMBLY


1. REMOVE NO.2 SIDE DEFROSTER NOZZLE DUCT
2. REMOVE NO.1 SIDE DEFROSTER NOZZLE DUCT
3. REMOVE DEFROSTER NOZZLE
4. REMOVE CENTER BRACKET
5. REMOVE NO.1 HEATER TO REGISTER DUCT
6. REMOVE INSTRUMENT PANEL WIRE HARNESS
7. REMOVE NO.5 HEATER TO REGISTER DUCT

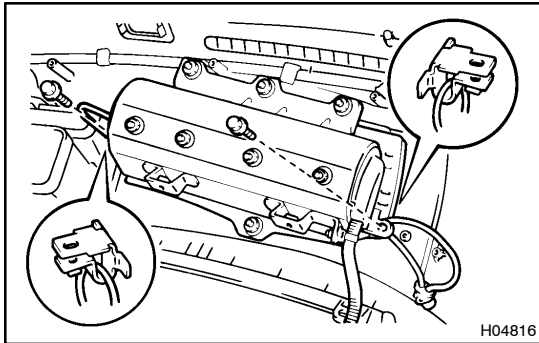

8. REMOVE FRONT PASSENGER AIRBAG ASSEMBLY

- (a) Remove the 2 bolts and straps.

Torque: 6.0 N·m (61 kgf·cm, 53 in·lbf)

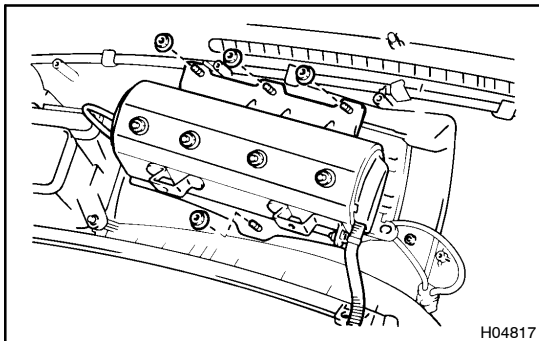

- (b) Remove the 4 nuts and front passenger airbag assembly.

Torque: 6.0 N·m (61 kgf·cm, 53 in·lbf)

CAUTION:

- Do not store the front passenger airbag assembly with the airbag deployment side facing down.
- Never disassemble the front passenger airbag assembly.

NOTICE:

At the time of reassembly, please refer to the following items.

- Pass the straps of the front passenger airbag door through the brackets on the right and left sides securely.
- Install the straps so that they are not pinched between the airbag and instrument panel.
- When installing the front passenger airbag assembly, make sure that the straps are not distorted and installed to the brackets securely.
- Make sure that the front passenger airbag assembly is installed to the specified torque.
- If the front passenger airbag assembly has been dropped, or there are cracks, dents or other defects in the case or connector, replace the front passenger airbag assembly with a new one.
- When installing the front passenger airbag assembly, take care that the wiring does not interfere with other parts and is not pinched between other parts.

9. REMOVE NO.1 REGISTER
10. REMOVE NO.4 REGISTER