


## SEAT BELT PRETENSIONER REMOVAL

B021G-03

### NOTICE:

- If the wiring connector of the seat belt pretensioner is disconnected with the ignition switch at ON or ACC, diagnostic trouble codes will be recorded.
- Never use seat belt pretensioner from another vehicle. When replacing seat belt pretensioner, replace it with a new one.

1. REMOVE FRONT DOOR SCUFF PLATE
2. REMOVE FRONT DOOR OPENING TRIM
3. REMOVE REAR DOOR SCUFF PLATE
4. REMOVE REAR DOOR OPENING TRIM

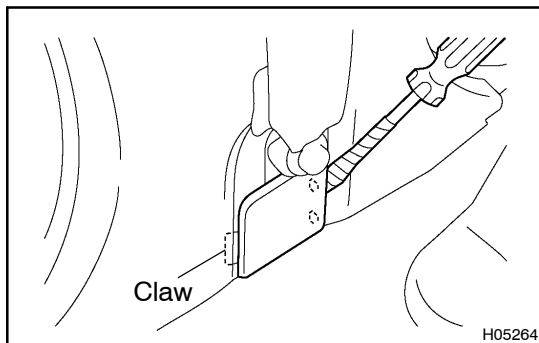


### 5. REMOVE CENTER PILLAR LOWER GARNISH

- (a) Using a screwdriver, remove the center pillar garnish cover.

#### HINT:

Tape the screwdriver tip before use.

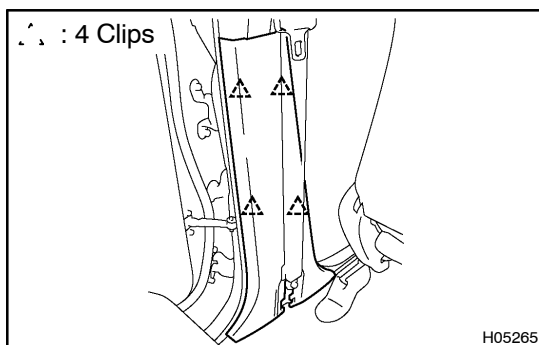

- (b) Using a screwdriver, remove the center pillar lower garnish as shown in the illustration.

#### HINT:

Tape the screwdriver tip before use.


6. REMOVE FRONT SEAT OUTER BELT SHOULDER ANCHOR
7. REMOVE FRONT SEAT OUTER BELT FLOOR ANCHOR
8. REMOVE RETRACTOR OF FRONT SEAT OUTER BELT

### CAUTION:

Never disassemble the retractor of front seat outer belt.

### NOTICE:

When removing the retractor of front seat outer belt, take care not to pull the seat belt pretensioner wire harness.

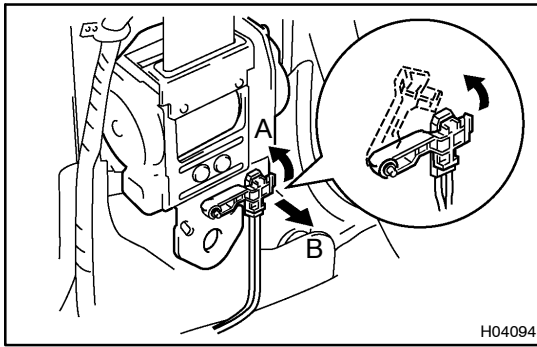

- (a) Disconnect the pretensioner connector in the order "A" and "B" as shown in the illustration.

**CAUTION:**

**When removing the seat belt pretensioner, work must be started 90 seconds after the ignition switch is turned to the "LOCK" position and the negative (-) terminal cable is disconnected from the battery.**

- (b) Remove the bolt and retractor of front seat outer belt.