


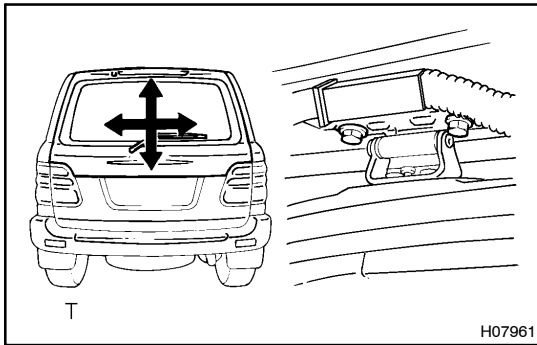


ADJUSTMENT

1. ADJUST DOOR IN LEFT/RIGHT AND VERTICAL DIRECTIONS

Loosen the door side hinge bolts to adjust.


Torque: 12 N·m (122 kgf·cm, 9 ft·lbf)

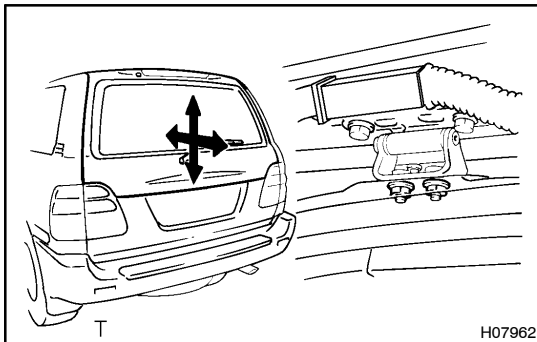

2. ADJUST DOOR IN FORWARD/REARWARD AND VERTICAL DIRECTIONS

Loosen the body side hinge nuts to adjust.

Torque: 12 N·m (122 kgf·cm, 9 ft·lbf)

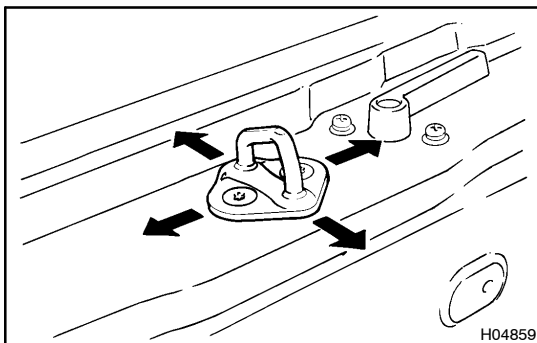

3. ADJUST DOOR LOCK STRIKER


(a) Check that the door fit and door linkages are adjusted correctly.

(b) Using a torx wrench, loosen the door lock striker mounting screws.

Torx wrench: T40 (Part No. 09042-00020 or locally manufactured tool)

Torque: 11 N·m (115 kgf·cm, 8 ft·lbf)

(c) Using a plastic hammer, tap the door lock striker to adjust.

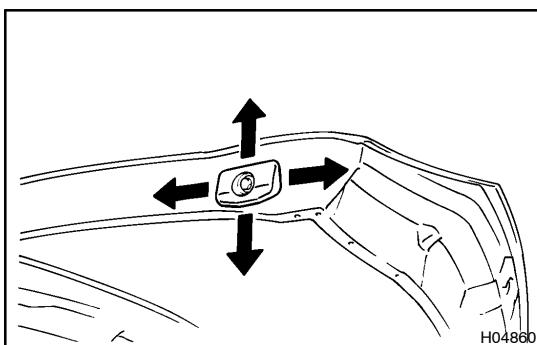

4. ADJUST LOWER STOPPER

(a) Loosen the stopper mounting bolt to adjust.

(b) Employ the same manner described above to the other side.