

INSTALLATION

Installation is in the reverse order of removal (See page [BR-72](#)).

HINT:

After installation, check the speed sensor signal ([DI-212](#) or [DI-300](#)).