

ABS & VEHICLE SKID CONTROL (VSC) & BRAKE ASSIST (BA) SYSTEM

HOW TO PROCEED WITH TROUBLESHOOTING

DI6FY-02

Troubleshooting in accordance with the procedure on the following pages.

