


Door courtesy switch circuit

CIRCUIT DESCRIPTION

The door courtesy switch goes on when the door is opened and goes off when door is closed.

WIRING DIAGRAM

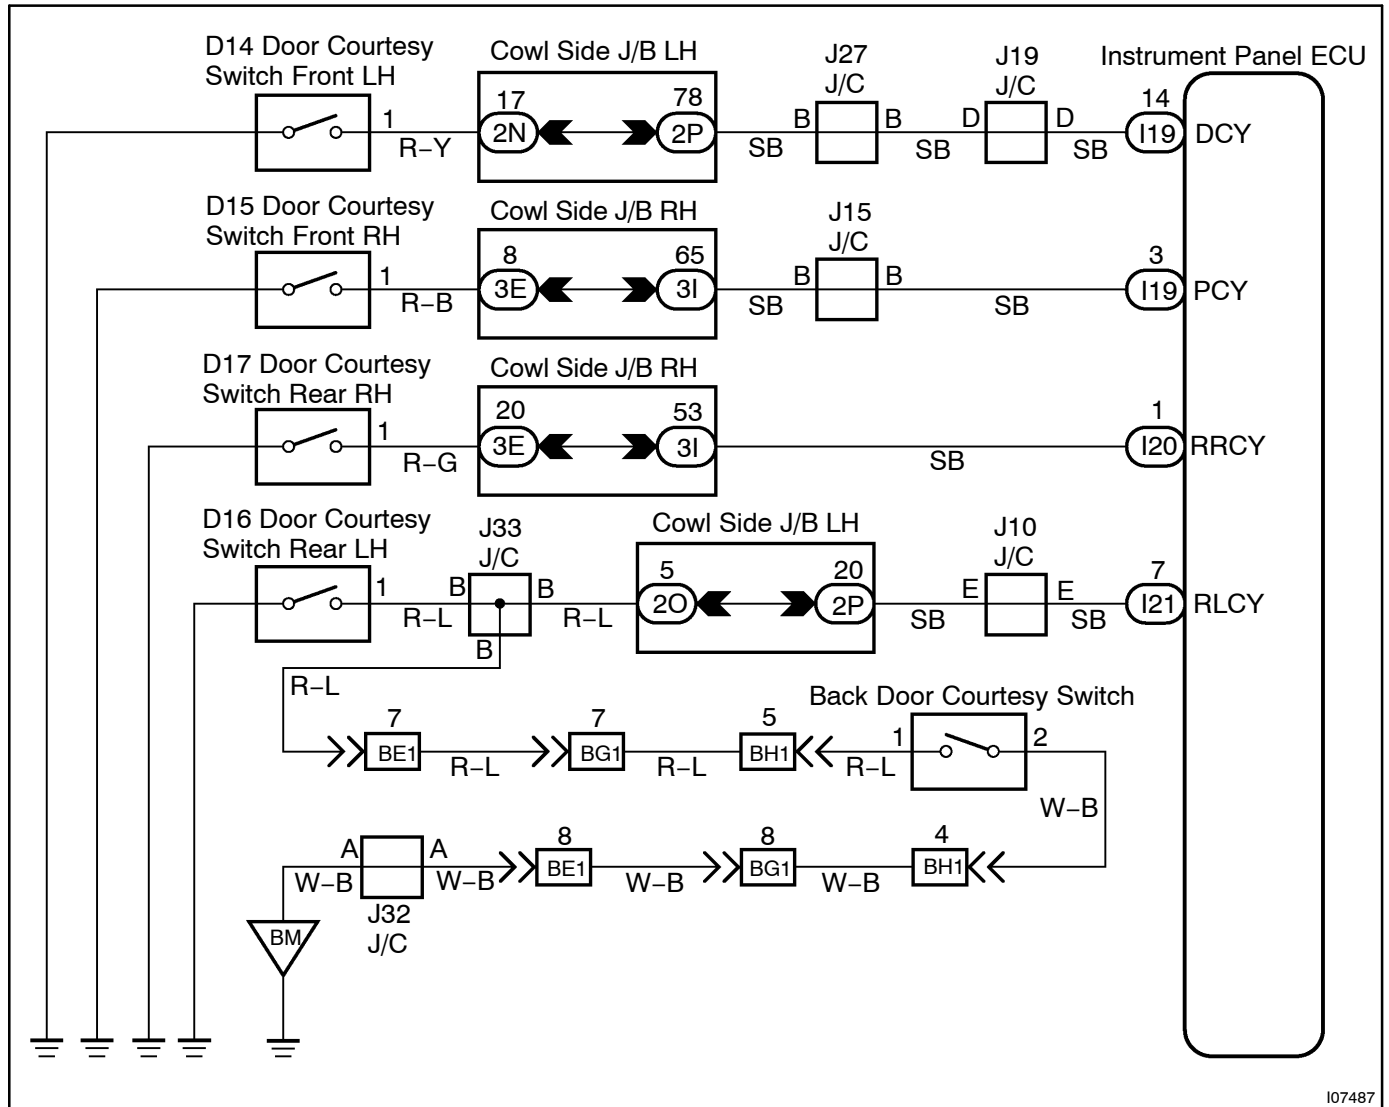

I07487

INSPECTION PROCEDURE

1	Check courtesy switch (See page BE-40).
----------	--

NG**Replace the courtesy switch.****OK**

2	Check wireharness and connector between courtesy light and body ECU, courtesy switch and body ECU.
----------	---

NG**Repair or replace wireharness or connector.****OK**

**Proceed to next circuit inspection shown on
problem symptoms table
(See page [DI-723](#)).**