


Door lock control switch circuit

CIRCUIT DESCRIPTION

When the door lock control switch is pushed to the lock side, Lock terminal of the switch is grounded, and when the switch is pushed to the unlock side, Unlock terminal is grounded (See wiring diagram below).

WIRING DIAGRAM

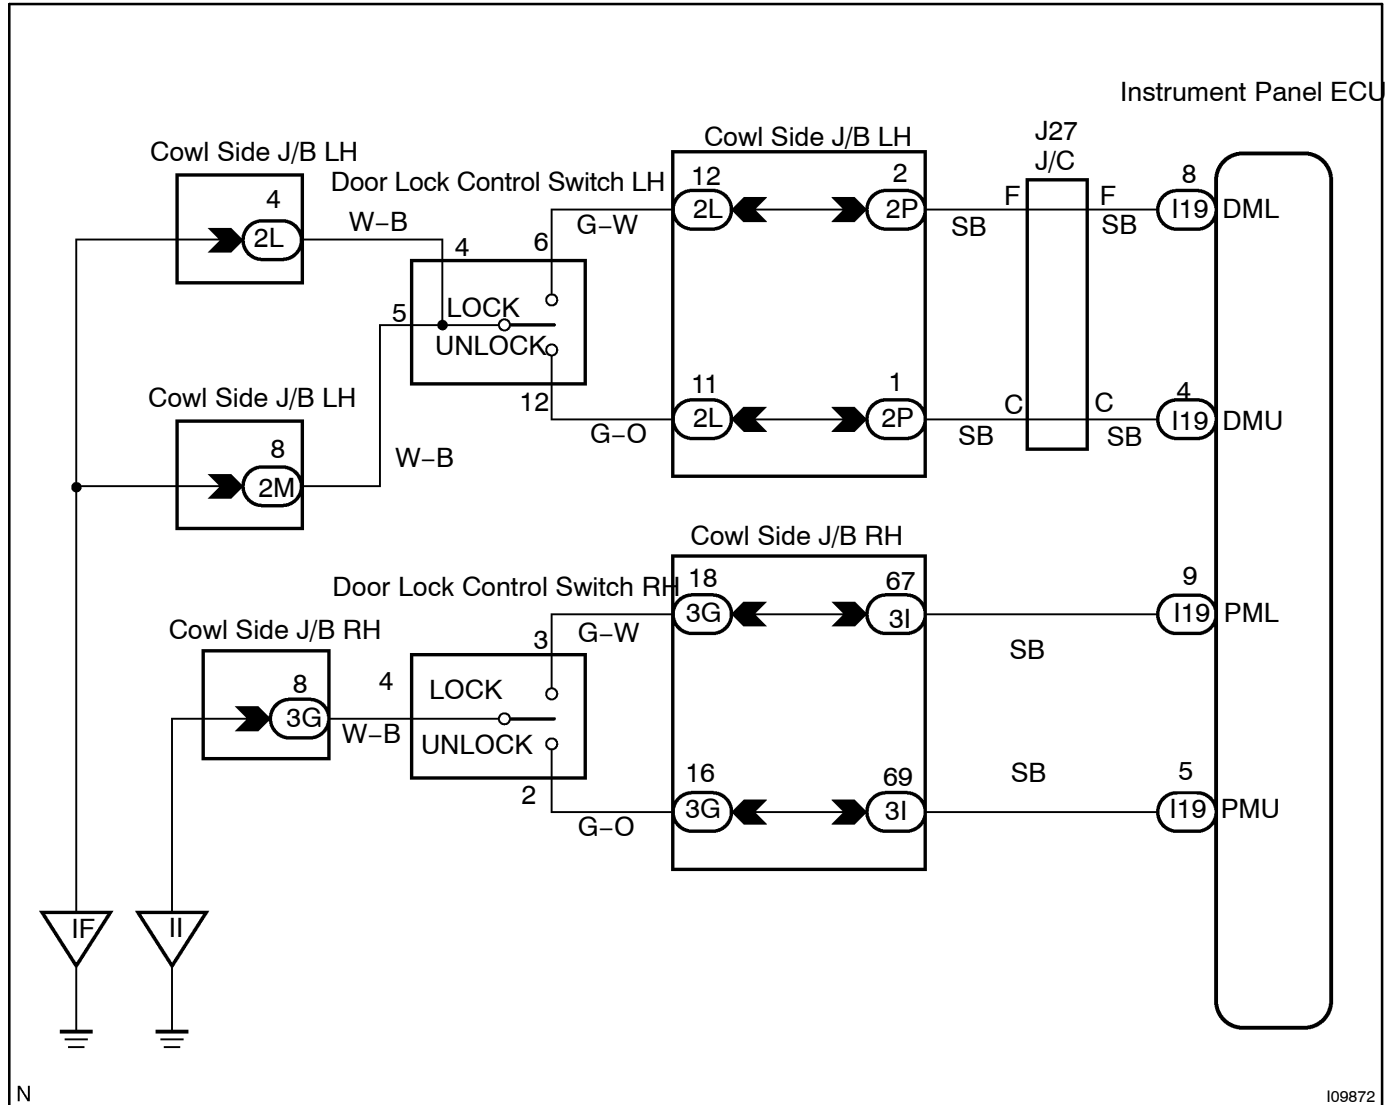

INSPECTION PROCEDURE

1	Check the door lock control switch (See page BE-89).
---	---

NG	Replace the door lock control switch.
----	---------------------------------------

OK

2	Check wireharness and connector between door lock control switch and Body ECU.
---	--

NG	Repair or replace wireharness or connector.
----	---

OK

3	Check wireharness and connector between door lock control switch and power window master switch.
---	--

NG	Repair or replace wireharness or connector.
----	---

OK

Proceed to next circuit inspection shown on problem symptoms table (See page DI-723).
--