


Light control switch circuit

WIRING DIAGRAM

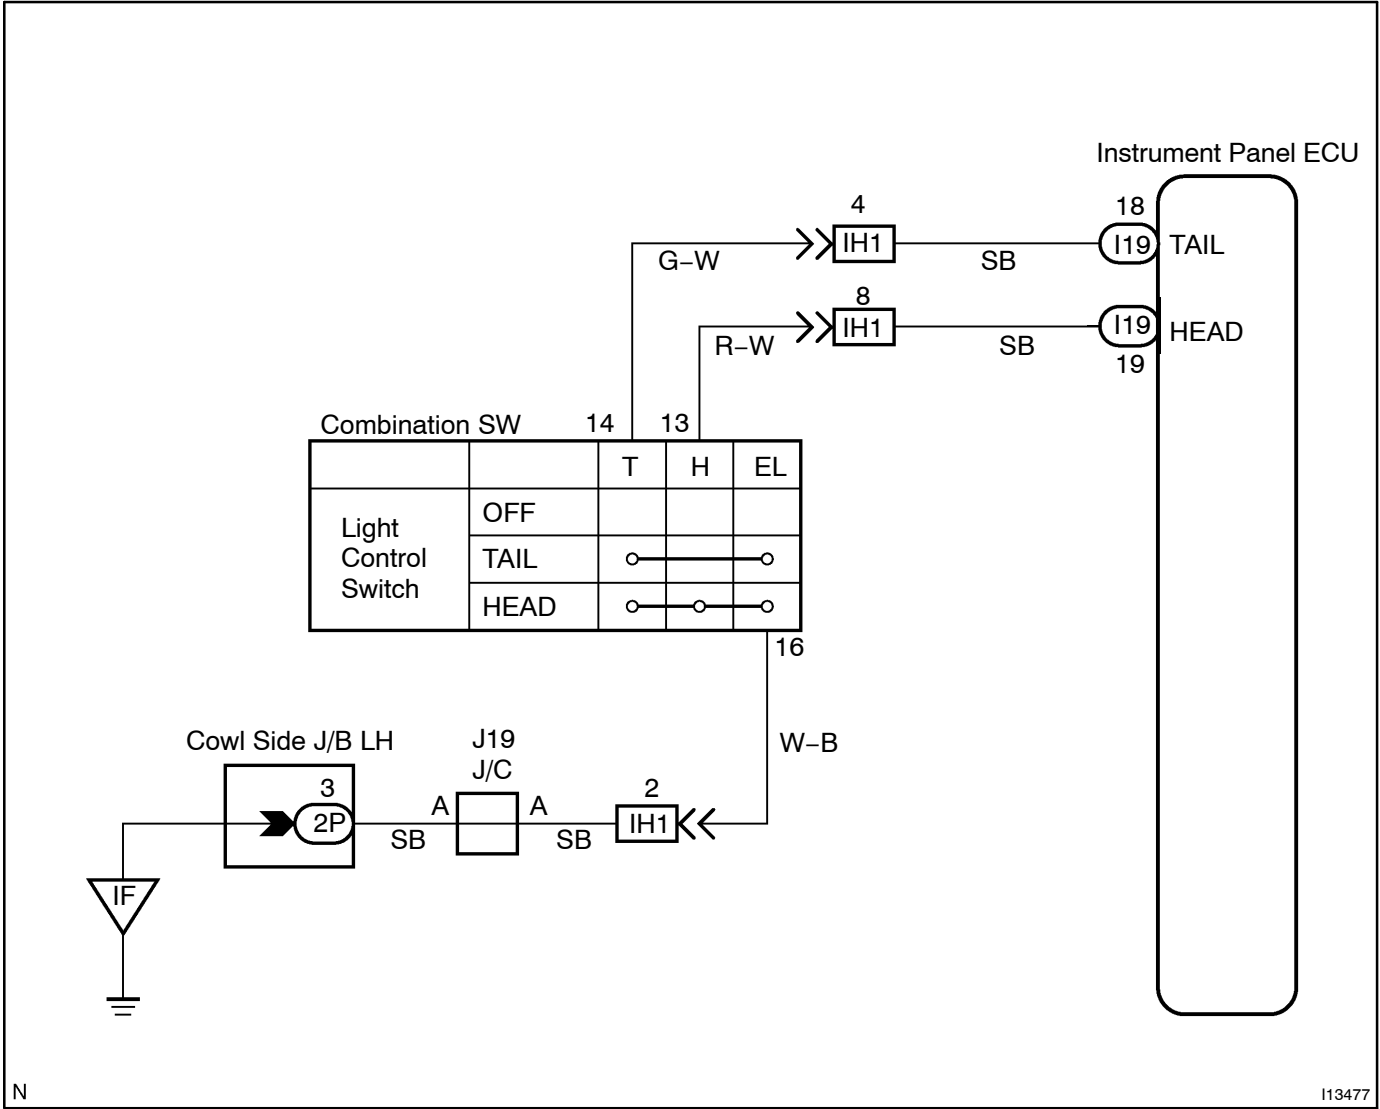

INSPECTION PROCEDURE

1	Check headlight control switch (See page BE-23).
----------	---

NG**Replace the headlight control switch.****OK**

2	Check wireharness and connector between headlight control switch and Body ECU.
----------	---

NG**Repair or replace wireharness or connector.****OK**

**Proceed to next circuit inspection shown on
problem symptoms table
(See page [DI-723](#)).**