


DTC	B2798/99	Communication malfunction No.2
------------	-----------------	---------------------------------------

CIRCUIT DESCRIPTION

DTC No.	DTC Detecting Condition	Trouble Area
B2798/99	Communication error	• Key • Transponder Key Coil • Transponder Key Amplifier • Wire Harness • ECM

WIRING DIAGRAM

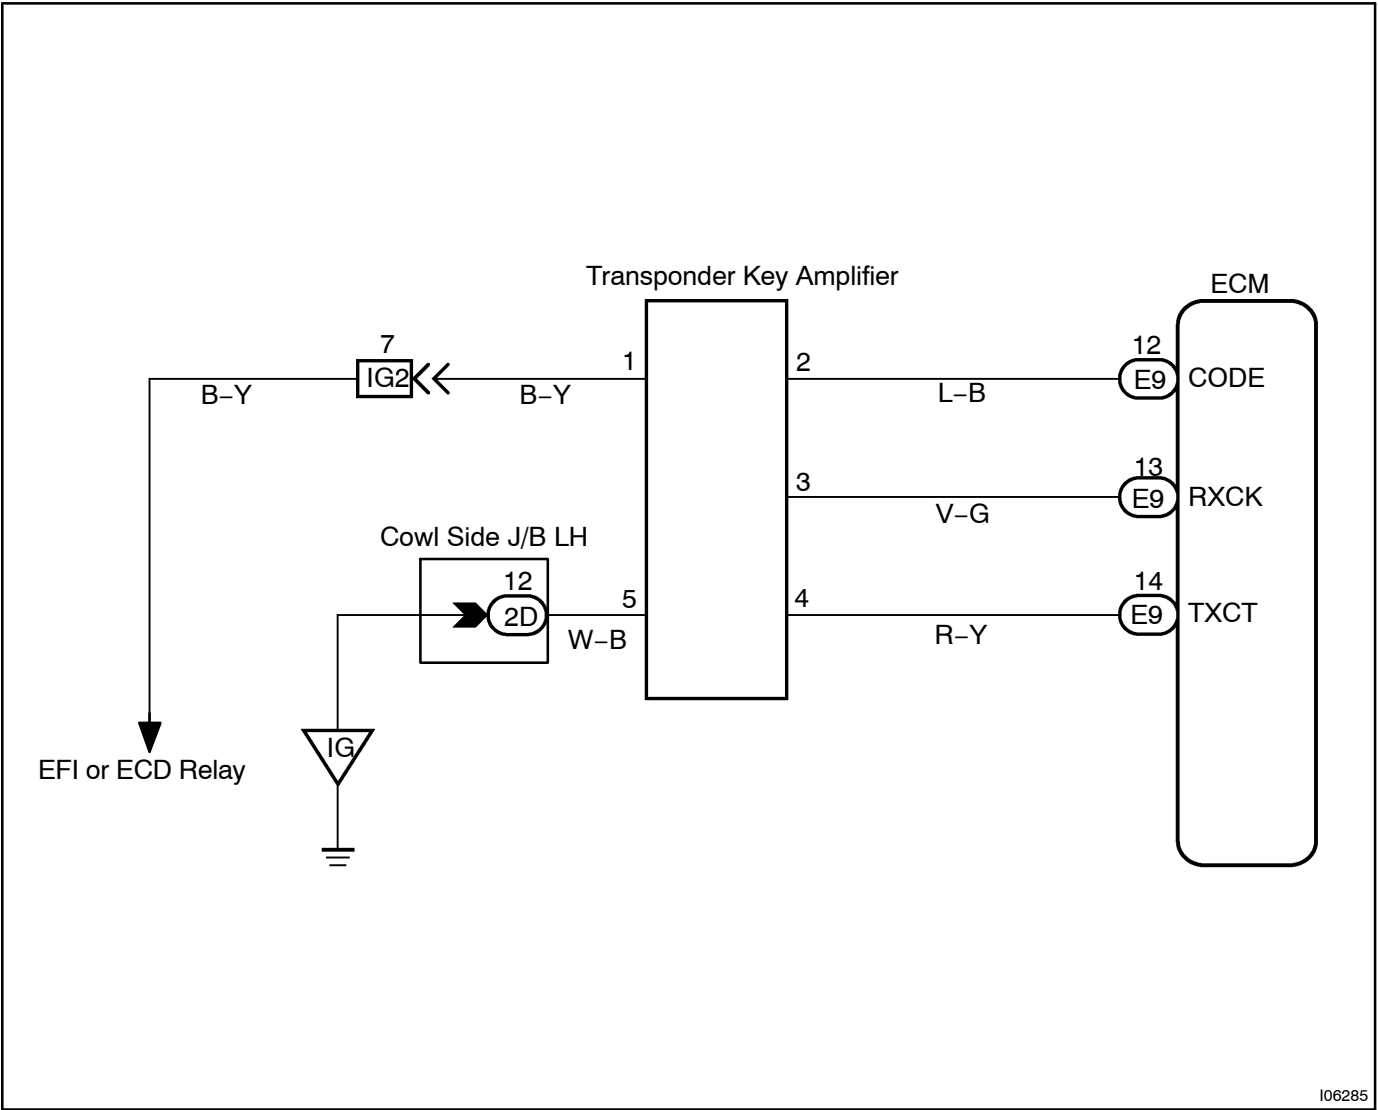

I06285

INSPECTION PROCEDURE

1	Check transponder key coil (See page BE-155).
----------	--

NG**Replace transponder key coil.****OK**

2	Check harness and connector between transponder key amplifier and ECM.
----------	---

NG**Repair or replace harness and connector.****OK**

3	Does the system operate normally after replacement of transponder key amplifier?
----------	---

Yes**Replace transponder key amplifier.****No****Replace ECM.**