


## CIRCUIT INSPECTION

### Indicator Light Circuit

### CIRCUIT DESCRIPTION

When the theft deterrent system is prepared to set, this circuit lights up the indicator light. When the system has been set, it continually turns the indicator light ON for 1 second and turns it OFF for 1 second, thus blinking the indicator light.


### WIRING DIAGRAM

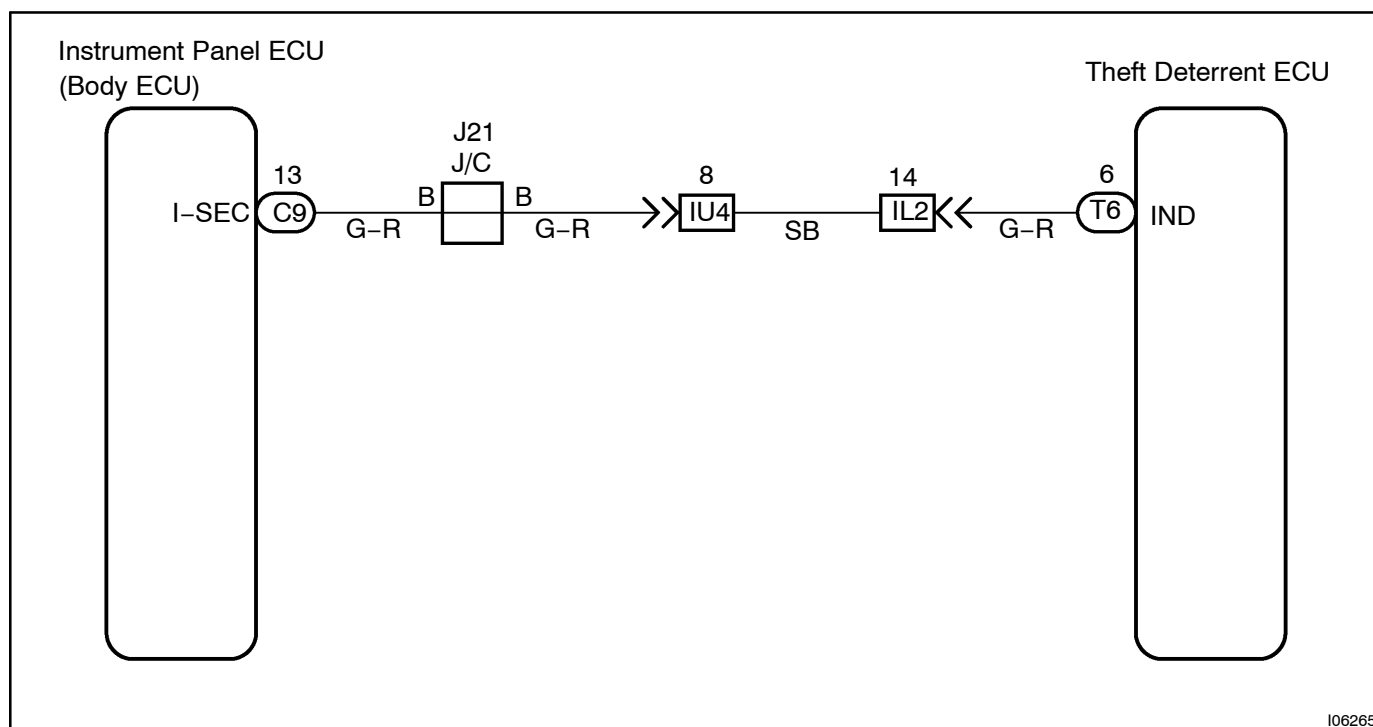

I06265

## INSPECTION PROCEDURE

## 1 Check indicator light.

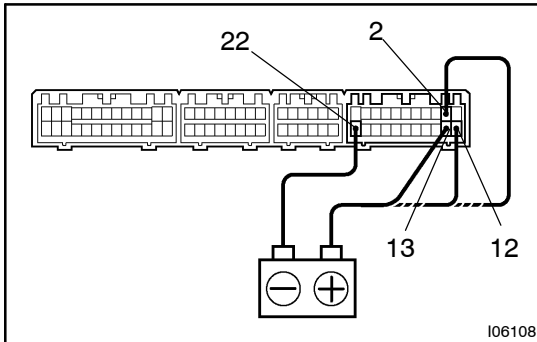**PREPARATION:**

- (a) Remove instrument panel ECU.
- (b) Disconnect instrument panel ECU.

**CHECK:**

Connect the positive (+) lead to terminal D2, D12 and the negative (-) lead to terminal D22 of instrument panel ECU connector.

**OK:**

Indicator light comes on.

NG

Replace instrument panel ECU.

OK

2 Check harness and connector between theft deterrent ECU and instrument panel ECU , instrument panel ECU and body ground (See page [IN-34](#)).

NG

Repair or replace harness or connector.

OK

Check and replace theft deterrent ECU.\*1

\*1: When there is a malfunction that the theft deterrent system cannot be set, proceed to the next numbered circuit inspection shown in problem symptoms table (See page [DI-643](#)).