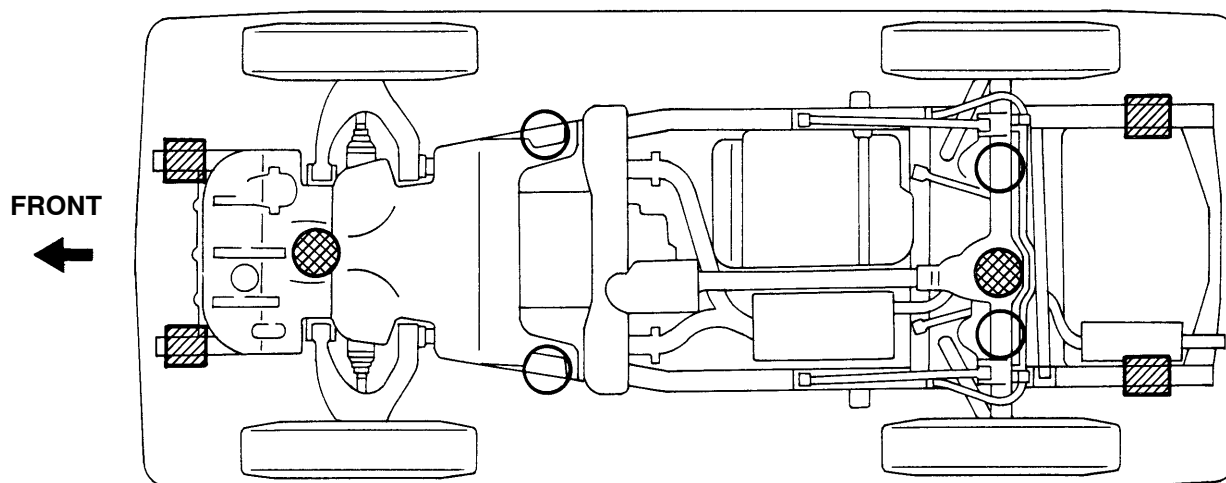


VEHICLE LIFT AND SUPPORT LOCATIONS



JACK POSITION _____



Front Engine under cover

Rear Rear differential carrier

CAUTION : When jacking-up the front and rear, make sure the car is not carrying any extra weight.

SCREW TYPE JACK POSITION _____

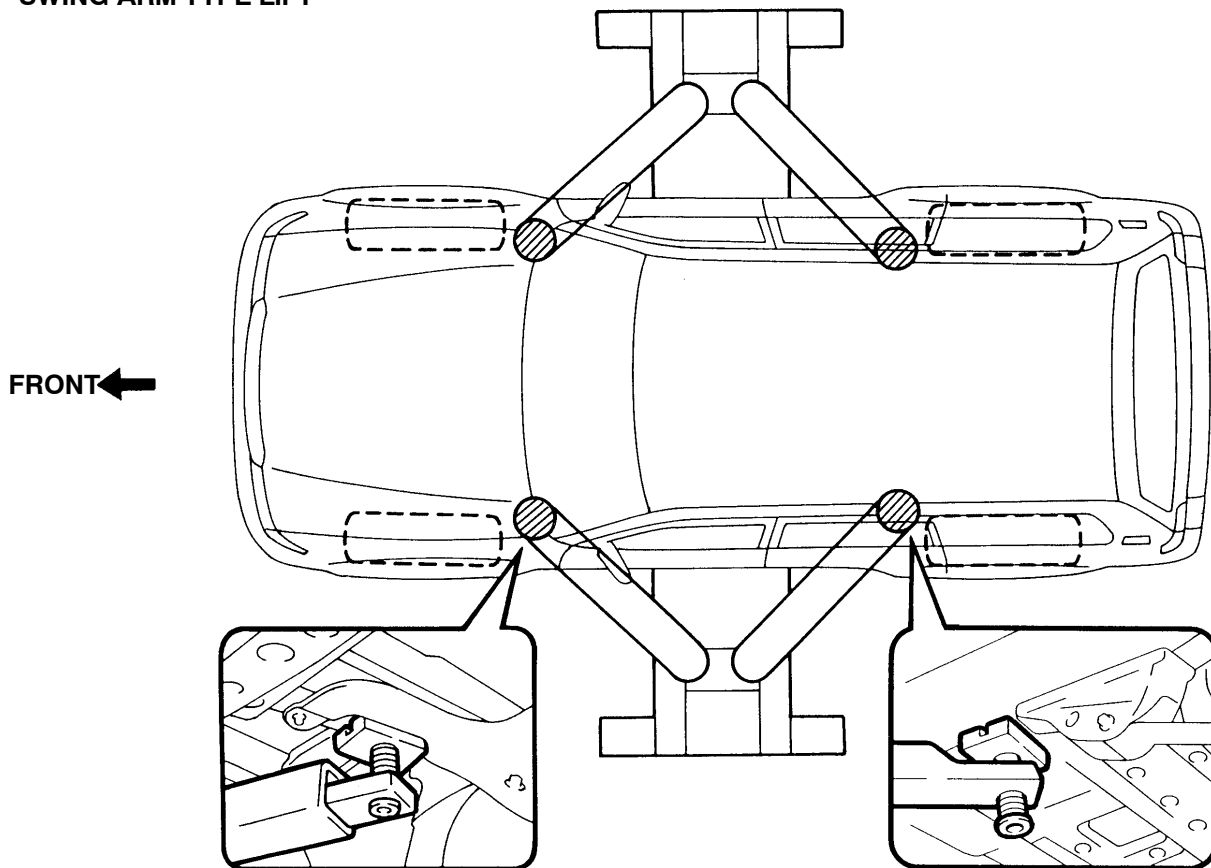


SUPPORT POSITION

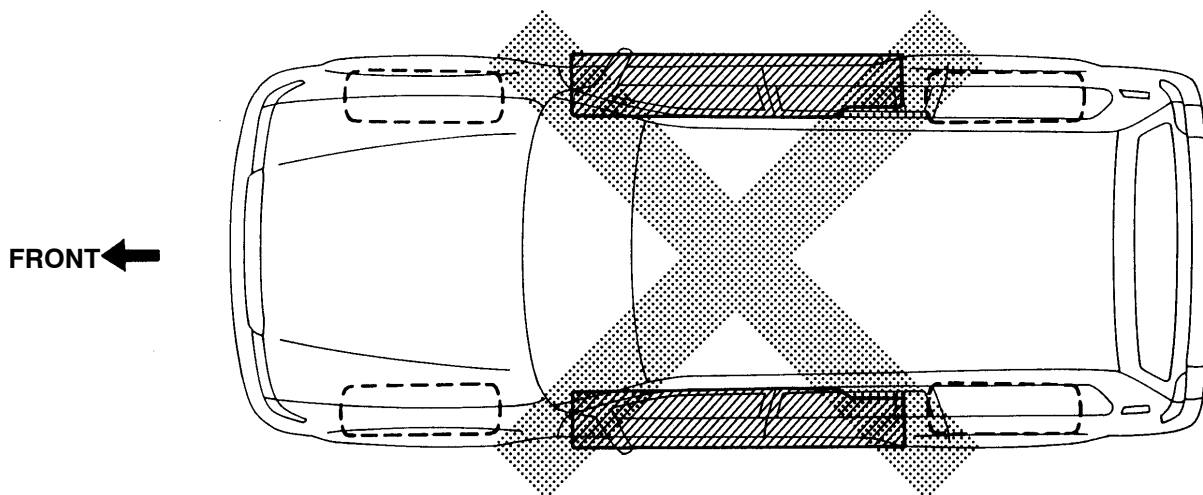
Safety stand _____



B04208

SWING ARM TYPE LIFT

NOTICE: When lifting the vehicle, place the supports correctly at the positions shown above.

PLATE TYPE LIFT (DO NOT USE.)

NOTICE: Never use the plate type lift—using it to lift up the vehicle will cause the body shape to warp.

B04209