

INSTALLATION

NOTICE:

Never use airbag parts from another vehicle. When replacing parts, replace them with new parts.

1. INSTALL FRONT PASSENGER AIRBAG ASSEMBLY

- (a) Install the front passenger airbag assembly to the instrument panel with the 4 nuts.

Torque: 6.0 N·m (61 kgf·cm, 53 in·lbf)

- (b) Install the 2 airbag straps and bolts to front passenger airbag assembly.

Torque: 6.0 N·m (61 kgf·cm, 53 in·lbf)

CAUTION:

- Make sure that no foreign objects are trapped between the airbag bag and the module.
- Do not damage the strap when installing the module.

NOTICE:


If the front passenger airbag assembly has been dropped, or there are cracks, dents or other defects in the case or connector, replace the front passenger airbag assembly with a new one.

2. INSTALL CENTER BRACKET

3. INSTALL NO.2 SIDE DEFROSTER NOZZLE DUCT

4. INSTALL NO.5 HEATER TO REGISTER DUCT

5. INSTALL DEFROSTER NOZZLE ASSEMBLY

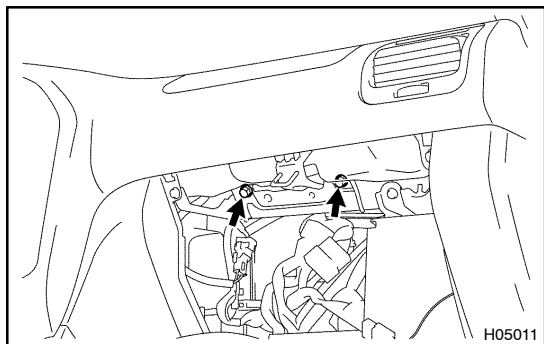

6. INSTALL INSTRUMENT PANEL


(See page [BO-98](#))

Install the 2 bolts to instrument panel reinforcement.


Torque: 20 N·m (205 kgf·cm, 15 ft·lbf)

NOTICE:

- Make sure the front passenger airbag assembly is installed with the specified torque.
- When installing the instrument panel, take care that the airbag wire harness does not interfere with other parts and is not pinched between other parts.
- When installing the instrument panel box, carefully pull out the airbag wire harness from the glove compartment upper hole.

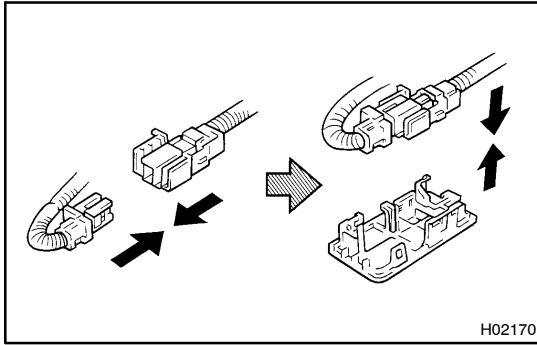**7. CONNECT AIRBAG CONNECTOR**

- (a) Connect the airbag connector.

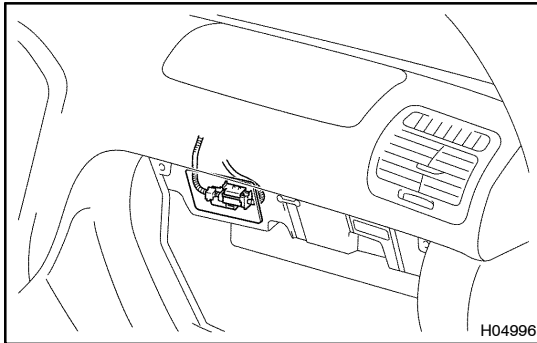

- (b) Set the connector on the No.1 under cover.
(c) Install the No.1 under cover to the lower No.2 finish panel.
(d) Install the glove compartment door.