

INSTALLATION

Installation is in the reverse order of removal (See page [SA-25](#)).

HINT:

After installation, check the ABS speed sensor signal (See page [DI-212](#) or [DI-300](#)).