


G ELECTRICAL WIRING ROUTING

Position of Parts in Engine Compartment

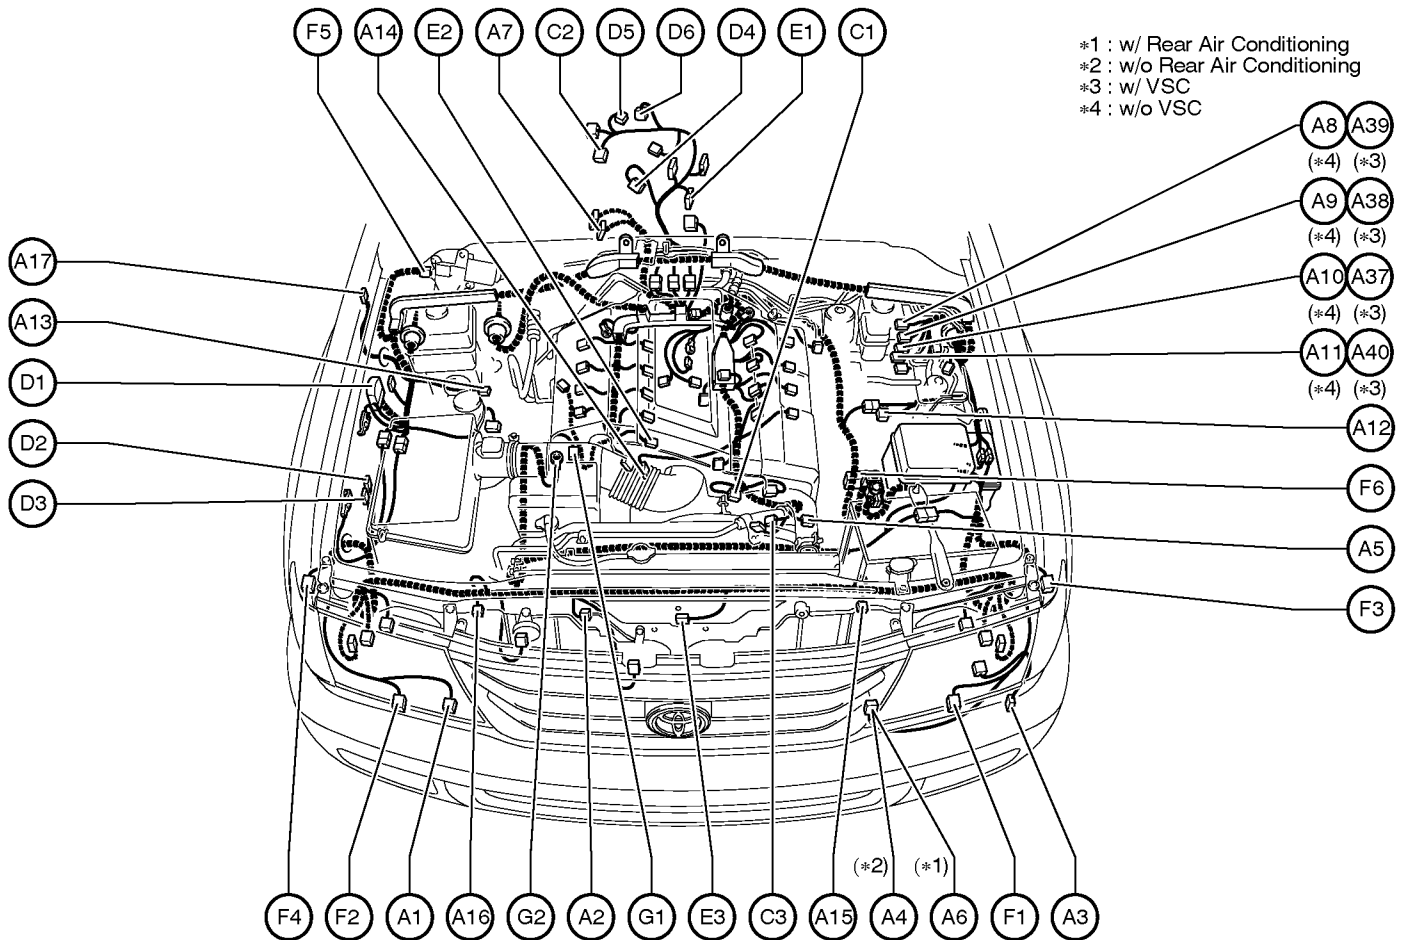


- A 1 A/C Ambient Temp. Sensor
- A 2 A/C Condenser Fan Motor
- A 3 A/C Condenser Fan Relay
- A 4 A/C Dual Pressure SW
- A 5 A/C Magnetic Clutch and Lock Sensor
- A 6 A/C Triple Pressure SW
(A/C Dual and Single Pressure SW)
- A 7 A/T Oil Temp. Sensor
- A 8 ABS Actuator
- A 9 ABS Actuator
- A10 ABS Actuator
- A11 ABS Actuator
- A12 ABS Speed Sensor Front LH
- A13 ABS Speed Sensor Front RH
- A14 Accel Position Sensor
- A15 Airbag Sensor Front LH
- A16 Airbag Sensor Front RH
- A17 Auto Antenna Motor
- A37 ABS & BA & TRAC & VSC Actuator
- A38 ABS & BA & TRAC & VSC Actuator
- A39 ABS & BA & TRAC & VSC Actuator
- A40 ABS & BA & TRAC & VSC Actuator

- C 1 Camshaft Position Sensor
- C 2 Center Diff. Lock Control Motor
- C 3 Crankshaft Position Sensor

- D 1 Data Link Connector 1
- D 2 Daytime Running Light Relay No.3
- D 3 Daytime Running Light Relay No.3
- D 4 Detection SW (Center Diff. Lock)
- D 5 Detection SW (Transfer L Position)
- D 6 Detection SW (Transfer Neutral Position)
- E 1 Electronically Controlled Transmission Solenoid
- E 2 Engine Coolant Temp. Sensor
- E 3 Engine Hood Courtesy SW
- F 1 Front Fog Light LH
- F 2 Front Fog Light RH
- F 3 Front Turn Signal and Side Marker Light LH
- F 4 Front Turn Signal and Side Marker Light RH
- F 5 Front Wiper Motor
- F 6 Fusible Link Block
- G 1 Generator
- G 2 Generator

Position of Parts in Engine Compartment

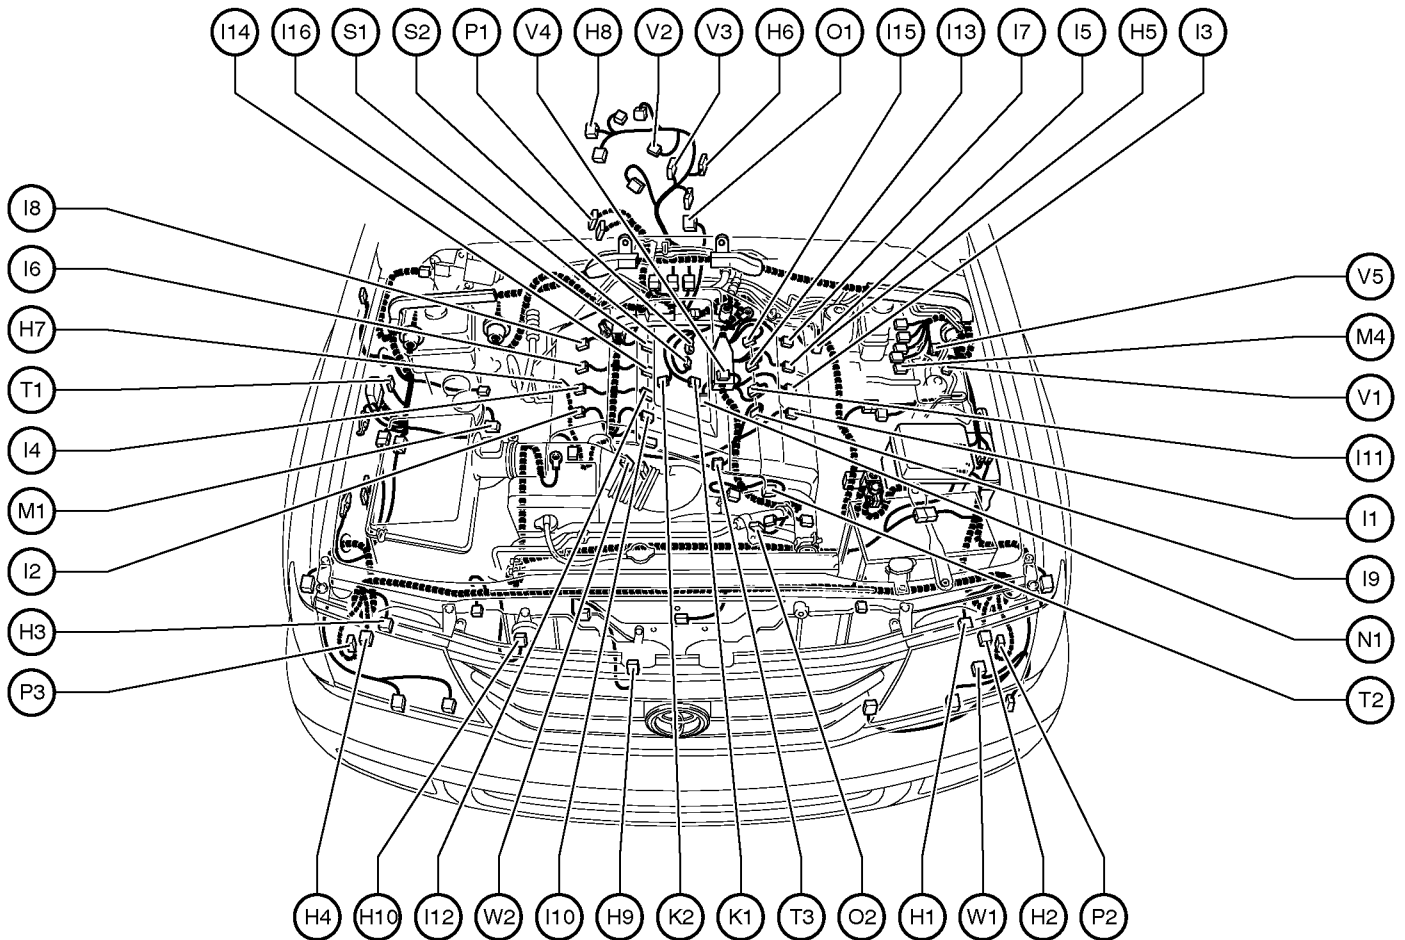

H 1 Headlight LH (High)
 H 2 Headlight LH (Low)
 H 3 Headlight RH (High)
 H 4 Headlight RH (Low)
 H 5 Heated Oxygen Sensor (Bank 1 Sensor 1)
 H 6 Heated Oxygen Sensor (Bank 1 Sensor 2)
 H 7 Heated Oxygen Sensor (Bank 2 Sensor 1)
 H 8 Heated Oxygen Sensor (Bank 2 Sensor 2)
 H 9 Horn LH
 H10 Horn RH

I 1 Ignition Coil and Igniter No.1
 I 2 Ignition Coil and Igniter No.2
 I 3 Ignition Coil and Igniter No.3
 I 4 Ignition Coil and Igniter No.4
 I 5 Ignition Coil and Igniter No.5
 I 6 Ignition Coil and Igniter No.6
 I 7 Ignition Coil and Igniter No.7
 I 8 Ignition Coil and Igniter No.8
 I 9 Injector No.1
 I 10 Injector No.2
 I 11 Injector No.3
 I 12 Injector No.4
 I 13 Injector No.5
 I 14 Injector No.6
 I 15 Injector No.7
 I 16 Injector No.8

K 1 Knock Sensor 1
 K 2 Knock Sensor 2

M 1 Mass Air Flow Meter
 M 4 Master Cylinder Pressure Sensor

N 1 Noise Filter (Ignition)

O 1 O/D Direct Clutch Speed Sensor
 O 2 Oil Pressure Sender

P 1 Park/Neutral Position SW,A/T Indicator Light SW and Back-Up Light SW
 P 2 Parking Light LH
 P 3 Parking Light RH

S 1 Starter
 S 2 Starter


T 1 Theft Deterrent Horn
 T 2 Throttle Control Motor
 T 3 Throttle Position Sensor

V 1 Vapor Pressure Sensor
 V 2 Vehicle Speed Sensor (Combination Meter)
 V 3 Vehicle Speed Sensor
 (Electronically Controlled Transmission)
 V 4 VSV (EVAP)
 V 5 VSV (Vapor Pressure Sensor)

W 1 Washer Motor
 W 2 Water Temp. Sender

G ELECTRICAL WIRING ROUTING

Position of Parts in Instrument Panel

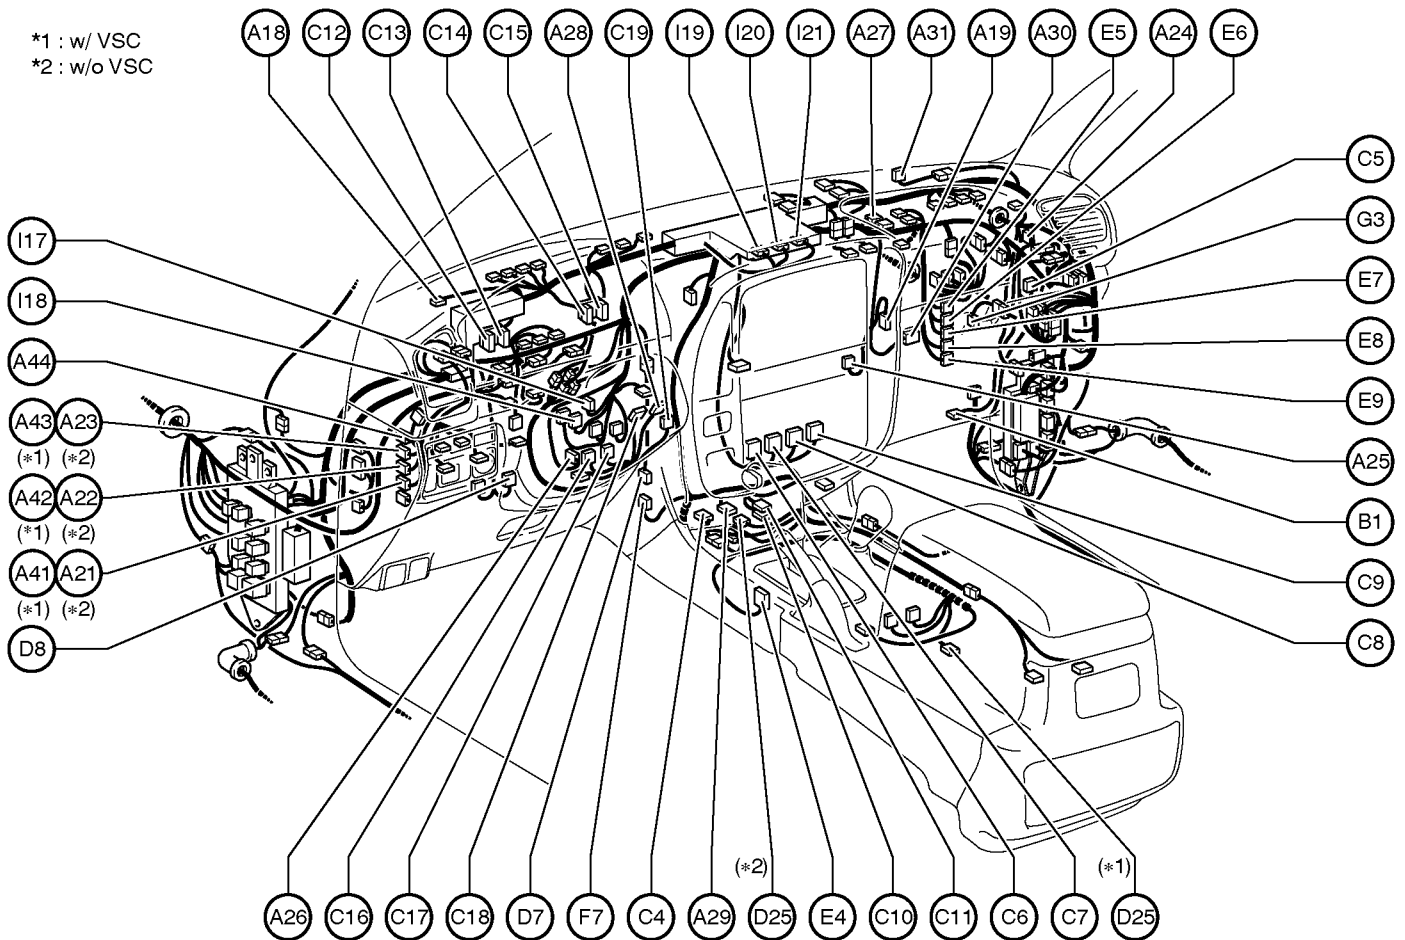

A18 A/C Solar Sensor
 A19 A/C Thermistor
 A21 ABS ECU
 A22 ABS ECU
 A23 ABS ECU
 A24 Air Inlet Control Servo Motor
 A25 Air Mix Control Servo Motor
 A26 Air Vent Mode Control Servo Motor
 A27 Airbag Squib (Front Passenger Airbag Assembly)
 A28 Airbag Squib (Steering Wheel Pad)
 A29 Ashtray Illumination
 A30 Auto Antenna Control Relay
 A31 Automatic Light Control Sensor
 A41 ABS & BA & TRAC & VSC ECU
 A42 ABS & BA & TRAC & VSC ECU
 A43 ABS & BA & TRAC & VSC ECU
 A44 ABS & BA & TRAC & VSC ECU

B 1 Blower Motor Controller

C 4 Center Airbag Sensor Assembly
 C 5 Center Diff. Lock Control Relay
 C 6 Center ECU
 C 7 Center ECU
 C 8 Center ECU
 C 9 Center ECU
 C10 Cigarette Lighter
 C11 Cigarette Lighter Illumination
 C12 Combination Meter
 C13 Combination Meter

C14 Combination Meter
 C15 Combination Meter
 C16 Combination SW
 C17 Combination SW
 C18 Combination SW
 C19 Combination SW

D 7 Data Link Connector 3
 D 8 Daytime Running Light Relay (Main)
 D25 Deceleration Sensor


E 4 Electronically Controlled Transmission Pattern Select SW
 E 5 Engine Control Module
 E 6 Engine Control Module
 E 7 Engine Control Module
 E 8 Engine Control Module
 E 9 Engine Control Module

F 7 Fuel Control SW

G 3 Glove Box Light

I 17 Ignition Key Cylinder Light
 I 18 Ignition SW
 I 19 Instrument ECU
 I 20 Instrument ECU
 I 21 Instrument ECU

Position of Parts in Instrument Panel

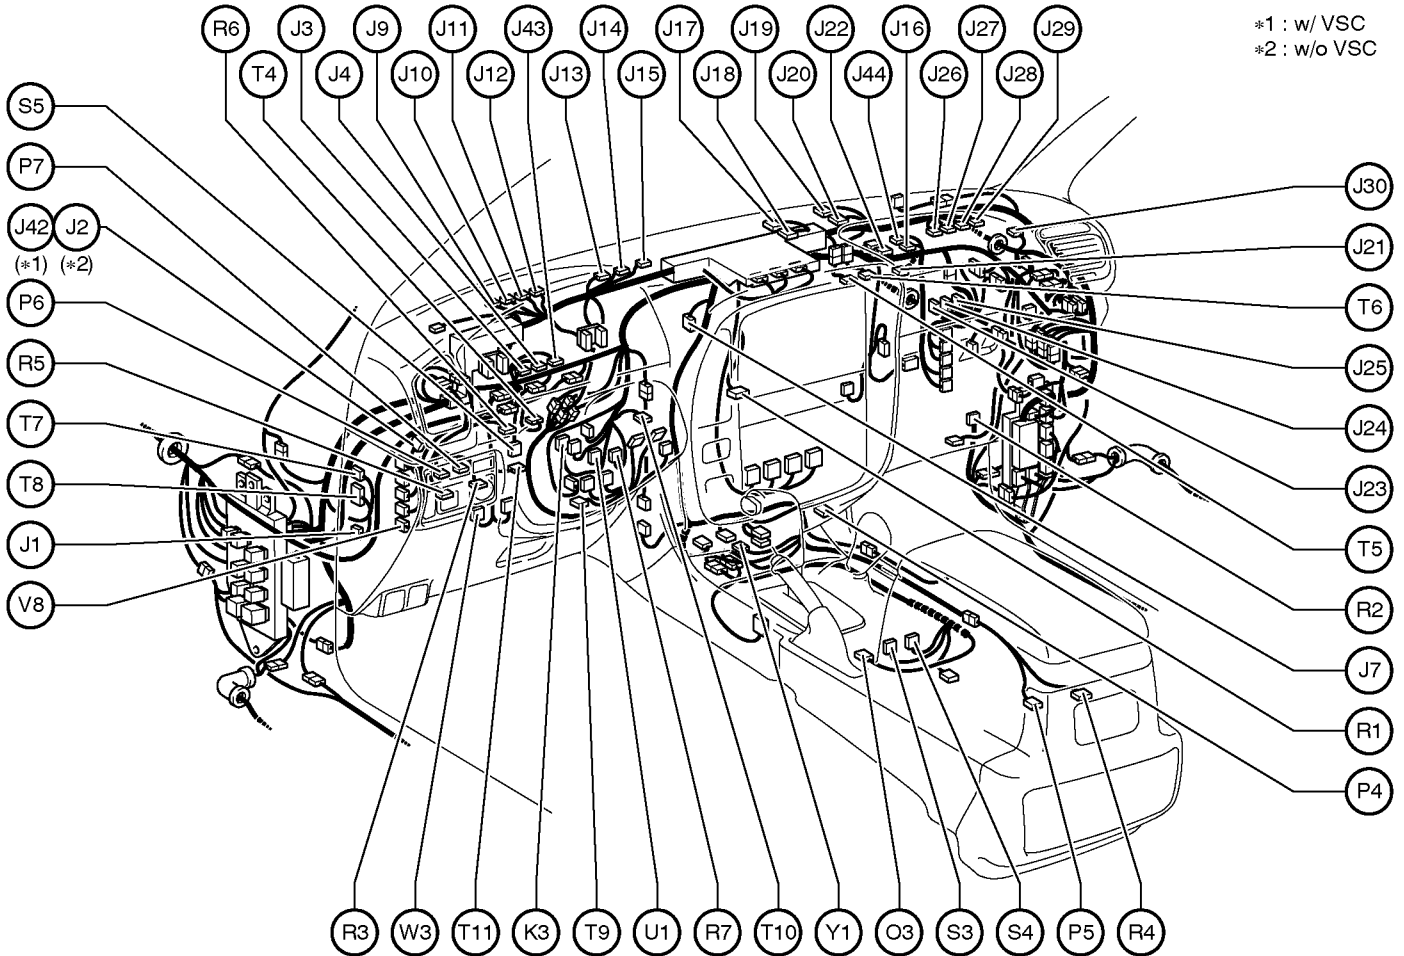

*1 : w/ VSC
*2 : w/o VSC

J 1 Junction Connector
J 2 Junction Connector
J 3 Junction Connector
J 4 Junction Connector
J 7 Junction Connector
J 9 Junction Connector
J 10 Junction Connector
J 11 Junction Connector
J 12 Junction Connector
J 13 Junction Connector
J 14 Junction Connector
J 15 Junction Connector
J 16 Junction Connector
J 17 Junction Connector
J 18 Junction Connector
J 19 Junction Connector
J 20 Junction Connector
J 21 Junction Connector
J 22 Junction Connector
J 23 Junction Connector
J 24 Junction Connector
J 25 Junction Connector
J 26 Junction Connector
J 27 Junction Connector
J 28 Junction Connector
J 29 Junction Connector
J 30 Junction Connector
J 42 Junction Connector
J 43 Junction Connector
J 44 Junction Connector

K 3 Key Interlock Solenoid

O 3 O/D Main SW and Shift Lock Control ECU

P 4 Power Outlet (Front)
P 5 Power Outlet (Rear Console Box)
P 6 Power Quarter Window SW LH
P 7 Power Quarter Window SW RH

R 1 Radio and Player
R 2 Rear Diff. Lock Control ECU
R 3 Rear Diff. Lock SW
R 4 Rear Heater SW
R 5 Remote Control Mirror SW
R 6 Rheostat
R 7 Room Temp. Sensor (Front)

S 3 Seat Heater SW (Driver's Seat)
S 4 Seat Heater SW (Front Passenger's Seat)
S 5 Stop Light SW

T 4 Telescopic Motor
T 5 Theft Deterrent ECU
T 6 Theft Deterrent ECU
T 7 Tilt and Telescopic ECU
T 8 Tilt and Telescopic ECU
T 9 Tilt Motor
T 10 Transponder Key Amplifier
T 11 Turn Signal Flasher

U 1 Unlock Warning SW


V 8 VSC Warning Buzzer

W 3 Wireless Door Lock ECU

Y 1 Yaw Rate Sensor

G ELECTRICAL WIRING ROUTING


Position of Parts in Body

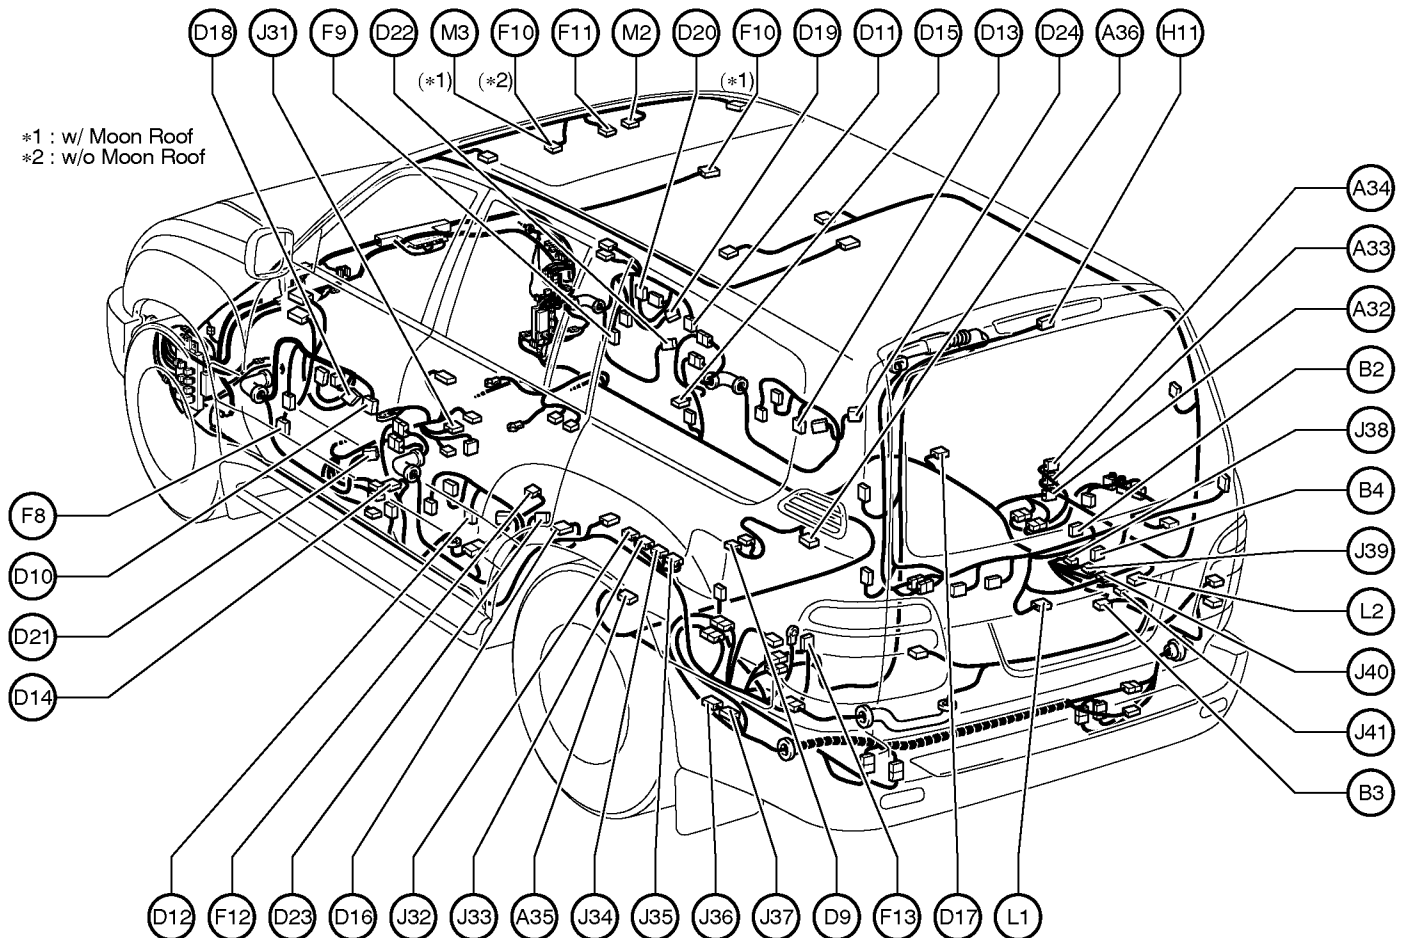

*1 : w/ Moon Roof
*2 : w/o Moon Roof

- | | |
|---|--|
| A32 A/C Amplifier (Rear) | F 8 Front Door Speaker LH |
| A33 A/C Amplifier (Rear) | F 9 Front Door Speaker RH |
| A34 A/C Amplifier (Rear) | F10 Front Interior Light and Rear Personal Light |
| A35 ABS Speed Sensor Rear LH | F11 Front Personal Light |
| A36 ABS Speed Sensor Rear RH | F12 Fuel Pump and Sender |
| | F13 Fuel Pump Control ECU |
| B 2 Back Door Courtesy SW | H11 High Mounted Stop Light |
| B 3 Back Door Key Lock and Unlock SW | J 31 Junction Connector |
| B 4 Back Door Lock Motor and Back DoorUnlock Detection SW | J 32 Junction Connector |
| D 9 Detection SW (Rear Diff. Lock) | J 33 Junction Connector |
| D10 Door Courtesy Light Front LH | J 34 Junction Connector |
| D11 Door Courtesy Light Front RH | J 35 Junction Connector |
| D12 Door Courtesy Light Rear LH | J 36 Junction Connector |
| D13 Door Courtesy Light Rear RH | J 37 Junction Connector |
| D14 Door Courtesy SW Front LH | J 38 Junction Connector |
| D15 Door Courtesy SW Front RH | J 39 Junction Connector |
| D16 Door Courtesy SW Rear LH | J 40 Junction Connector |
| D17 Door Courtesy SW Rear RH | J 41 Junction Connector |
| D18 Door Key Lock and Unlock SW LH | L 1 License Plate Light LH |
| D19 Door Key Lock and Unlock SW RH | L 2 License Plate Light RH |
| D20 Door Lock Control SW RH | M 2 Moon Roof Control ECU |
| D21 Door Lock Motor and Door Unlock Detection SW Front LH | M 3 Moon Roof Control SW |
| D22 Door Lock Motor and Door Unlock Detection SW Front RH | |
| D23 Door Lock Motor and Door Unlock Detection SW Rear LH | |
| D24 Door Lock Motor and Door Unlock Detection SW Rear RH | |

Position of Parts in Body

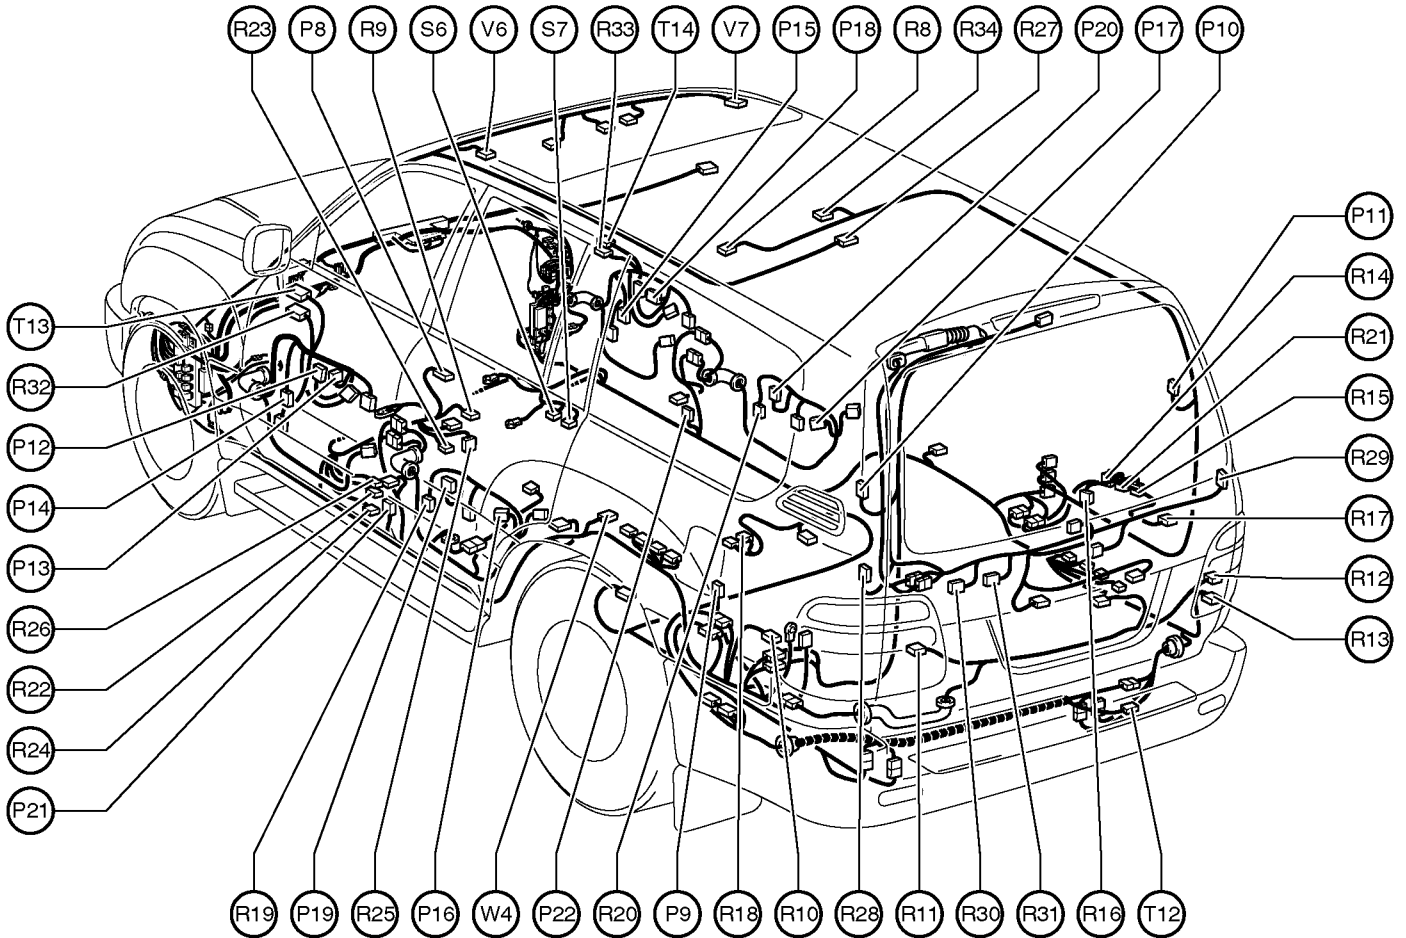

P 8 Parking Brake SW
 P 9 Power Outlet (Luggage Compartment)
 P10 Power Vent Window Motor LH
 P 11 Power Vent Window Motor RH
 P12 Power Window Master SW
 P13 Power Window Master SW
 P14 Power Window Motor Front LH
 P15 Power Window Motor Front RH
 P16 Power Window Motor Rear LH
 P17 Power Window Motor Rear RH
 P18 Power Window SW Front RH
 P19 Power Window SW Rear LH
 P20 Power Window SW Rear RH
 P21 Pretensioner LH
 P22 Pretensioner RH

R20 Rear Door Speaker RH
 R21 Rear Evaporator Temp. Sensor
 R22 Rear Heater Blower Motor
 R23 Rear Heater Blower Resistor
 R24 Rear Heater Fan Relay
 R25 Rear Heater Power Transistor
 R26 Rear Inlet Air Temp. Sensor
 R27 Rear Interior Light
 R28 Rear Window Defogger
 R29 Rear Window Defogger
 R30 Rear Wiper Motor
 R31 Rear Wiper Relay
 R32 Remote Control Mirror LH
 R33 Remote Control Mirror RH
 R34 Room Temp. Sensor (Rear)

R 8 Rear A/C Control SW
 R 9 Rear Air Mix Control Servo Motor
 R10 Rear Combination Light LH
 R11 Rear Combination Light LH
 R12 Rear Combination Light RH
 R13 Rear Combination Light RH
 R14 Rear Cooler Blower Motor
 R15 Rear Cooler Magnetic Valve
 R16 Rear Cooler Power Transistor
 R17 Rear Cooler Relay
 R18 Rear Diff. Lock Motor
 R19 Rear Door Speaker LH

S 6 Stereo Component Amplifier
 S 7 Stereo Component Amplifier


 T 12 Trailer Socket
 T 13 Tweeter LH
 T 14 Tweeter RH

 V 6 Vanity Light LH
 V 7 Vanity Light RH

 W 4 Woofer (Speaker)

G ELECTRICAL WIRING ROUTING

Position of Parts in Seat

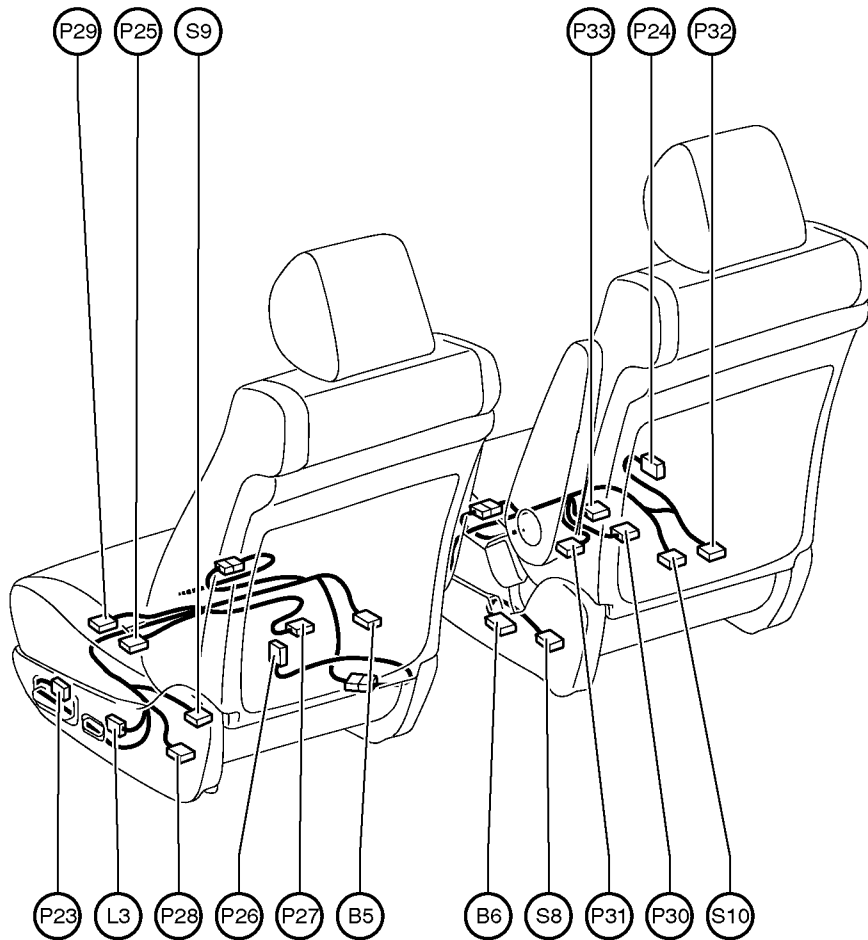

B 5 Buckle SW LH
B 6 Buckle SW RH

L 3 Lumbar Support Control SW (Driver's Seat)

P23 Power Seat Control SW (Driver's Seat)
P24 Power Seat Control SW (Front Passenger's Seat)
P25 Power Seat Motor
(Driver's Seat Front Vertical Control)
P26 Power Seat Motor
(Driver's Seat Lumbar Support Control)
P27 Power Seat Motor
(Driver's Seat Rear Vertical Control)
P28 Power Seat Motor
(Driver's Seat Reclining Control)

P29 Power Seat Motor
(Driver's Seat Slide Control)
P30 Power Seat Motor
(Front Passenger's Seat Front Vertical Control)
P31 Power Seat Motor
(Front Passenger's Seat Rear Vertical Control)
P32 Power Seat Motor
(Front Passenger's Seat Reclining Control)
P33 Power Seat Motor
(Front Passenger's Seat Slide Control)

S 8 Seat Belt Warning Occupant Detection Sensor
S 9 Seat Heater (Driver's Seat)
S10 Seat Heater (Front Passenger's Seat)

