

L PART NUMBER OF CONNECTORS

Code	Part Name	Part Number	Code	Part Name	Part Number
A 1	A/C Ambient Temp. Sensor	90980-11070	B 1	Blower Motor Controller	90980-10910
A 2	A/C Condenser Fan Motor	90980-11237	B 2	Back Door Courtesy SW	90980-10039
A 3	A/C Condenser Fan Relay	90980-10940	B 3	Back Door Key Lock and Unlock SW	90980-11490
A 4	A/C Dual Pressure SW	90980-11149	B 4	Back Door Lock Motor and Back Door Unlock Detection SW	90980-11150
A 5	A/C Magnetic Clutch and Lock Sensor	90980-11016	B 5	Buckle SW LH	90980-11211
A 6	A/C Triple Pressure SW (A/C Dual and Single Pressure SW)	90980-10943	B 6	Buckle SW RH	
A 7	A/T Oil Temp. Sensor	90980-11025	C 1	Camshaft Position Sensor	90980-10947
A 8	ABS Actuator	90980-11151	C 2	Center Diff. Lock Control Motor	90980-11024
A 9	ABS Actuator	90980-10895	C 3	Crankshaft Position Sensor	90980-11162
A10	ABS Actuator	90980-11413	C 4	Center Airbag Sensor Assembly	90980-11872
A11	ABS Actuator	90980-11009	C 5	Center Diff. Lock Control Relay	90980-10801
A12	ABS Speed Sensor Front LH	90980-10941	C 6	Center ECU	90980-11390
A13	ABS Speed Sensor Front RH	90980-11002	C 7	Center ECU	90980-11391
A14	Accel Position Sensor	90980-11150	C 8	Center ECU	90980-11408
A15	Airbag Sensor Front LH	90980-11856	C 9	Center ECU	90980-11392
A16	Airbag Sensor Front RH		C10	Cigarette Lighter	90980-10760
A17	Auto Antenna Motor	90980-11194	C11	Cigarette Lighter Illumination	90980-11148
A18	A/C Solar Sensor	90980-11919	C12	Combination Meter	82824-60060
A19	A/C Thermistor	90980-11918	C13	Combination Meter	82824-60050
A21	ABS ECU	90980-11390	C14	Combination Meter	82824-60060
A22	ABS ECU	90980-11391	C15	Combination Meter	82824-60050
A23	ABS ECU	90980-11424	C16	Combination SW	90980-11672
A24	Air Inlet Control Servo Motor	90980-11165	C17	Combination SW	90980-11581
A25	Air Mix Control Servo Motor	90980-10797	C18	Combination SW	90980-11616
A26	Air Vent Mode Control Servo Motor	90980-11165	C19	Combination SW	90980-11594
A27	Airbag Squib (Front Passenger Airbag Assembly)	90980-11884	D 1	Data Link Connector 1	90980-11195
A28	Airbag Squib (Steering Wheel Pad)	90980-10850	D 2	Daytime Running Light Relay No.3	90980-10939
A29	Ashtray Illumination	90980-10825	D 3	Daytime Running Light Relay No.3	90980-10940
A30	Auto Antenna Control Relay	90980-10819	D 4	Detection SW (Center Diff. Lock)	90980-11250
A31	Automatic Light Control Sensor	90980-11633	D 5	Detection SW (Transfer L Position)	
A32	A/C Amplifier (Rear)	90980-11502	D 6	Detection SW (Transfer Neutral Position)	90980-11025
A33	A/C Amplifier (Rear)	90980-11475	D 7	Data Link Connector 3	90080-98012
A34	A/C Amplifier (Rear)	90980-11497	D 8	Daytime Running Light Relay (Main)	90980-10819
A35	ABS Speed Sensor Rear LH	90980-11073	D 9	Detection SW (Rear Diff. Lock)	90980-11156
A36	ABS Speed Sensor Rear RH		D10	Door Courtesy Light Front LH	90980-11148
A37	ABS & BA & TRAC & VSC Actuator	90980-11413	D11	Door Courtesy Light Front RH	
A38	ABS & BA & TRAC & VSC Actuator	90980-10895	D12	Door Courtesy Light Rear LH	
A39	ABS & BA & TRAC & VSC Actuator	90980-11151	D13	Door Courtesy Light Rear RH	
A40	ABS & BA & TRAC & VSC Actuator	90980-11009	D14	Door Courtesy SW Front LH	90980-10871
A41	ABS & BA & TRAC & VSC ECU	90980-11935	D15	Door Courtesy SW Front RH	
A42	ABS & BA & TRAC & VSC ECU	90980-11476	D16	Door Courtesy SW Rear LH	
A43	ABS & BA & TRAC & VSC ECU	90980-11637	D17	Door Courtesy SW Rear RH	
A44	ABS & BA & TRAC & VSC ECU	90980-11638			

Note: Not all of the above part numbers of the connector are established for the supply. In case of ordering a connector or terminal with wire, please confirm in advance if there is supply for it using "Parts Catalog News" (published by Parts Engineering Administration Dept.).

Code	Part Name	Part Number	Code	Part Name	Part Number
D18	Door Key Lock and Unlock SW LH	90980-11170	H 8	Heated Oxygen Sensor (Bank 2 Sensor 2)	90980-11028
D19	Door Key Lock and Unlock SW RH		H 9	Horn LH	90980-10619
D20	Door Lock Control SW RH	90980-10601	H10	Horn RH	
D21	Door Lock Motor and Door Unlock Detection SW Front LH	90980-11150	H11	High Mounted Stop Light	90980-11211
D22	Door Lock Motor and Door Unlock Detection SW Front RH		I 1	Ignition Coil and Igniter No.1	90980-11885
D23	Door Lock Motor and Door Unlock Detection SW Rear LH		I 2	Ignition Coil and Igniter No.2	
D24	Door Lock Motor and Door Unlock Detection SW Rear RH		I 3	Ignition Coil and Igniter No.3	
D25	Deceleration Sensor (w/ VSC)	90980-11182	I 4	Ignition Coil and Igniter No.4	
	Deceleration Sensor (w/o VSC)	90980-10845	I 5	Ignition Coil and Igniter No.5	
E 1	Electronically Controlled Transmission Solenoid	90980-10891	I 6	Ignition Coil and Igniter No.6	
E 2	Engine Coolant Temp. Sensor	90980-10737	I 7	Ignition Coil and Igniter No.7	
E 3	Engine Hood Courtesy SW	90980-11003	I 8	Ignition Coil and Igniter No.8	90980-11153
E 4	Electronically Controlled Transmission Pattern Select SW	90980-10933	I 9	Injector No.1	
E 5	Engine Control Module	90980-11421	I10	Injector No.2	
E 6	Engine Control Module	90980-11476	I11	Injector No.3	
E 7	Engine Control Module	90980-11586	I12	Injector No.4	
E 8	Engine Control Module	90980-11637	I13	Injector No.5	
E 9	Engine Control Module	90980-11638	I14	Injector No.6	
F 1	Front Fog Light LH	90980-11660	I15	Injector No.7	90980-10906
F 2	Front Fog Light RH		I16	Injector No.8	
F 3	Front Turn Signal and Side Marker Light LH	90980-11020	I17	Ignition Key Cylinder Light	90980-11615
F 4	Front Turn Signal and Side Marker Light RH		I18	Ignition SW	90980-11927
F 5	Front Wiper Motor	90980-11599	I19	Instrument ECU	90980-11914
F 6	Fusible Link Block	82620-60010	I20	Instrument ECU	90980-11925
F 7	Fuel Control SW	90980-10860	I21	Instrument ECU	-
F 8	Front Door Speaker LH	90980-10935	J 1	Junction Connector	
F 9	Front Door Speaker RH		J 2	Junction Connector	
F10	Front Interior Light and Rear Personal Light	90980-10365	J 3	Junction Connector	
F11	Front Personal Light	90980-10935	J 4	Junction Connector	90980-11927
F12	Fuel Pump and Sender	90980-11077	J 7	Junction Connector	
F13	Fuel Pump Control ECU	90980-10862	J 9	Junction Connector	
G 1	Generator	90980-11349	J10	Junction Connector	
G 2	Generator	90980-09212	J11	Junction Connector	90980-11925
G 3	Glove Box Light	90980-11098	J12	Junction Connector	
H 1	Headlight LH (High)	90980-11659	J13	Junction Connector	
H 2	Headlight LH (Low)	90980-11660	J14	Junction Connector	
H 3	Headlight RH (High)	90980-11659	J15	Junction Connector	-
H 4	Headlight RH (Low)	90980-11660	J16	Junction Connector	
H 5	Heated Oxygen Sensor (Bank 1 Sensor 1)	90980-10869	J17	Junction Connector	
H 6	Heated Oxygen Sensor (Bank 1 Sensor 2)	90980-11028	J18	Junction Connector	
H 7	Heated Oxygen Sensor (Bank 2 Sensor 1)	90980-10869	J19	Junction Connector	90980-11927
			J20	Junction Connector	

L PART NUMBER OF CONNECTORS

Code	Part Name	Part Number	Code	Part Name	Part Number
J21	Junction Connector	-	P 9	Power Outlet (Luggage Compartment)	90980-10860
J22	Junction Connector		P10	Power Vent Window Motor LH	
J23	Junction Connector		P11	Power Vent Window Motor RH	
J24	Junction Connector		P12	Power Window Master SW	90980-11791
J25	Junction Connector	90980-11925	P13	Power Window Master SW	90980-11165
J26	Junction Connector		P14	Power Window Motor Front LH	90980-11599
J27	Junction Connector		P15	Power Window Motor Front RH	90980-11003
J28	Junction Connector		P16	Power Window Motor Rear LH	
J29	Junction Connector		P17	Power Window Motor Rear RH	
J30	Junction Connector	-	P18	Power Window SW Front RH	90980-10789
J31	Junction Connector		P19	Power Window SW Rear LH	
J32	Junction Connector		P20	Power Window SW Rear RH	
J33	Junction Connector		P21	Pretensioner LH	90980-11862
J34	Junction Connector		P22	Pretensioner RH	
J35	Junction Connector		P23	Power Seat Control SW (Driver's Seat)	90980-10803
J36	Junction Connector		P24	Power Seat Control SW (Front Passenger's Seat)	
J37	Junction Connector		P25	Power Seat Motor (Driver's Seat Front Vertical Control)	90980-10825
J38	Junction Connector		P26	Power Seat Motor (Driver's Seat Lumbar Support Control)	
J39	Junction Connector		P27	Power Seat Motor (Driver's Seat Rear Vertical Control)	
J40	Junction Connector		P28	Power Seat Motor (Driver's Seat Reclining Control)	
J41	Junction Connector		P29	Power Seat Motor (Driver's Seat Slide Control)	
J42	Junction Connector		P30	Power Seat Motor (Front Passenger's Seat Front Vertical Control)	
J43	Junction Connector	82824-10020	P31	Power Seat Motor (Front Passenger's Seat Rear Vertical Control)	
J44	Junction Connector	82824-10010	P32	Power Seat Motor (Front Passenger's Seat Reclining Control)	
K 1	Knock Sensor 1	90980-11166	P33	Power Seat Motor (Front Passenger's Seat Slide Control)	
K 2	Knock Sensor 2		R 1	Radio and Player	90980-12038
K 3	Key Interlock Solenoid	90980-10825	R 2	Rear Diff. Lock Control ECU	90980-10801
L 1	License Plate Light LH	90980-11148	R 3	Rear Diff. Lock SW	90980-10631
L 2	License Plate Light RH		R 4	Rear Heater SW	90980-10797
L 3	Lumbar Support Control SW (Driver's Seat)	90980-10601	R 5	Remote Control Mirror SW	90980-11657
M 1	Mass Air Flow Meter	90980-11317	R 6	Rheostat	90980-10908
M 2	Moon Roof Control ECU	90980-10997	R 7	Room Temp. Sensor (Front)	90980-11918
M 3	Moon Roof Control SW	90980-10789	R 8	Rear A/C Control SW	90980-11503
M 4	Master Cylinder Pressure Sensor	90980-10845	R 9	Rear Air Mix Control Servo Motor	90980-11319
N 1	Noise Filter (Ignition)	90980-10843	R10	Rear Combination Light LH	90980-11587
O 1	O/D Direct Clutch Speed Sensor	90980-11156	R11	Rear Combination Light LH	90908-10908
O 2	Oil Pressure Sender	90980-11363	R12	Rear Combination Light RH	
O 3	O/D Main SW and Shift Lock Control ECU	90980-11614	R13	Rear Combination Light RH	90908-11587
P 1	Park/Neutral Position SW, A/T Indicator Light SW and Back-Up Light SW	90980-11784	R14	Rear Cooler Blower Motor	90980-10214
P 2	Parking Light LH	90980-11156	R15	Rear Cooler Magnetic Valve	90980-10860
P 3	Parking Light RH				
P 4	Power Outlet (Front)	90980-10760			
P 5	Power Outlet (Rear Console Box)	90980-10860			
P 6	Power Quarter Window SW LH	90980-10797			
P 7	Power Quarter Window SW RH	90980-10996			
P 8	Parking Brake SW	90980-10871			

Note: Not all of the above part numbers of the connector are established for the supply. In case of ordering a connector or terminal with wire, please confirm in advance if there is supply for it using "Parts Catalog News" (published by Parts Engineering Administration Dept.).

Code	Part Name	Part Number	Code	Part Name	Part Number
R16	Rear Cooler Power Transistor	90980-10171	T 1	Theft Deterrent Horn	90980-10619
R17	Rear Cooler Relay		T 2	Throttle Control Motor	90980-10942
R18	Rear Diff. Lock Motor	90980-11194	T 3	Throttle Position Sensor	90980-11037
R19	Rear Door Speaker LH	90980-10935	T 4	Telescopic Motor	90980-10799
R20	Rear Door Speaker RH		T 5	Theft Deterrent ECU	90980-10765
R21	Rear Evaporator Temp. Sensor	90980-11918	T 6	Theft Deterrent ECU	90980-10973
R22	Rear Heater Blower Motor	90980-10860	T 7	Tilt and Telescopic ECU	90980-10799
R23	Rear Heater Blower Resistor	90980-10916	T 8	Tilt and Telescopic ECU	90980-10848
R24	Rear Heater Fan Relay	90980-10171	T 9	Tilt Motor	90980-10799
R25	Rear Heater Power Transistor		T10	Transponder Key Amplifier	90980-10933
R26	Rear Inlet Air Temp. Sensor	90980-11369	T11	Turn Signal Flasher	90980-10799
R27	Rear Interior Light	90980-10935	T12	Trailer Socket	90980-10988
R28	Rear Window Defogger	90980-11097	T13	Tweeter LH	90980-11300
R29	Rear Window Defogger		T14	Tweeter RH	
R30	Rear Wiper Motor	90980-10795	U 1	Unlock Warning SW	90980-10860
R31	Rear Wiper Relay	90980-10797	V 1	Vapor Pressure Sensor	90980-11143
R32	Remote Control Mirror LH	90980-11573	V 2	Vehicle Speed Sensor (Combination Meter)	
R33	Remote Control Mirror RH		V 3	Vehicle Speed Sensor (Electronically Controlled Transmission)	90980-11156
R34	Room Temp. Sensor (Rear)	90980-11918	V 4	VSV (EVAP)	
S 1	Starter	90980-11400	V 5	VSV (Vapor Pressure Sensor)	
S 2	Starter	90980-09585	V 6	Vanity Light LH	90980-11369
S 3	Seat Heater SW (Driver's Seat)	90980-10797	V 7	Vanity Light RH	
S 4	Seat Heater SW (Front Passenger's Seat)	90980-10996	V 8	VSC Warning Buzzer	90980-10906
S 5	Stop Light SW	90980-11118	W 1	Washer Motor	90980-11294
S 6	Stereo Component Amplifier	90980-10848	W 2	Water Temp. Sender	90980-11428
S 7	Stereo Component Amplifier	90980-10807	W 3	Wireless Door Lock ECU	90980-11264
S 8	Seat Belt Warning Occupant Detection Sensor	90980-10860	W 4	Woofer (Speaker)	90980-10795
S 9	Seat Heater (Driver's Seat)	90980-10907	Y 1	Yaw Rate Sensor	90980-11904
S10	Seat Heater (Front Passenger's Seat)				