

6. Screen cannot be dimmed in night time.

INSPECTION PROCEDURE

- | | |
|----------|---|
| 1 | Check if the screen is dimmed at night. (With the light control switch ON), do all screens except the navigation screen appear in Night Mode?) |
|----------|---|

NG

Check the light control switch.

OK

- | | |
|----------|---------------------------------|
| 2 | Check the multi display. |
|----------|---------------------------------|

CHECK:

Check terminal TAIL.

OK:

TAIL: See "Multi display" of "TERMINAL OF ECU".

NG

Replace or repair wire harness.

OK

- | | |
|----------|---------------------------------|
| 3 | Check the multi display. |
|----------|---------------------------------|

PREPARATION:

Disconnect the multi display connector.

CHECK:

Check voltage terminals +B.

OK:

+B: 10 – 14 V

CHECK:

Check voltage terminal ACC when turn ignition switch ACC or ON position.

OK:

ACC: 10 – 14 V

CHECK:

 
Check continuity terminal GND.

OK:

GND: Continuity

NG

Replace or repair wire harness.

A button with a shield-like shape, containing the text "OK".

OK

Replace the multi display.