


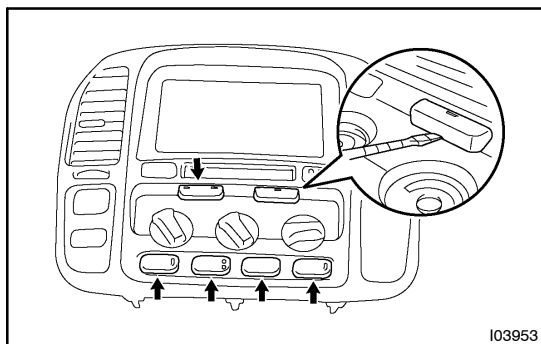

DISASSEMBLY


1. w/o Navigation system:

DISASSEMBLE INTEGRATION PANEL


- (a) Remove the knob.
 - (1) Pull out the dial knobs.
 - (2) Using a screwdriver, pull out the switch knobs.

HINT:


Tape the screwdriver tip before use.

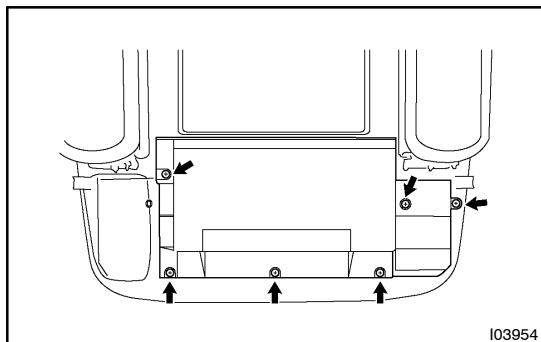

- (b) Remove the A/C amplifier.
 - (1) Remove the 6 screws and cover.

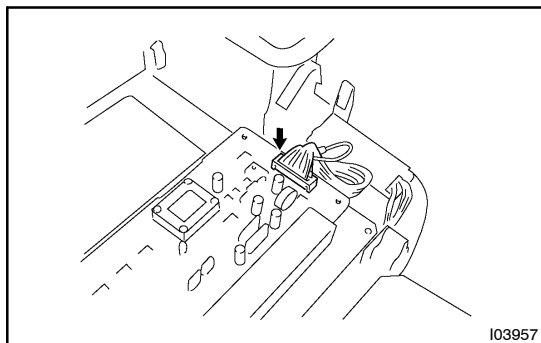


- (2) Disconnect the connector and remove the amplifier.

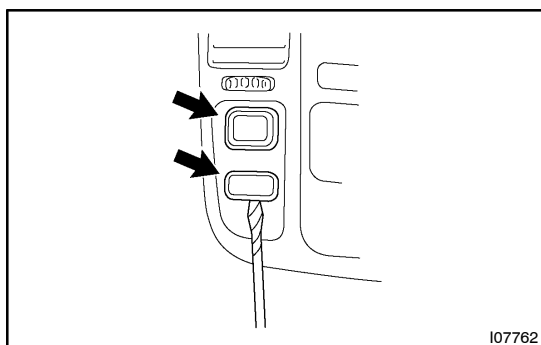


- (c) Remove the diff lock and hazard switch
 - (1) Using a screwdriver, pull out the switch knobs.

HINT:


Tape the screwdriver tip before use.

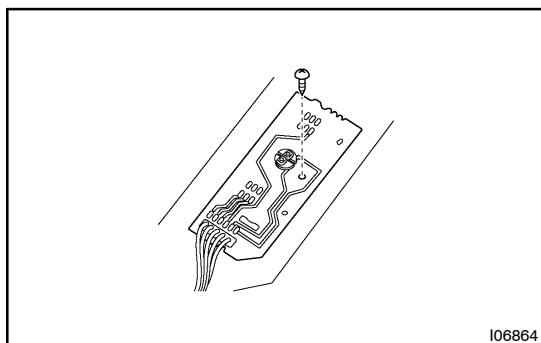


- (2) Remove the screw and switch.
- (3) Using a screwdriver, turn the bulb to the left and pull out the bulb.

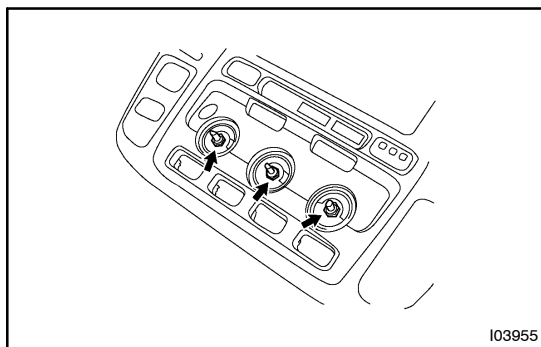


- (d) Remove the heater control
 (1) Remove the 3 nuts from the control switches.

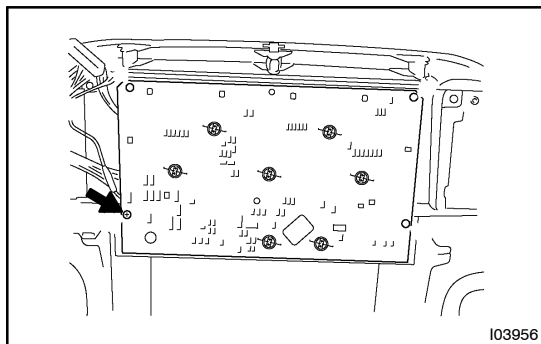


- (2) Remove the screw and heater control ,then disconnect the connectors.

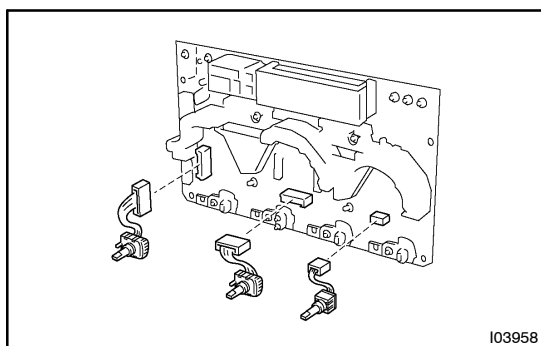

- (e) Remove the control switches.
 Disconnect the connectors and remove the switches.
 (f) Remove the bulbs.
 Using a screw driver, turn the bulb to the left and pull out the bulb.

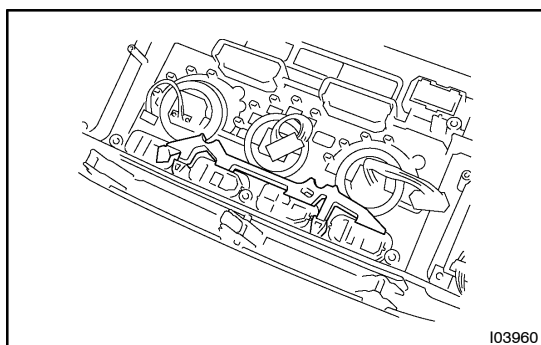

- (g) Remove the heater control lens.

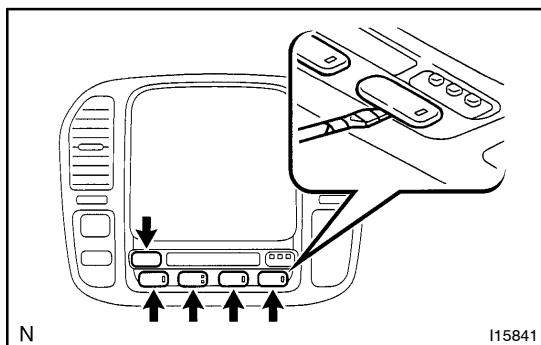


2. w/ Navigation system: DISASSEMBLE INTEGRATION PANEL


- (a) Remove the knob.
 (1) Pull out the dial knobs.
 (2) Using a screwdriver, pull out the switch knobs.

HINT:

Tape the screwdriver tip before use.

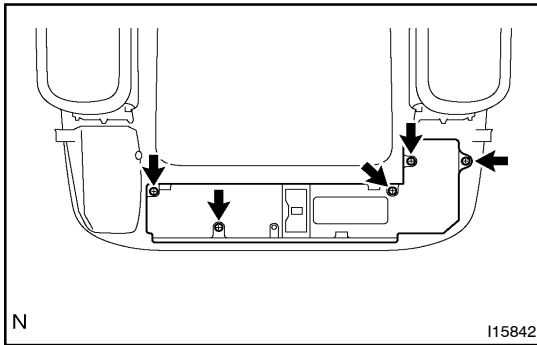


- (b) Remove the A/C amplifier.
- (1) Remove the 5 screws and cover.
 - (2) Disconnect the connector and remove the amplifier.

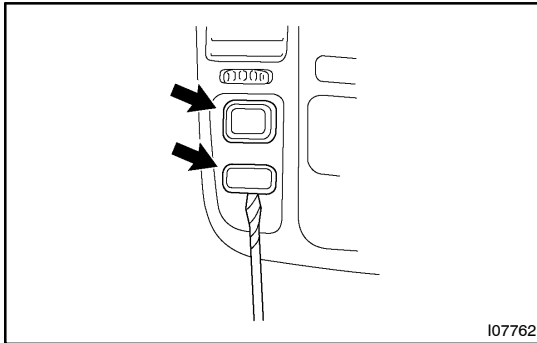

- (c) Remove the diff lock and hazard switch
- (1) Using a screwdriver, pull out the switch knobs.

HINT:

Tape the screwdriver tip before use.

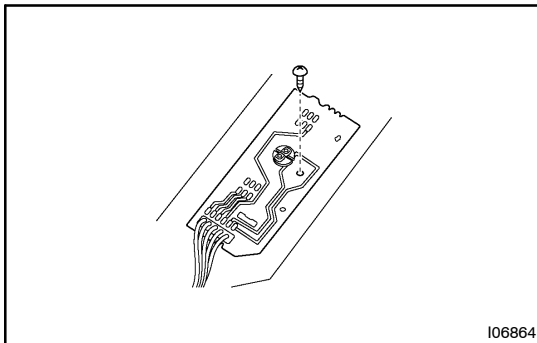

- (2) Remove the screw and switch.
- (3) Using a screwdriver, turn the bulb to the left and pull out the bulb.