



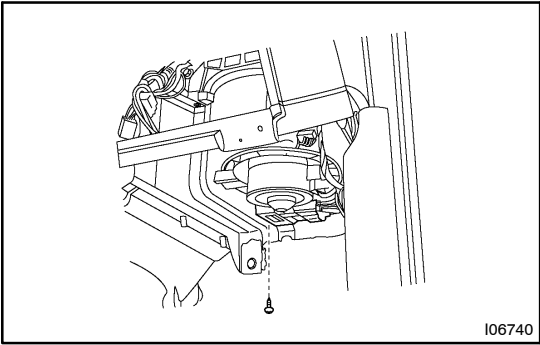

BLOWER MOTOR CONTROL RELAY INSPECTION

AC1LH-02

- 1. REMOVE BLOWER MOTOR CONTROL RELAY**
- (a) Disconnect the connectors.
 - (b) Remove the screw and blower motor control relay.

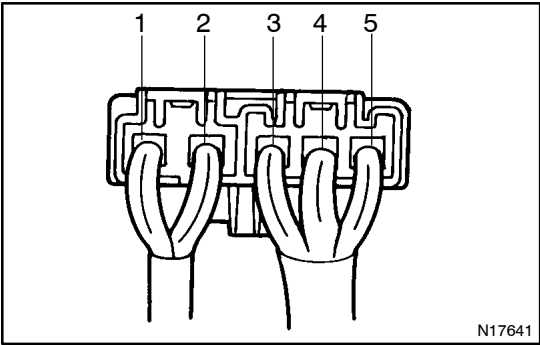

- 2. INSPECT BLOWER MOTOR CONTROL RELAY**
- Connect the connector to the blower motor control relay and inspect the wire harness side connector from the back side as shown in the chart.
- Test condition:
- Turn ignition switch to ON

Tester connection	Condition	Specified condition
1 – Ground	Constant	Continuity
2 – Ground	Blower speed control switch at "LO" position	Approx. 3.5 V
	Blower speed control switch at "M1" position	Approx. 2.2 V
3 – Ground	Operate blower motor	Battery positive voltage
	Blower speed control switch at "OFF" position	No voltage
4 – 5	Blower speed control switch at "LO" position	Approx. 3.6 V
	Blower speed control switch at "M2" position	Approx. 8.3 V
	Blower speed control switch at "HI" position	Approx. 13.0 V

If circuit is not as specified, replace the relay.