

REMOVAL

1. DISCHARGE REFRIGERANT FROM REFRIGERATION SYSTEM

HINT:

At the time of installation, please refer to the following item.

Evacuate air from refrigeration system.

Charge system with refrigerant and inspect for leakage of refrigerant.

Specified amount:

Single A/C:


650 ± 50 g (22.93 ± 1.76 oz.)

Dual A/C:

1,050 ± 50 g (37.03 ± 1.76 oz.)


2. DISCONNECT LIQUID AND SUCTION TUBES FROM FRONT COOLING UNIT (See page AC-25)

3. REMOVE INSTRUMENT PANEL (See page BO-92)

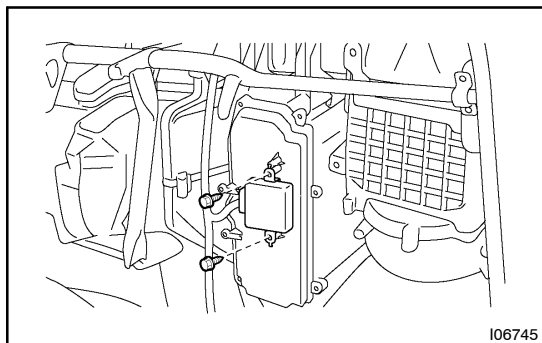

4. REMOVE ANTENNA RELAY

- (a) Disconnect the connector.
- (b) Remove the 2 screws and antenna relay.

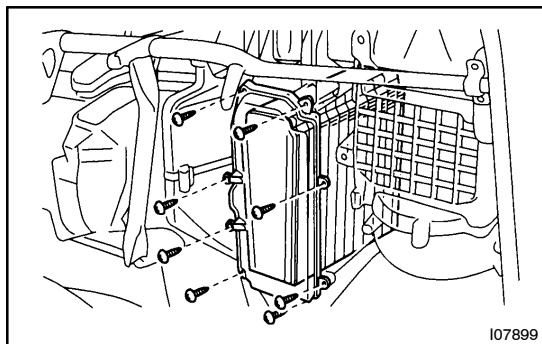

5. REMOVE EVAPORATOR

- (a) Disconnect the connector.
- (b) Disconnect the connector clamp.
- (c) Remove the 8 screws and No. 1 cooler cover.
- (d) Pull out the evaporator.