


REMOVAL

1. DRAIN ENGINE COOLANT FROM RADIATOR


HINT:

It is not necessary to drain out all coolant.

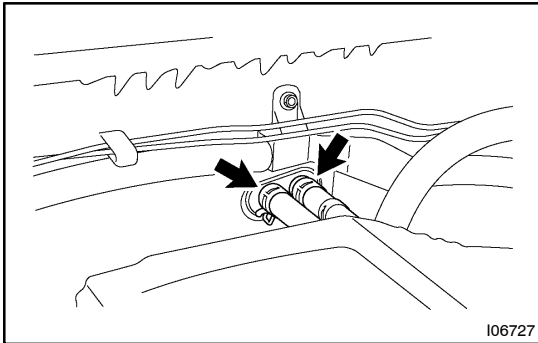

2. DISCONNECT WATER HOSES FROM HEATER RADIATOR PIPES

- (a) Using pliers, grip the claws of the hose clip and slide the clip along the hose.
- (b) Disconnect the water hoses from heater radiator pipes.

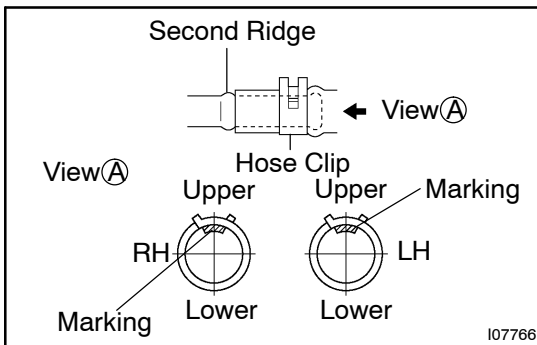


HINT:

At the time of installation , please refer to the following items.

- Push the water hose onto the heater radiator pipe as far as second ridge on the pipe.
- Install a hose clip in the position as shown in the illustration.


3. REMOVE INSTRUMENT PANEL AND REINFORCEMENT (See page [BO-92](#))

4. REMOVE FRONT COOLING UNIT (See page [AC-25](#))

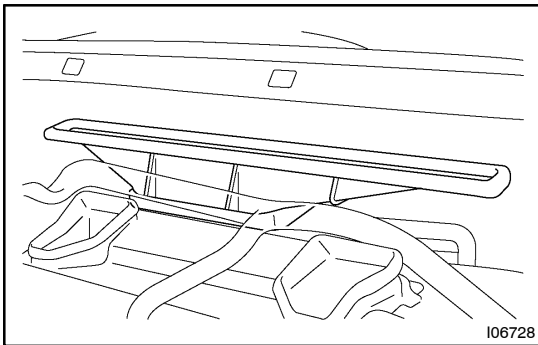

5. REMOVE HEATER UNIT

- (a) Remove the lower defroster nozzle.

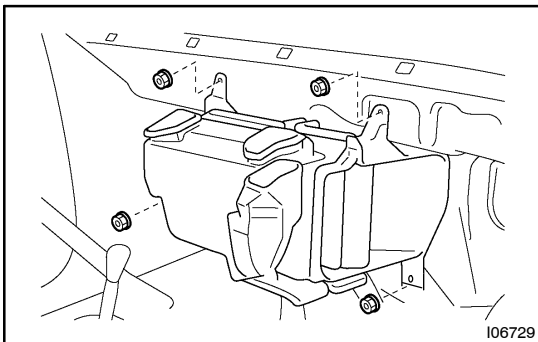

- (b) Disconnect the connector.
- (c) Remove the 4 nuts and heater unit.