


# HEATER MAIN RELAY INSPECTION


AC1LV-03

1. REMOVE FRONT DOOR SCUFF PLATE RH
2. REMOVE COWL SIDE TRIM RH

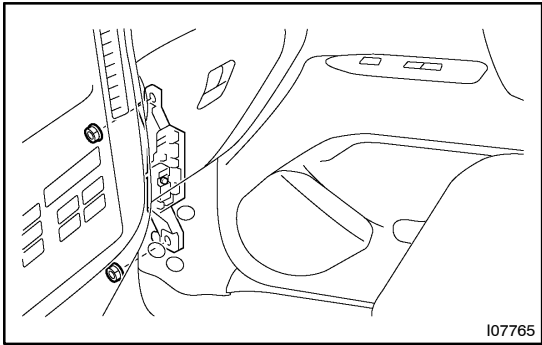

I07765


3. REMOVE HEATER MAIN RELAY
  - (a) Remove the 2 No. 3 junction block set nuts.
  - (b) Loosen the bolt and disconnect the connector.
  - (c) Pull the junction block.

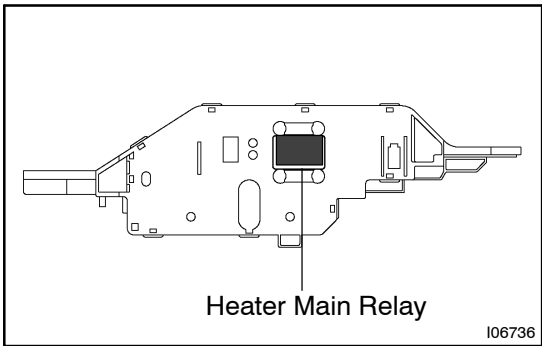

Heater Main Relay

I06736

- (d) Remove the heater main relay from junction block.

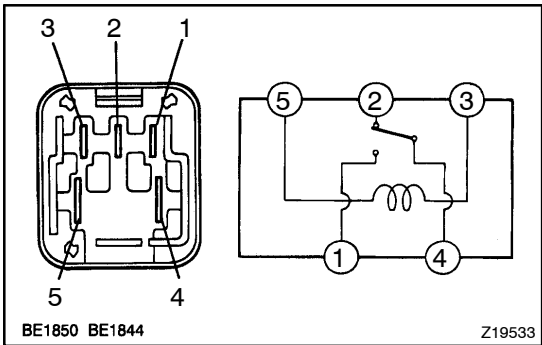

BE1850 BE1844

Z19533

## 4. INSPECT HEATER MAIN RELAY CONTINUITY

| Condition                           | Tester connection | Specified condition |
|-------------------------------------|-------------------|---------------------|
| Constant                            | 2 - 4<br>3 - 5    | Continuity          |
| Apply B+ between terminals 3 and 5. | 1 - 2             | Continuity          |

If continuity is not as specified, replace the relay.

5. INSTALL HEATER MAIN RELAY TO NO. 3 JUNCTION BLOCK
6. INSTALL 2 NO. 3 JUNCTION BLOCK SET NUTS
7. INSTALL COWL SIDE TRIM RH
8. INSTALL FRONT DOOR SCUFF PLATE RH