



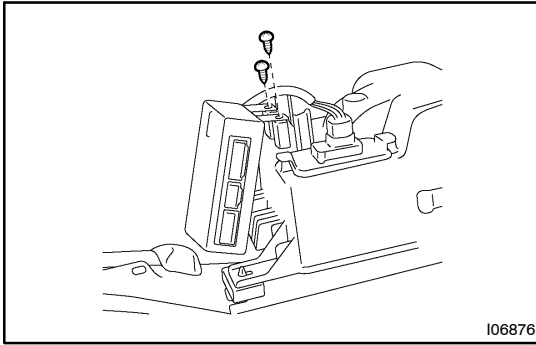

DISASSEMBLY


1. REMOVE A/C AMPLIFIER

Remove the 2 screws and A/C amplifier.

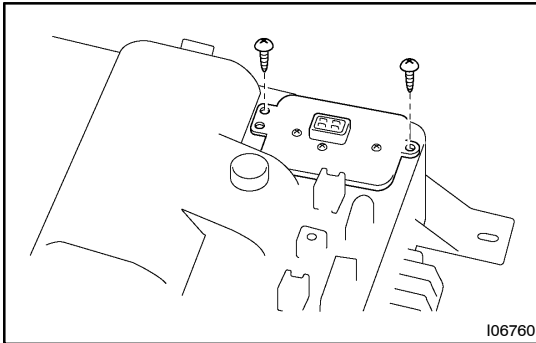


2. REMOVE POWER TRANSISTOR

- (a) Disconnect the connector.
- (b) Remove the 2 screws and power transistor.

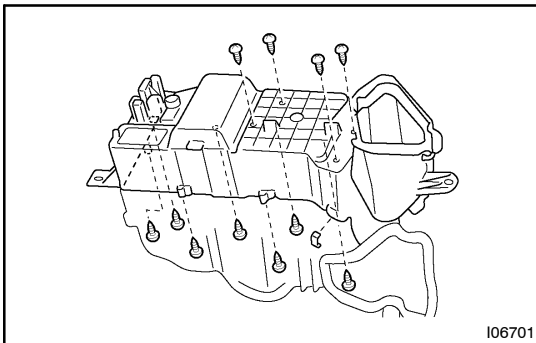


3. REMOVE BLOWER CASE

- (a) Remove the wire harness.
- (b) Remove the 11 screws, 3 holding springs and separate the cooling unit cases.
- (c) Disconnect the connector.
- (d) Remove the blower case.

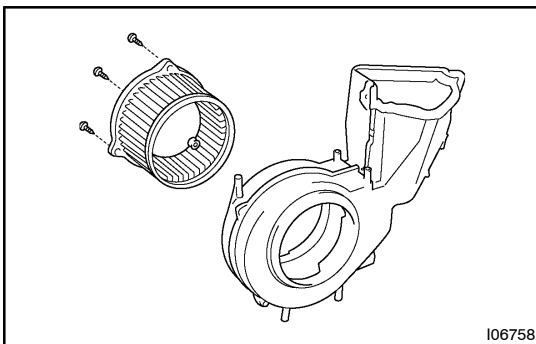


4. REMOVE BLOWER MOTOR

Remove the 3 screws and blower motor.

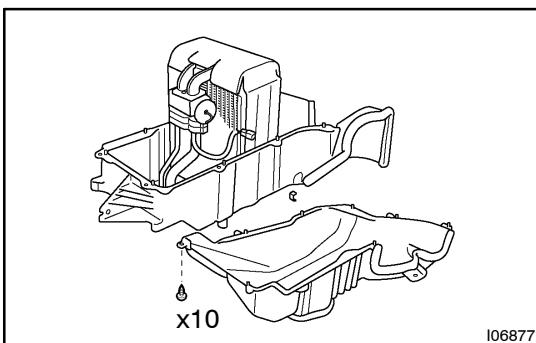


5. REMOVE EVAPORATOR

- (a) Disconnect the 2 connector clamps.
- (b) Remove the 10 screws, 2 holding springs and separate the cooling unit cases.

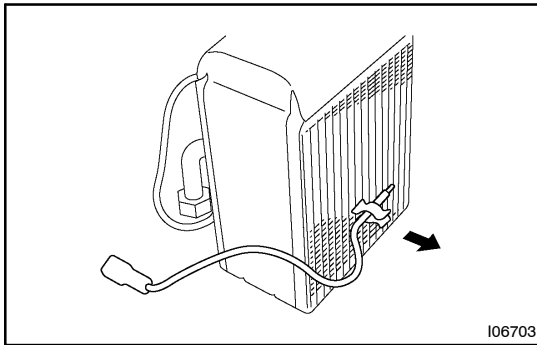

I06703

- (c) Pull out the thermistor from evaporator.

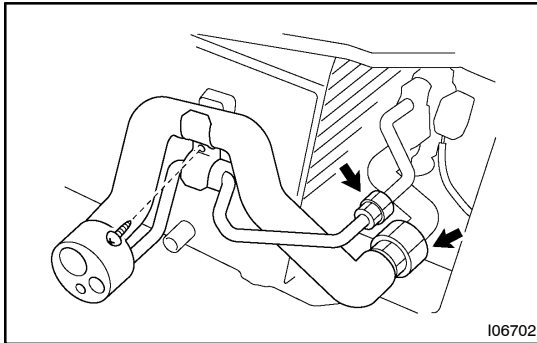

I06702

- (d) Remove the screw and piping clamp.
 (e) Loosen the 2 nuts and remove the tube and accessory.

Torque:

Liquid line: 14 N·m (140 kgf·cm, 10 ft·lbf)


Suction line: 32 N·m (330 kgf·cm, 24 ft·lbf)

NOTICE:

Cap the open fittings immediately to keep moisture or dirt out of the system.

HINT:

At the time of reassembly, please refer to the following item.
 Lubricate 2 new O-rings with compressor oil and install them to the tubes.

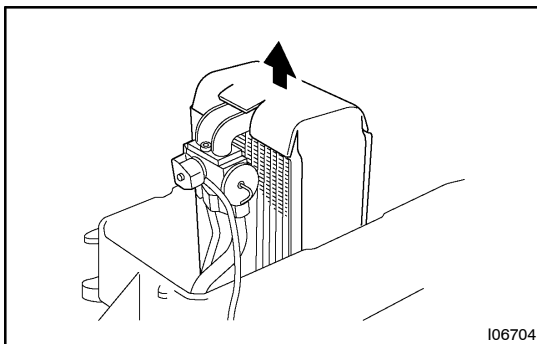

I06704


- (f) Remove the evaporator

HINT:

At the time of reassembly, please refer to the following item.
 If evaporator was replaced, add compressor oil to new evaporator.

Add 40 cc: (1.4 fl.oz.)

Compressor oil: ND-OIL 8 or equivalent

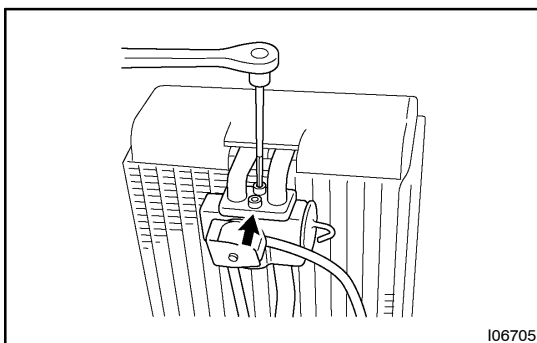

I06705

6. REMOVE EXPANSION VALVE

Using a hexagon wrench (5.0 mm, 0.20 in.), remove the 2 bolts and separate the expansion valve and evaporator.

Torque: 5.4 N·m (55 kgf·cm, 48 in·lbf)

HINT:

At the time of reassembly, please refer to the following item.
 Lubricate 4 new O-rings with compressor oil and install them to the tubes.