


REMOVAL


1. REMOVE RADIATOR GRILLE

- Remove the 3 screws.
- Using a screwdriver, remove the 2 clips.
- Remove the radiator grille.

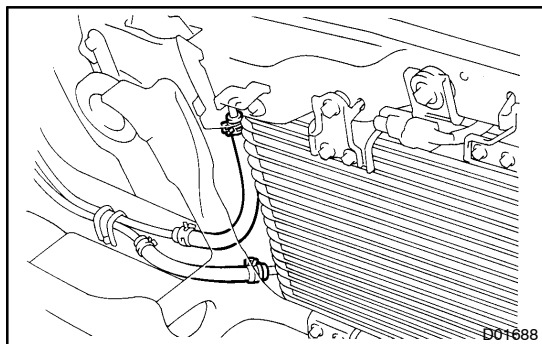


2. REMOVE OIL COOLER


- Loosen the 2 clips and disconnect the 2 hoses.

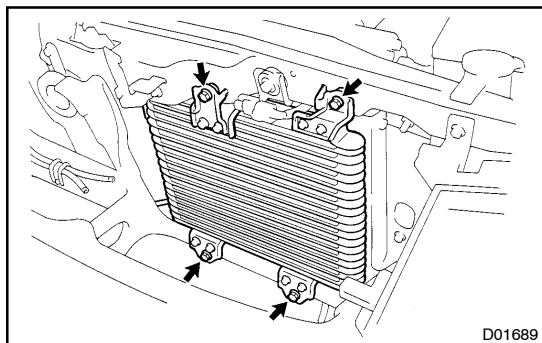

- Remove the 4 bolts and oil cooler.
Torque: 11.5 N·m (120 kgf·cm, 8 ft·lbf)

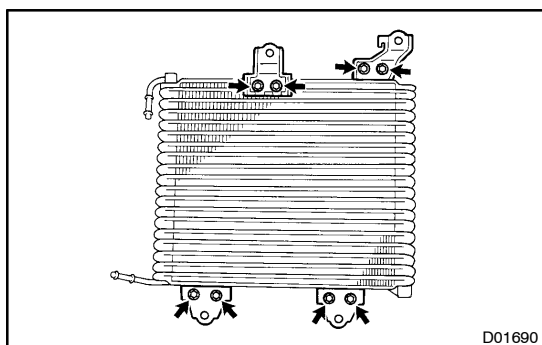


- Remove the 8 bolts, 2 oil cooler brackets and 2 stays.
Torque: 4.9 N·m (50 kgf·cm, 43 in·lbf)

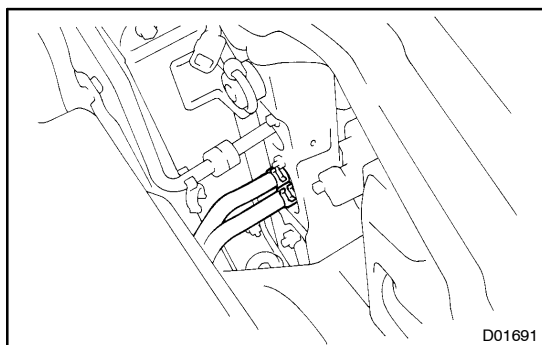

3. REMOVE OIL COOLER PIPE BRACKET

- Loosen the 2 clips and disconnect the 2 hoses.

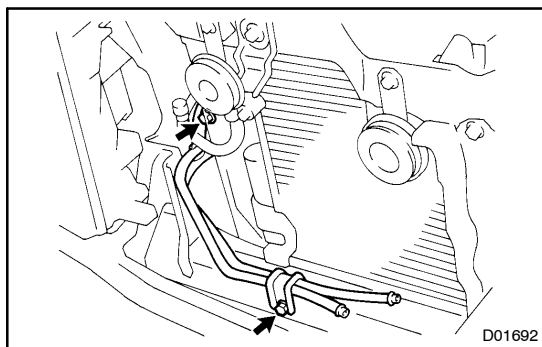

- (b) Remove the 2 bolts and oil cooler pipe bracket.
Torque: 5.0 N·m (55 kgf·cm, 48 in·lbf)