


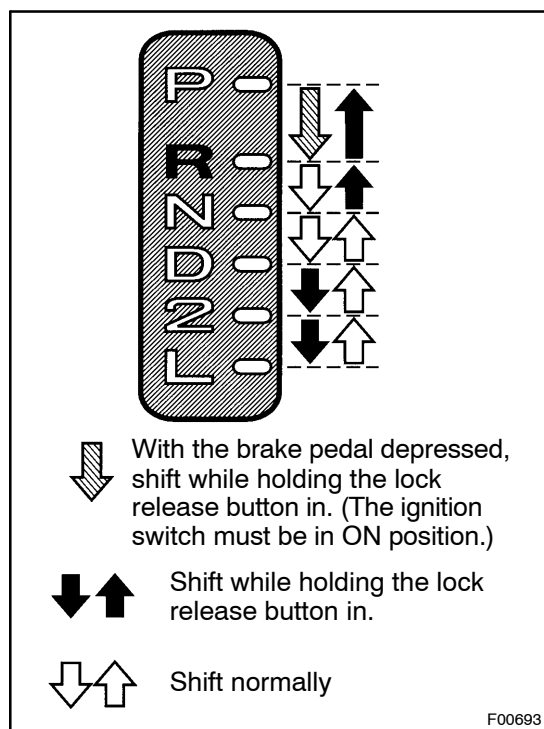

## INSTALLATION

Installation is in the reverse order of removal (See page [AT-21](#)).

HINT:

After installation, inspect shift lever operation.

- When shifting it to each position, make sure that the shifting lever moves smoothly, can be moderately operated and the position indicator displays correctly.

**Positions which can be operated without pressing the shift lever knob button**

**R → N → D, L → 2 → D → N**

**Positions which can be operated only with pressing the shift lever knob button**

**D → 2 → L, N → R → P**

**Positions which can be operated only with pressing the shift lever knob button, ignition switch ON and brake pedal depressed**

**P → R**

- When starting the engine, make sure that the vehicle moves forward when shifting from N to D position, and moves rearward when shifting to R position.