



LOCATION

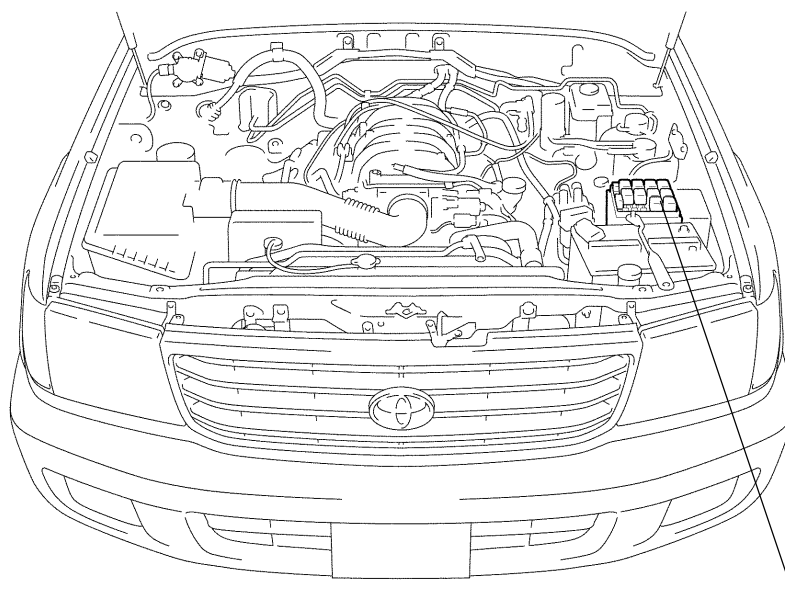

Engine Room Junction Block

- CIGAR Fuse
- ECU-B Fuse

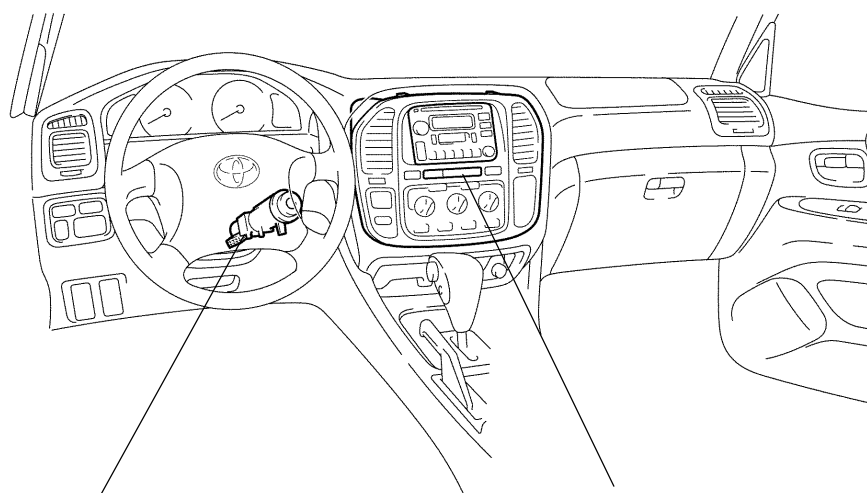

Ignition Switch

Integration Control Panel Assembly
● Clock