



CIRCUIT

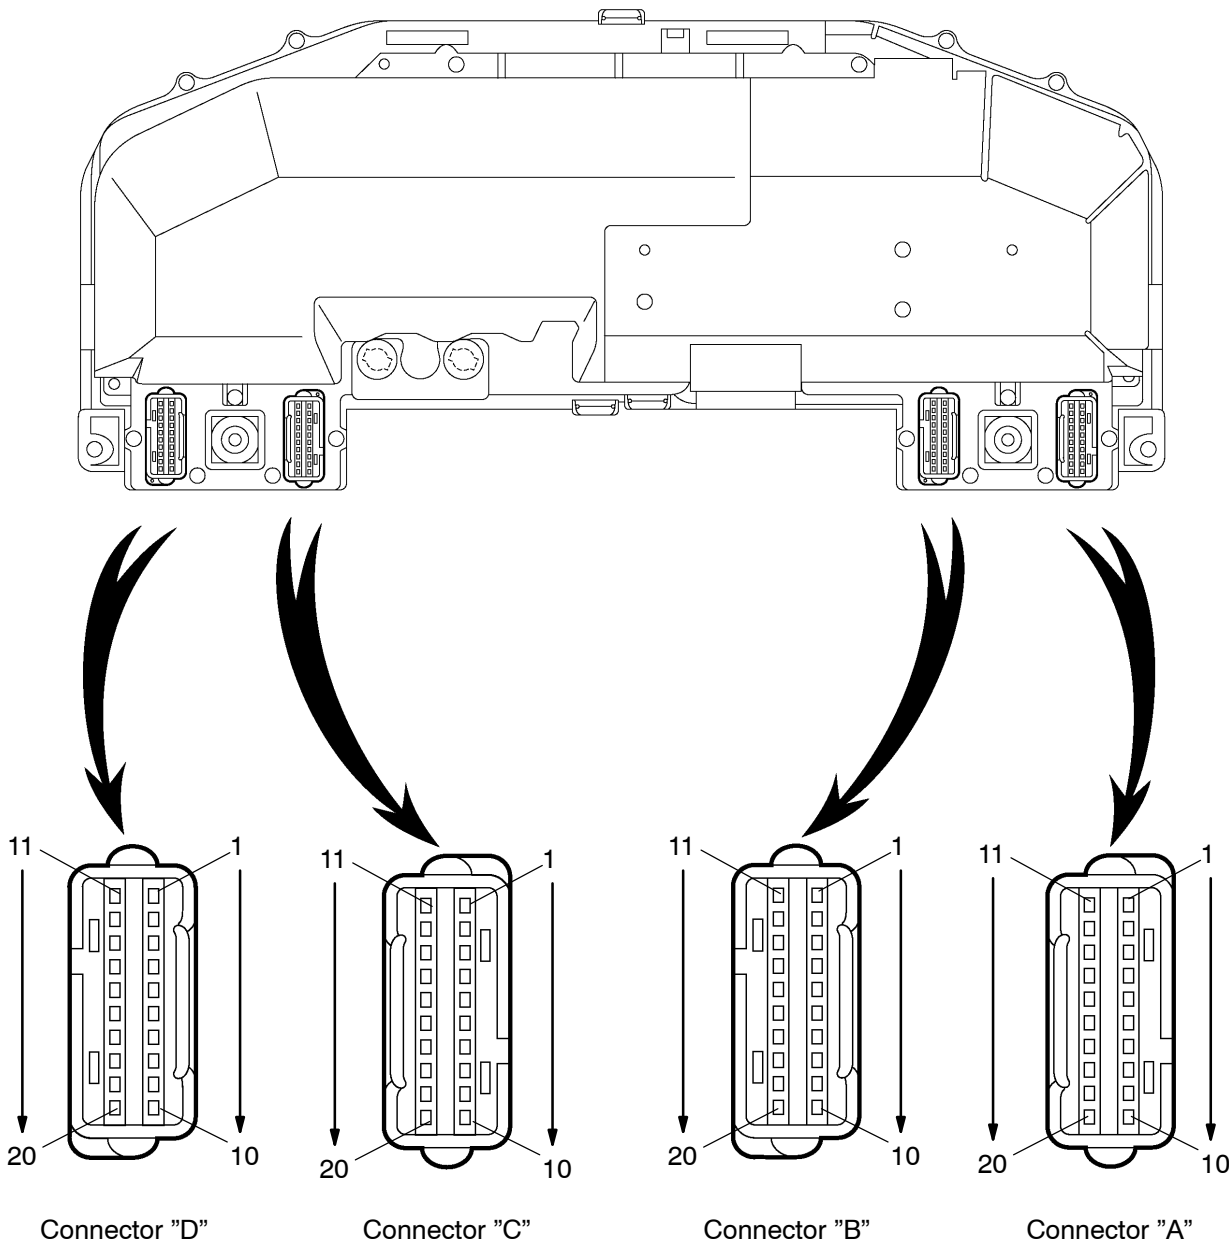


- (S) : Speedometer (V) : Voltmeter
 (T) : Tachometer (E) : Engine coolant temperature gauge
 (F) : Fuel Receiver Gauge (O) : Oil Pressure Gauge

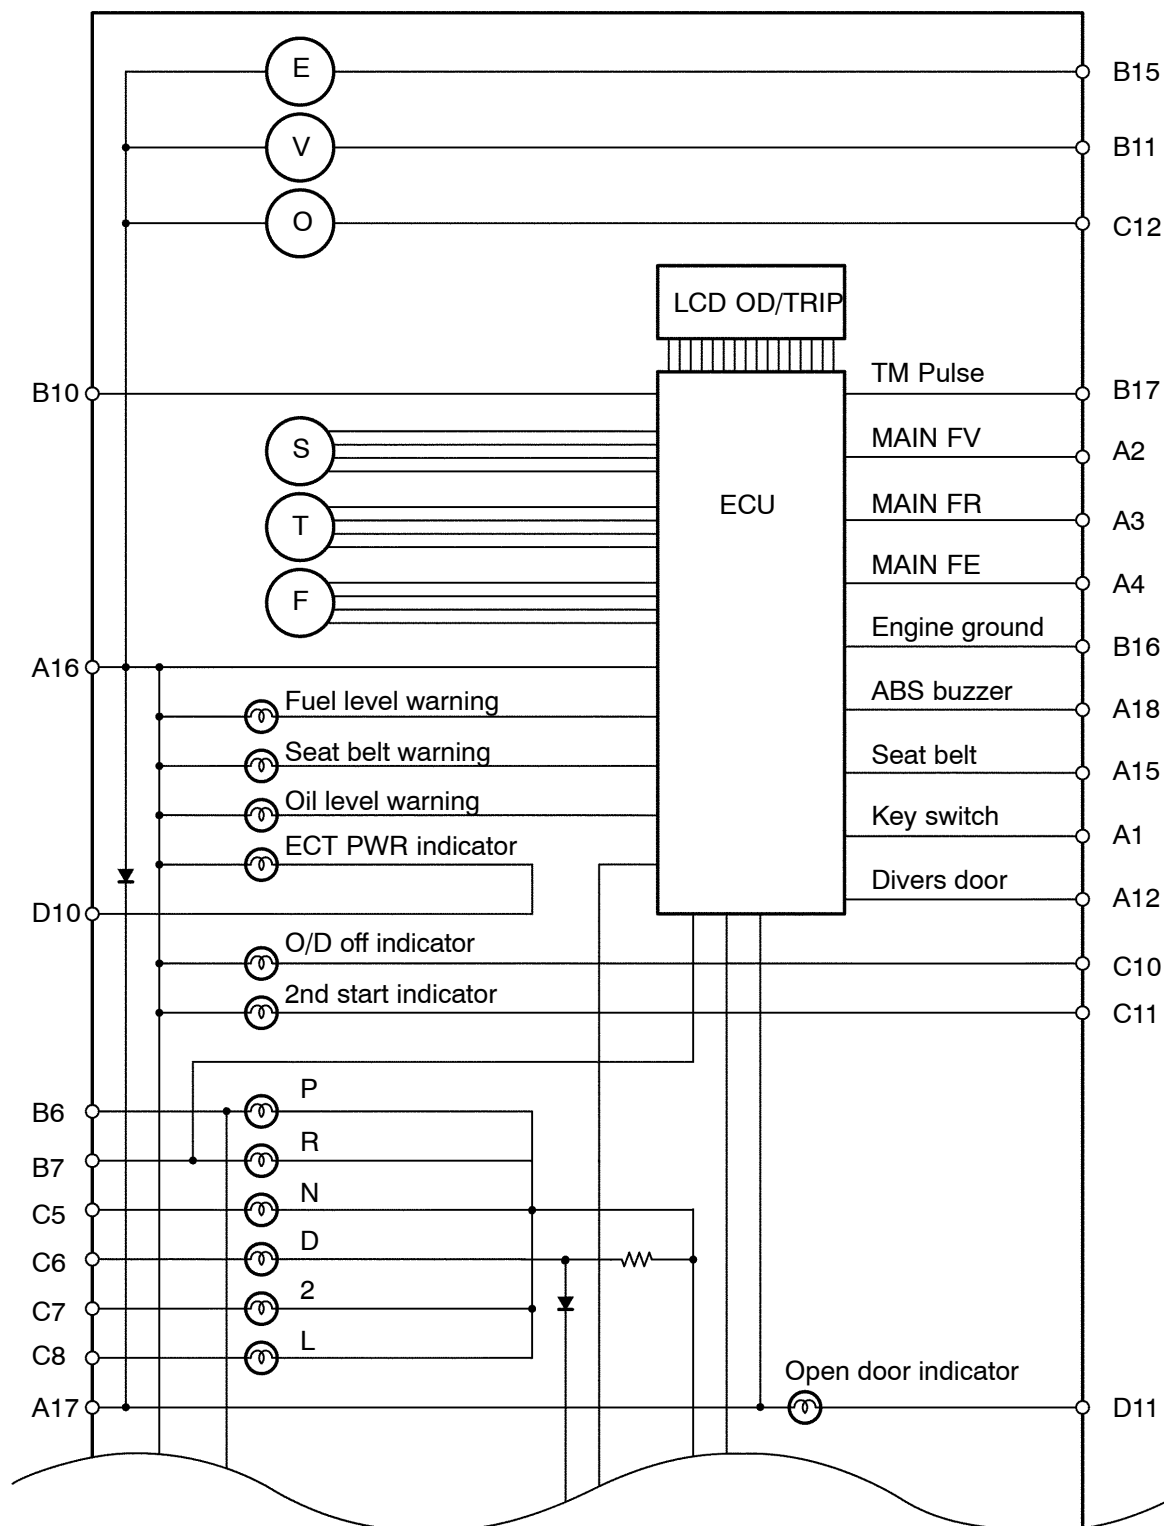

P

I12516

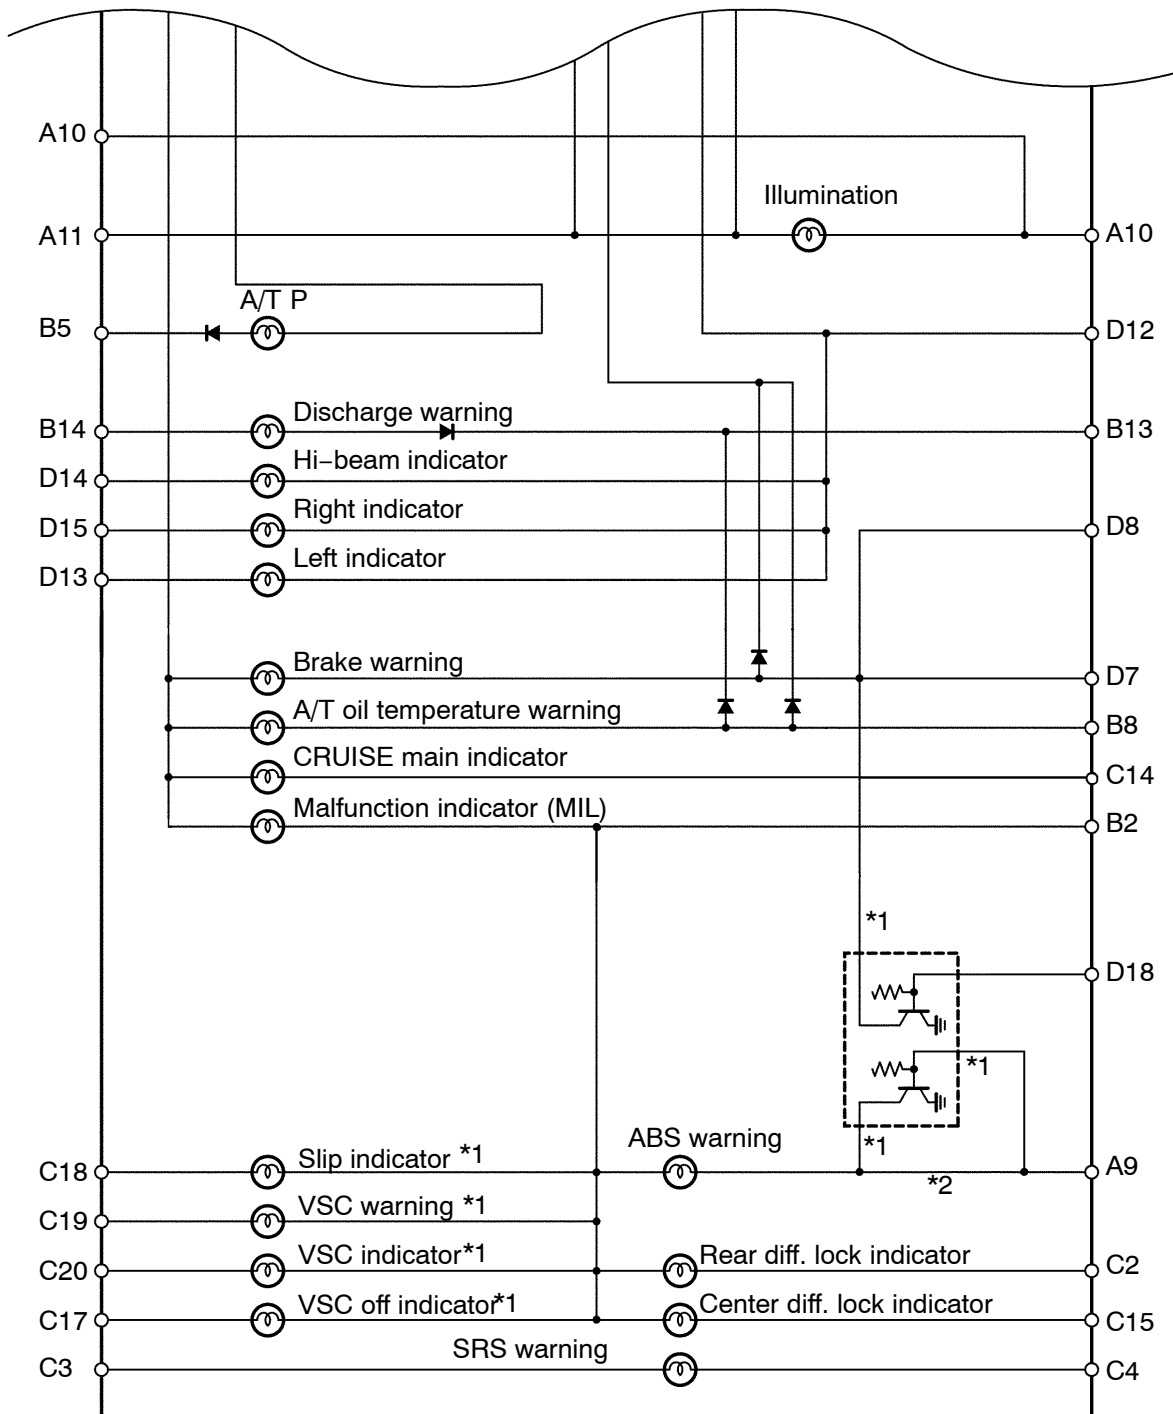

*1: W/ VSC/TRAC

*2: W/o VSC/TRAC

P

I12517

BODY ELECTRICAL - COMBINATION METER

No.		Wiring connector side
A	1	Key Unlock Warning Switch
	2	Fuel Sender Gauge
	3	Fuel Sender Gauge
	4	Fuel Sender Gauge
	9	ABS ECU
	10	Light Control Rheostat
	11	TAIL Fuse
	12	Driver Door Courtesy Switch
	15	Seat Belt Buckle Switch
	16	GAUGE Fuse
B	17	DOVE Fuse
	18	ABS ECU
	2	ECM
	4	MIRR Fuse
	5	Park/ Neutral Position Switch (P position)
	6	Park/ Neutral Position Switch (P position)
	7	Park/ Neutral Position Switch (R position)
	8	ECM
	9	Speed Control Unit
	10	Speed Sensor
C	11	Ground
	12	Light Control Rheostat
	13	Generator
	14	IGN Fuse
	15	Engine Coolant Temperature Sender Gauge
	16	Ground
	2	Rear Diff. Lock Detection Switch
	3	ECU-B Fuse
	4	Center Airbag Sensor Assembly
	5	Park/ Neutral Position Switch (N position)
D	6	Park/ Neutral Position Switch (2 position)
	7	Park/ Neutral Position Switch (D position)
	8	Park/ Neutral Position Switch (L position)
	10	O/D Main Switch
	11	ECM
	12	Low Oil Pressure Warning Switch
	13	Starter Relay
	14	ECM
	15	Transfer 4WD Position Detection Switch
	17	ABS, TRC, VSC ECU
D	18	ABS, TRC, VSC ECU
	19	ABS, TRC, VSC ECU
	20	ABS, TRC, VSC ECU
	7	Rear Diff. Lock Detection Switch
	8	Parking Brake Switch
	10	ECT Pattern Select Switch
	11	Body Control ECU (Instrument Panel ECU)
D	12	Ground
	13	Turn Signal Switch (Left)
	14	Headlight Dimmer Switch
	15	Turn Signal Switch (Right)
	18	ABS, TRC, VSC ECU