



LOCATION

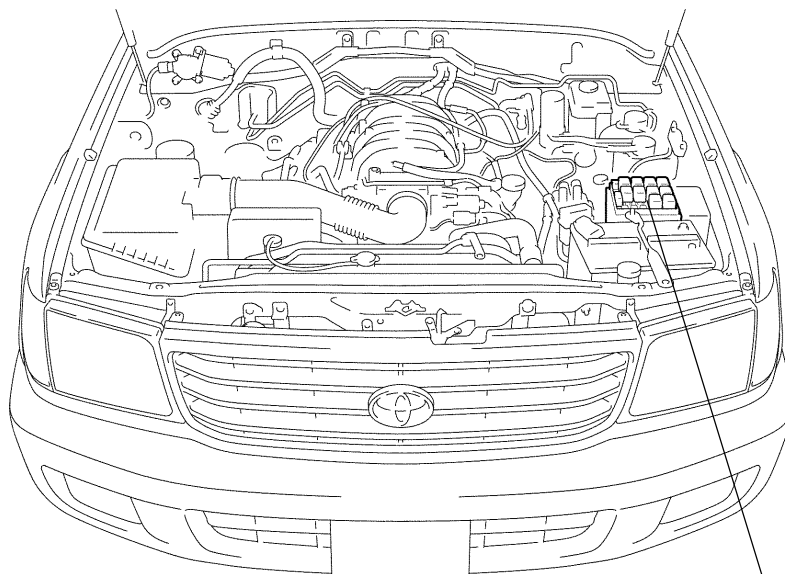

Engine Room Junction Block

- EFI Fuse
- EFI and ECD Relay

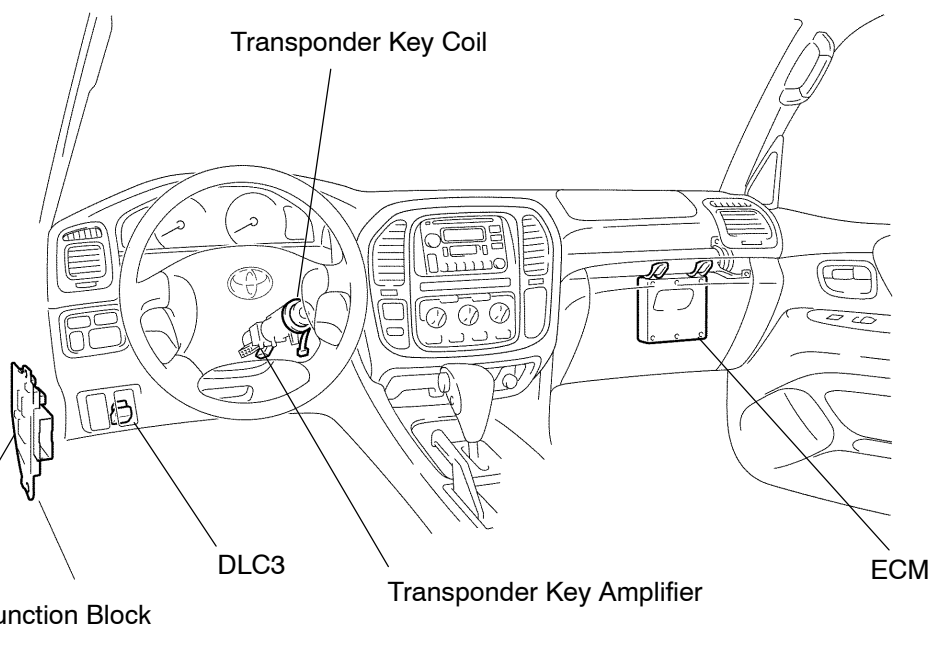

Driver Side Junction Block

- IGN Fuse