


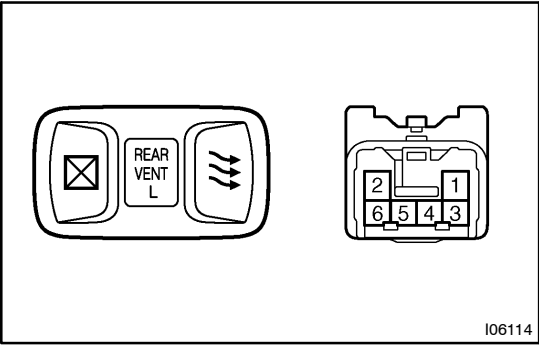


INSPECTION

1. INSPECT POWER QUARTER WINDOW SWITCH CONTINUITY


Switch position	Tester connection	Specified condition
OPEN	3 – 4 5 – 6	Continuity
OFF	–	Continuity
CLOSE	3 – 6 4 – 5	Continuity
Illumination Circuit	1 – 2	Continuity

If continuity is not as specified, replace the switch.

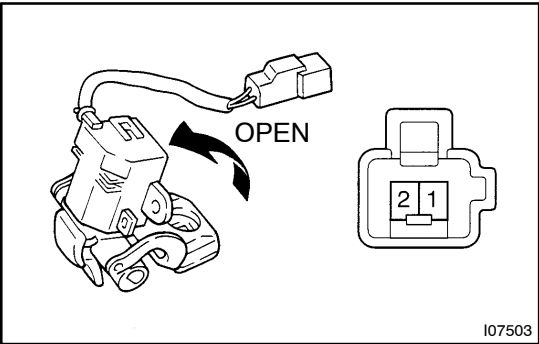


2. Left side:
INSPECT POWER VENT WINDOW MOTOR OPERATION

- (a) Connect the positive (+) lead from the battery to terminal 1 and the negative (–) lead to terminal 2, and check that the window link moves to OPEN position.

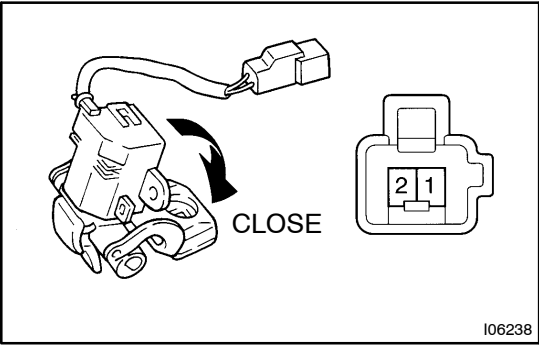


- (b) Remove the polarity and check that the window link moves to CLOSE position.

If operation is not as specified, replace the window motor.

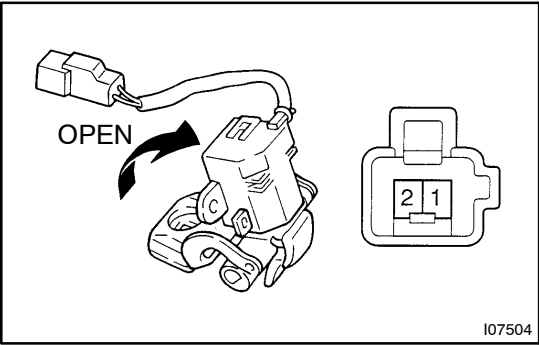

3. Right side:
INSPECT POWER VENT WINDOW MOTOR OPERATION

- (a) Connect the positive (+) lead from the battery to terminal 2 and the negative (–) lead to terminal 1, and check that the window link moves to OPEN position.

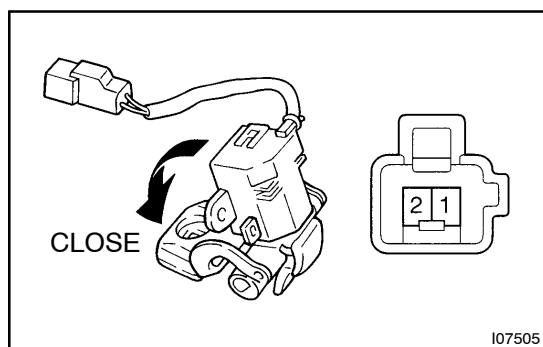

- (b) Remove the polarity and check that the window link moves to CLOSE position.