


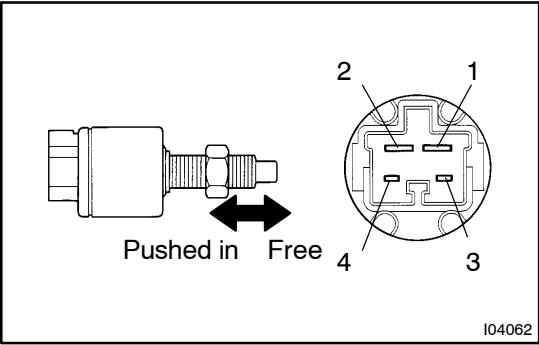


INSPECTION

1. INSPECT STOP LIGHT SWITCH CONTINUITY

Switch position	Tester connection	Specified condition
Switch pin free (Pedal depressed)	1 – 2	Continuity
Switch pin pushed in (Pedal released)	–	No continuity
Switch pin free (Pedal depressed)	–	No continuity
Switch pin pushed in (Pedal released)	3 – 4	Continuity

If continuity is not as specified, replace the switch.

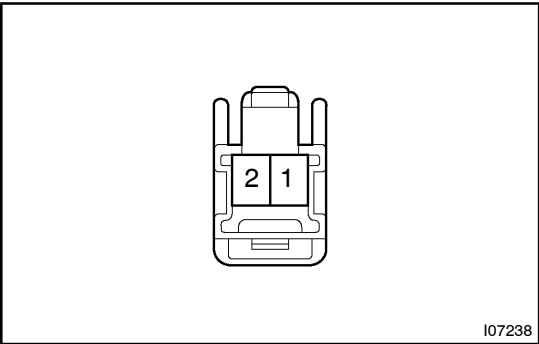

2. INSPECT HI-MOUNTED STOP LIGHT CONTINUITY

Using an ohmmeter, check that continuity exists between terminals.

If continuity is not as specified, replace the light assembly.