


INSTALLATION

1. INSTALL WASHER NOZZLES

2. INSTALL WIPER LINK

Install the wiper link through the service hole, then torque the 6 bolts.

Torque: 5.4 N·m (55 kgf·cm, 48 in·lbf)

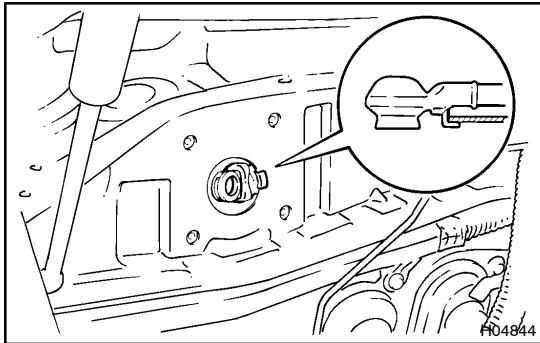

HINT:

When installing the wiper link, connect the claw of wiper link to the panel.

3. INSTALL WIPER MOTOR

- Connect the wiper motor to wiper link.
- Torque the 4 bolts.
- Connect the connector.


4. INSTALL COWL TOP VENTILATOR LOUVERS

- Install the cowl top ventilator louver LH.
- Install the cowl top ventilator louver RH.

5. INSTALL HOOD TO COWL TOP SEAL

6. INSTALL WIPER ARMS

- Operate the wipers once and turn the wiper switch OFF.
- Install the wiper arms and tighten nuts by hand.

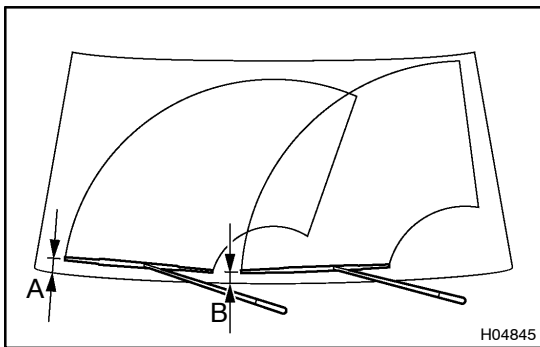

- Adjust the installation position of the wiper arms to the positions shown in the illustration.

A: Approx. 40 mm (1.57 in.)

B: Approx. 16 - 26 mm (0.63 - 1.02 in.)

- Torque the nuts.

Torque: 20 N·m (204 kgf·cm, 15 ft·lbf)

- Install the wiper arm caps.