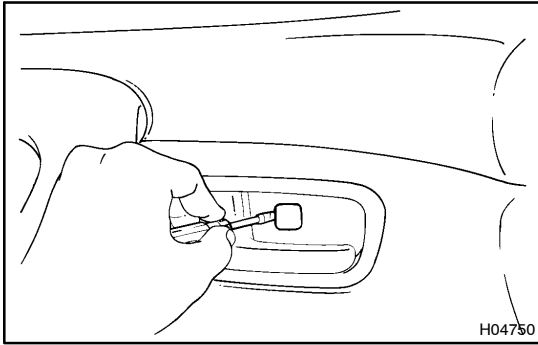




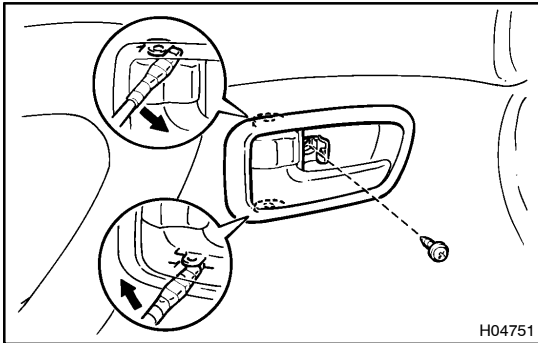
## DISASSEMBLY

### 1. REMOVE DOOR INSIDE HANDLE BEZEL

- (a) Using a screwdriver, open the cover as shown in the illustration.

HINT:

Tape the screwdriver tip before use.



- (b) Remove the screw.

- (c) Using a screwdriver, remove the inside handle bezel as shown in the illustration.

HINT:

Tape the screwdriver tip before use.



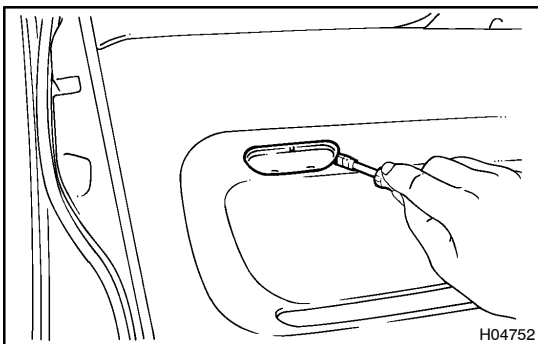
### 2. REMOVE POWER WINDOW SWITCH

- (a) Using a screwdriver, remove the power window switch as shown in the illustration.

HINT:

Tape the screwdriver tip before use.

- (b) Disconnect the connector.

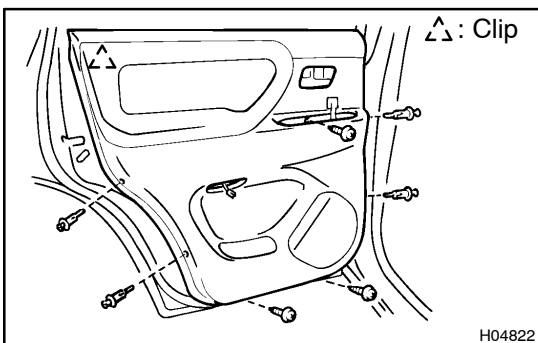


### 3. REMOVE DOOR COURTESY LIGHT

Using a screwdriver, remove the courtesy light, then disconnect the connector.

HINT:

Tape the screwdriver tip before use.



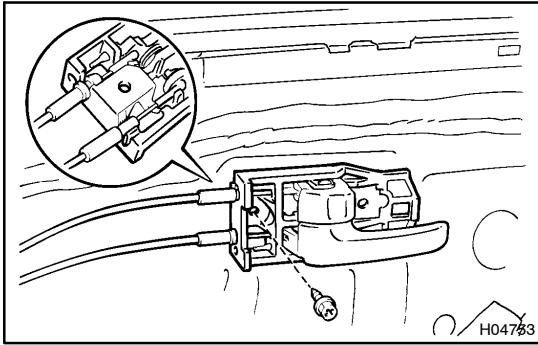
### 4. REMOVE DOOR TRIM

- (a) Remove the 3 screws and 4 clips.

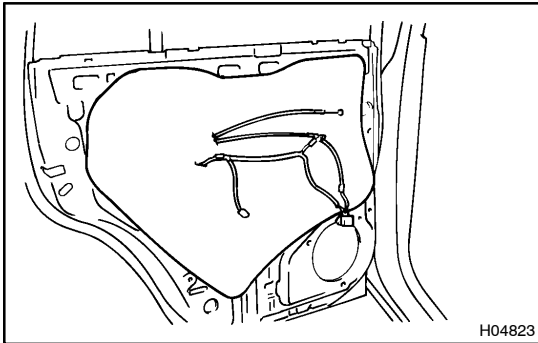
- (b) Insert a screwdriver between the door and door trim to pry the trim out.

HINT:

Tape the screwdriver tip before use.

**5. REMOVE INSIDE HANDLE**

- (a) Remove the screw.
- (b) Disconnect the 2 control cables from the inside handle as shown in the illustration.

**6. REMOVE SPEAKER****7. REMOVE SERVICE HOLE COVER**

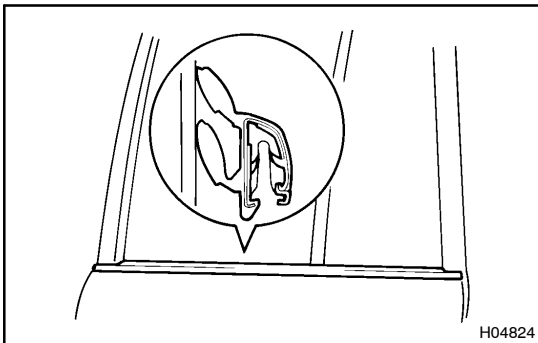
- (a) Remove the clamps and wire harness.
- (b) Remove the service hole cover.

**NOTICE:**

**Do not tear the cover.**

**HINT:**

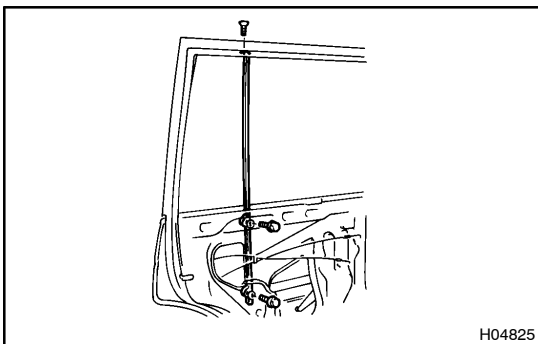
At the time of reassembly, please refer to the following item.  
Bring out the 2 control cables and wire harness through the service hole cover.

**8. REMOVE DOOR BELT MOULDING**

Using a scraper, remove the door belt moulding.

**HINT:**

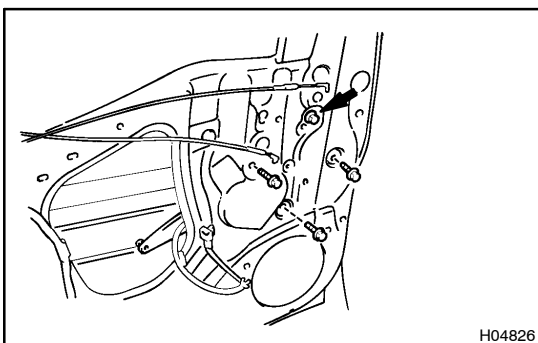
Tape the scraper tip before use.

**9. REMOVE DOOR GLASS RUN****10. REMOVE DIVISION BAR**

Remove the 2 bolts, screw and division bar.

**11. REMOVE DOOR GLASS**

Disconnect the glass from the regulator arm and remove the glass by pulling it upward.

**12. REMOVE QUARTER WINDOW GLASS WITH WEATHERSTRIP****13. REMOVE WINDOW REGULATOR**

- (a) Disconnect the connector, then remove the 3 bolts.

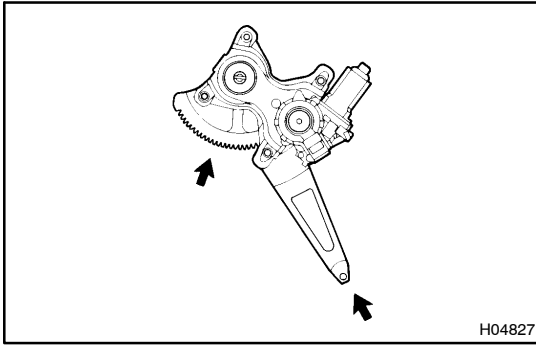
**Torque: 5.0 N·m (51 kgf·cm, 44 in·lbf)**

- (b) Loosen the bolt and window regulator.

**Torque: 5.0 N·m (51 kgf·cm, 44 in·lbf)**

**HINT:**

Remove the regulator through the service hole.

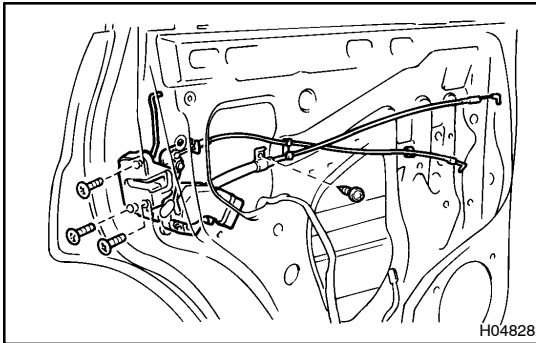
**HINT:**

At the time of reassembly, please refer to the following item.  
Apply MP grease to the window regulator.

**NOTICE:**

At the time of reassembly, please refer to the following item.

Do not apply grease to the spring of the window regulator.

**14. REMOVE DOOR LOCK**

- (a) Remove the screw.
- (b) Disconnect the connector.
- (c) Disconnect the link from outside handle.
- (d) Using a torx wrench, remove the 3 screws and door lock.

**Torx wrench: T30 (Part No. 09042-00010 or locally manufactured tool)**

**Torque: 5.0 N·m (51 kgf·cm, 44 in·lbf)**

**HINT:**

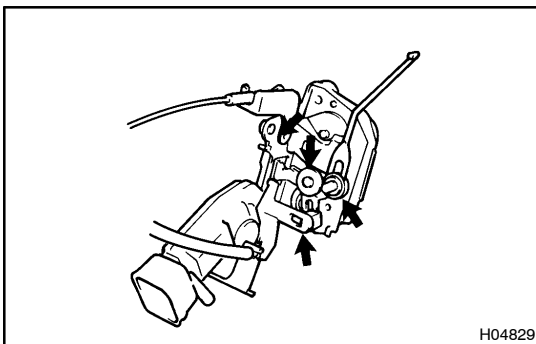
Remove the door lock through the service hole.

**HINT:**

At the time of reassembly, please refer to the following items.

- Apply adhesive to the 3 screws.

**Part No. 08833-00070, THREE BOND 1324 or equivalent.**



- Apply MP grease to the sliding and rotating parts of the door lock.

**15. REMOVE OUTSIDE HANDLE**

Remove the 2 bolts and outside handle.

**Torque: 5.0 N·m (51 kgf·cm, 44 in·lbf)**