


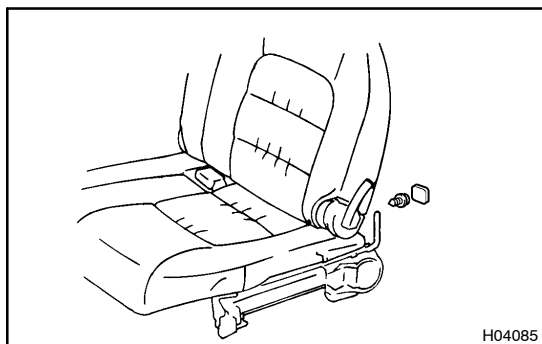

DISASSEMBLY


1. REMOVE RECLINING ADJUSTER RELEASE HANDLE

- (a) Using a screwdriver, remove the cover.

HINT:


Tape the screwdriver tip before use.

- (b) Remove the screw and reclining adjuster release handle.

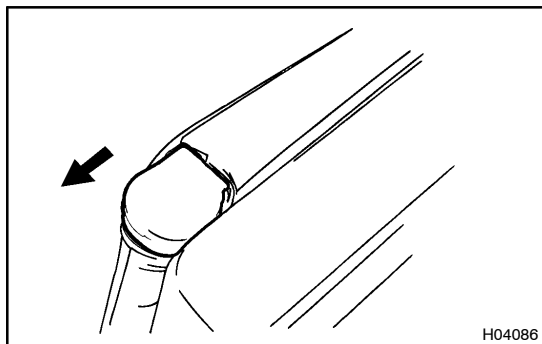

2. REMOVE REAR NO. 2 SEAT RECLINING ADJUSTER COVERS

Remove the No. 2 rear seat reclining covers.

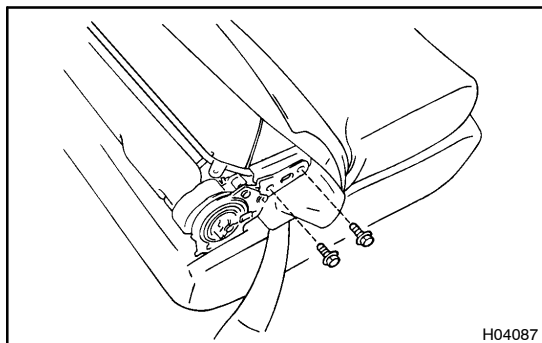

3. REMOVE SEATBACK ASSEMBLY

- (a) Disengage the hook.
(b) Remove the 4 bolts and seatback assembly.

Torque: 41 N·m (420 kgf·cm, 30 ft·lbf)

4. REMOVE HEADREST

Remove the headrest.

5. REMOVE SEATBACK COVER

- (a) Remove the headrest supports.
(b) Remove the cushion.
(c) Remove the seatback cover with pad from the seatback frame.
(d) Remove the seatback cover from the seatback pad.


6. REMOVE REAR NO. 2 LAP TYPE CENTER WITH INNER BELT

Remove the nut and rear No. 2 lap type center with inner belt.

7. REMOVE REAR SEAT LOCK CONTROL CABLE

8. REMOVE REAR SEAT STAY

Remove the 2 bolts and rear seat stay.

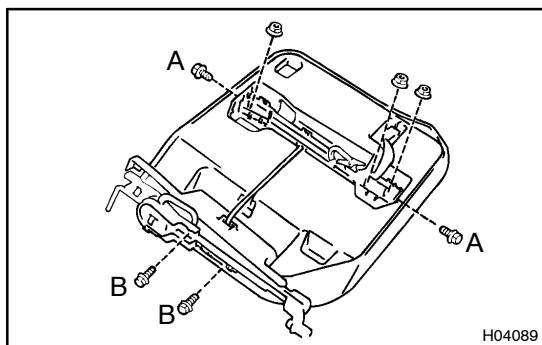

9. REMOVE ADJUSTER

- (a) Remove the 3 nuts.
(b) Remove the 4 bolts.


Torque:

A bolt: 18 N·m (185 kgf·cm, 13 ft·lbf)

B bolt: 37 N·m (380 kgf·cm, 27 ft·lbf)

- (c) Remove the adjuster.
(d) Remove the seat leg bracket cover.
(e) Remove the 2 screws and seat leg No. 1 stay.

10. REMOVE SEAT LEG BRACKET
11. REMOVE SEAT LEG REAR COVER
12. REMOVE SEAT LEG COVER

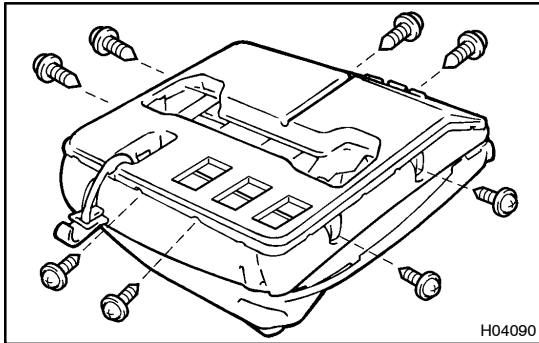
**13. REMOVE SEAT CUSHION UNDER COVER**

- (a) Remove the assist grip.
- (b) Using a screwdriver, disengage the hooks.

HINT:

Tape the screwdriver tip before use.

- (c) Remove the 8 screws.
- (d) Remove the seat cushion under cover.

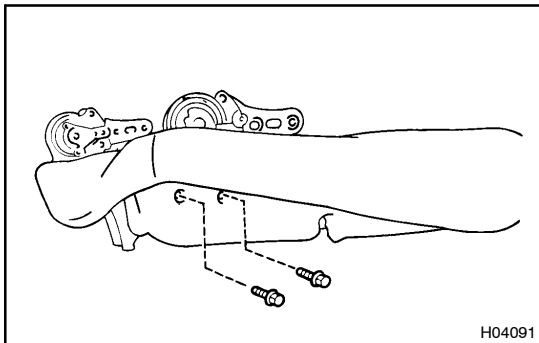14. REMOVE SEAT ADJUSTER CONTROL CABLE**15. REMOVE SEAT RECLINING INNER COVERS****16. REMOVE REAR NO. 2 SEAT RECLINING ADJUSTERS**

- (a) Remove the 4 bolts.

Torque: 41 N·m (420 kgf·cm, 30 ft·lbf)

- (b) Remove the rear No. 2 seat reclining adjusters.


17. REMOVE SEAT CUSHION COVER

- (a) Remove hog rings and seat cushion frame.

HINT:

At the time of reassembly, please refer to the following item.
When installing hog rings, take care to prevent wrinkles as little as possible.

- (b) Remove the seat cushion cover from the seat cushion pad.

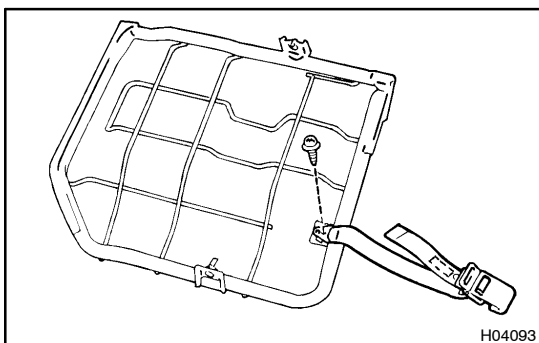**18. REMOVE HOLD SEAT STOPPER NO. 2 BAND**

- (a) Remove the screw.
- (b) Remove the hold seat stopper No. 2 band.