


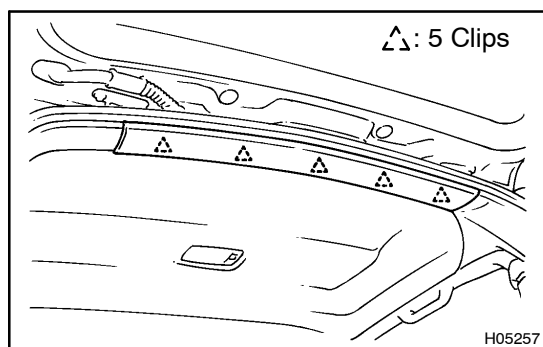

REMOVAL

1. REMOVE ROOF HEADLINING REAR TRIM


Using a screwdriver, remove the roof headlining rear trim.

HINT:

Tape the screwdriver tip before use.

2. w/ Rear No. 2 seat:

REMOVE REAR NO. 2 SEATS (See page [BO-141](#))

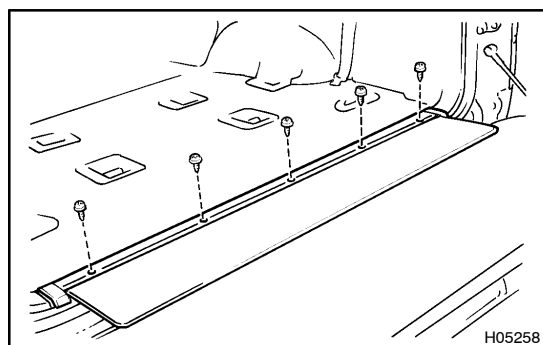


3. REMOVE REAR MAT SET PLATE

(a) Remove the 5 screws.

(b) Using a screwdriver, remove the rear mat set plate.

HINT:

Tape the screwdriver tip before use.

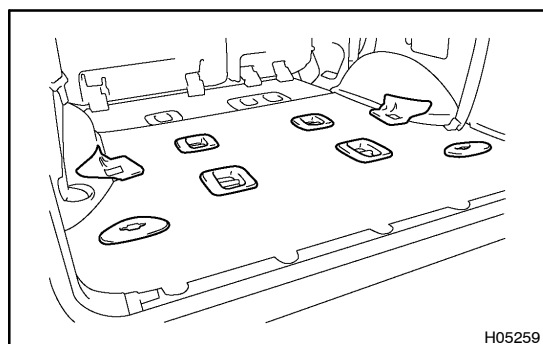

4. w/ Rear No. 2 seat:

REMOVE STRIKER PLATES

Using a screwdriver, remove the striker plates.

HINT:

Tape the screwdriver tip before use.

5. w/ Tonneau cover:

REMOVE TONNEAU COVER

6. REMOVE REAR MAT

7. w/ Rear No. 2 seat:

REMOVE REAR NO. 2 SEAT OUTER BELT FLOOR ANCHOR


Torque: 43 N·m (440 kgf·cm, 32 ft·lbf)

8. REMOVE REAR NO. 1 SEAT OUTER BELT FLOOR ANCHOR

Torque: 43 N·m (440 kgf·cm, 32 ft·lbf)

9. REMOVE REAR DOOR SCUFF PLATES

10. REMOVE REAR DOOR OPENING TRIMS

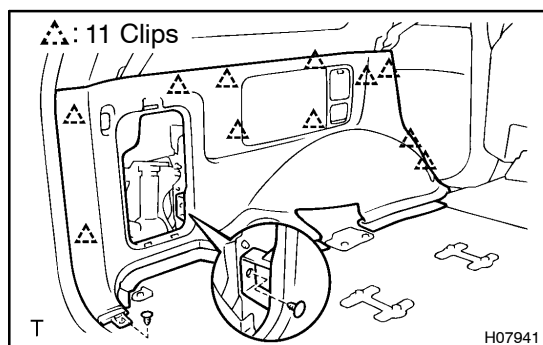


11. REMOVE QUARTER TRIM PANEL LH

(a) Remove the quarter trim jack cover.

(b) Using a clip remover, remove the 2 clips.

(c) Remove the quarter trim panel LH, then disconnect the connector.

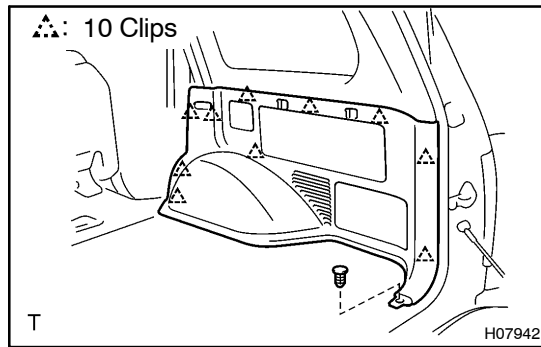**12. REMOVE QUARTER TRIM PANEL RH**


- (a) Using a clip remover, remove the clip.
- (b) Remove the quarter trim panel RH.

13. w/ Rear No. 2 seat:**REMOVE REAR NO. 2 SEAT OUTER BELT SHOULDER ANCHORS**

Torque: 43 N·m (440 kgf·cm, 32 ft·lbf)

14. REMOVE REAR NO. 1 SEAT OUTER BELT SHOULDER ANCHORS

Torque: 43 N·m (440 kgf·cm, 32 ft·lbf)

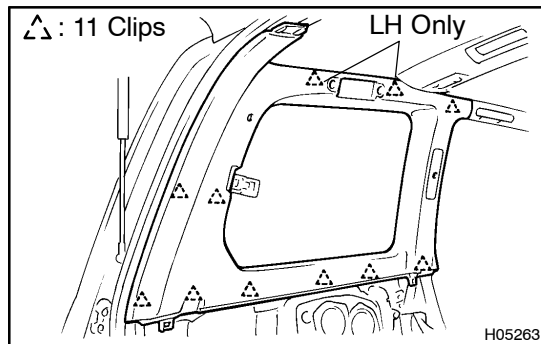**15. REMOVE UPPER ROOF SIDE INNER GARNISHES**

- (a) w/ Rear No. 2 seat:

Using a screwdriver, remove the 2 assist grip plugs, then remove the 2 screws and assist grip.

HINT:

Tape the screwdriver tip before use.

- (b) Using a clip remover, remove the clip.
- (c) Using a screwdriver, remove the upper roof side inner garnish.

HINT:

Tape the screwdriver tip before use.

- (d) Employ the same manner described above to the other side.

16. REMOVE FRONT DOOR SCUFF PLATES**17. REMOVE COWL SIDE TRIMS****18. REMOVE FRONT DOOR OPENING TRIMS****19. REMOVE FRONT PILLAR GARNISH**

- (a) Driver's side:

Using a screwdriver, remove the 2 assist grip plugs, then remove the 2 screws and assist grip.

HINT:


Tape the screwdriver tip before use.

- (b) Passenger's side:

Using a screwdriver, remove the 4 assist grip plugs, then remove the 4 screws and 2 assist grips.

HINT:

Tape the screwdriver tip before use.

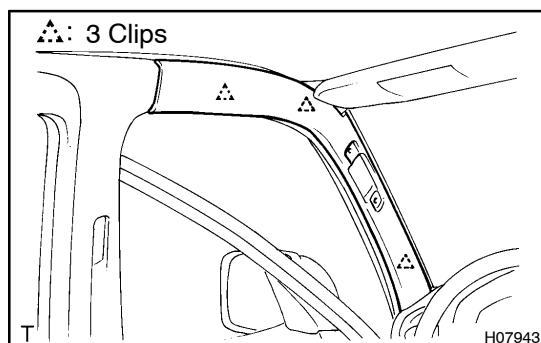


- (c) Using a screwdriver, remove the front pillar garnish.

HINT:

Tape the screwdriver tip before use.


- (d) Employ the same manner described above to the other side.

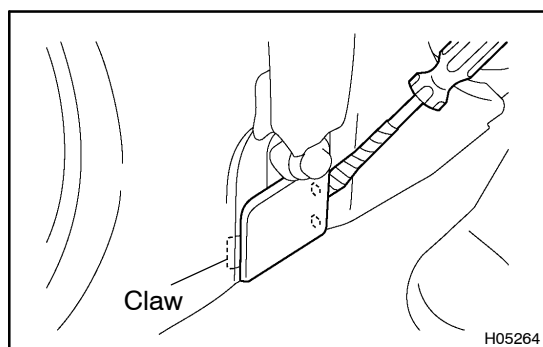**20. REMOVE CENTER PILLAR LOWER GARNISH**

- (a) Using a screwdriver, remove the center pillar garnish cover.

HINT:

Tape the screwdriver tip before use.

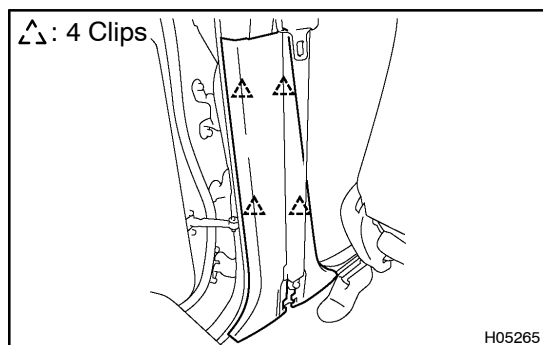


- (b) Using a screwdriver, remove the center pillar lower garnish as shown in the illustration.

HINT:

Tape the screwdriver tip before use.

- (c) Employ the same manner described above to the other side.

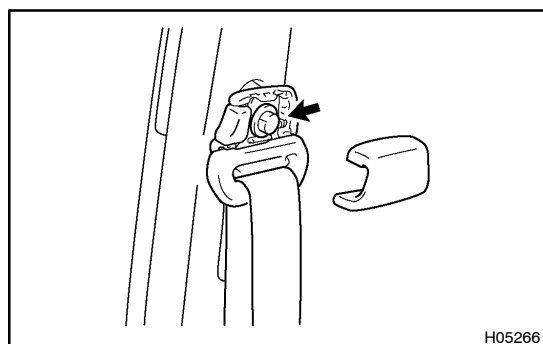**21. REMOVE CENTER PILLAR GARNISH**

- (a) Using a screwdriver, remove the seat belt anchor cover cap.

HINT:

Tape the screwdriver tip before use.


- (b) Remove the bolt and front seat outer belt shoulder anchor.

Torque: 43 N·m (440 kgf·cm, 32 ft·lbf)

- (c) Using a screwdriver, remove the 4 assist grip plugs, then remove the 4 screws and 2 assist grips.

HINT:

Tape the screwdriver tip before use.

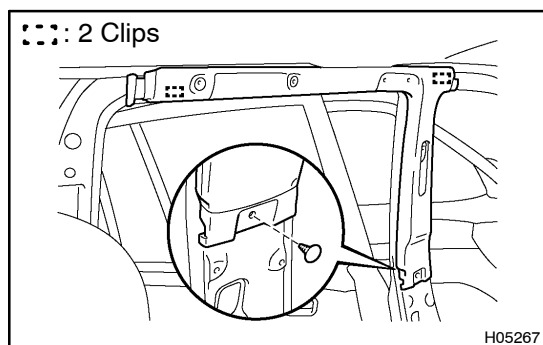

- (d) Using a clip remover, remove the clip.


- (e) Using a screwdriver, remove the center pillar garnish.

HINT:

Tape the screwdriver tip before use.

- (f) Employ the same manner described above to the other side.

22. REMOVE SUN VISORS**23. REMOVE DOUBLE VISORS****24. REMOVE HOLDERS**

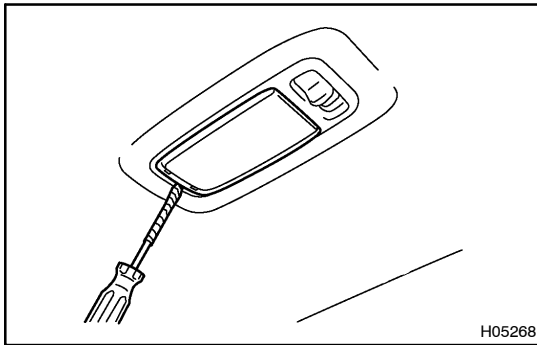
**25. REMOVE DOME LIGHT**

- (a) Using a screwdriver, remove the lens as shown in the illustration.

HINT:

Tape the screwdriver tip before use.

- (b) Remove the 4 screws and dome light, then disconnect the connector.

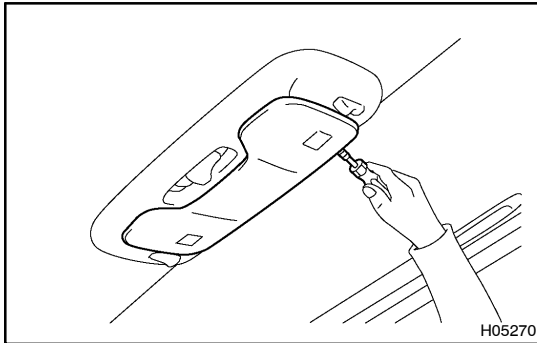
**26. w/ Sliding roof:
REMOVE MAP LAMP**

- (a) Using a screwdriver, remove the lens as shown in the illustration.

HINT:

Tape the screwdriver tip before use.


- (b) Remove the 4 screws and map lamp, then disconnect the connector.

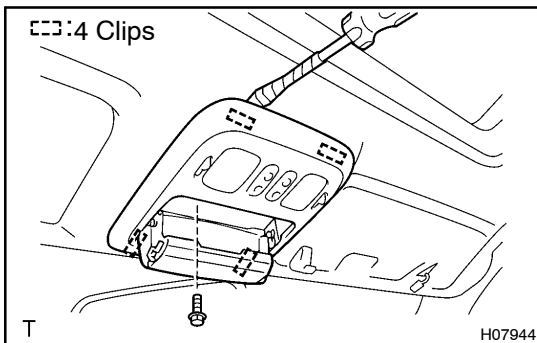**27. w/ Sliding roof:
REMOVE OVERHEAD CONSOLE BOX**


- (a) Remove the bolt.
- (b) Using a screwdriver, remove the overhead console box, then disconnect the connector.

HINT:

Tape the screwdriver tip before use.

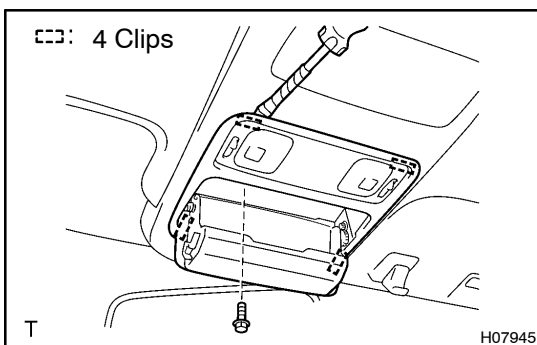**28. w/o Sliding roof:
REMOVE OVERHEAD CONSOLE BOX**


- (a) Remove the bolt.
- (b) Using a screwdriver, remove the map lamp assembly, then disconnect the connector.

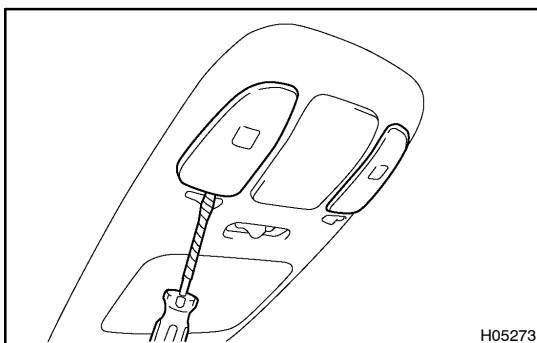

- (c) Using a screwdriver, remove the 2 lenses.

HINT:


Tape the screwdriver tip before use.

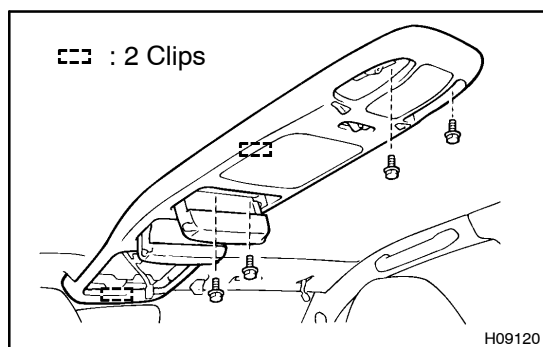

- (d) Remove the 4 bolts.
- (e) Using a screwdriver, remove the overhead console box, then disconnect the connector.

HINT:

Tape the screwdriver tip before use.

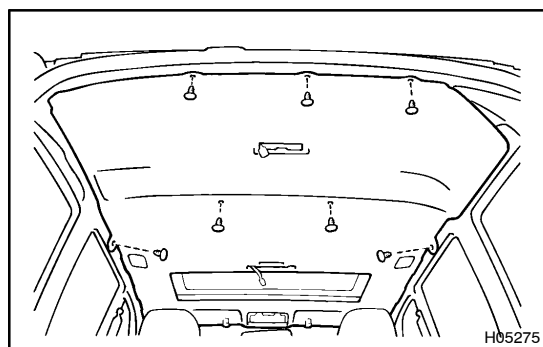29. w/ Sliding roof:**REMOVE SLIDING ROOF OPENING TRIM****30. REMOVE ROOF HEADLINING**

Using a clip remover, remove the 7 clips and roof headlining.