

INSTALLATION

NOTICE:


- Never use seat belt pretensioner from another vehicle. When replacing parts, replace them with new parts.
- Make sure that the front seat outer belt is installed with the specified torque.
- If the front seat outer belt has been dropped, or there are cracks, dents or other defects in the case or connector, replace the front seat outer belt with a new one.
- When installing the front seat outer belt, take care that the wiring does not interfere with other parts and is not pinched between other parts.

1. INSTALL RETRACTOR OF FRONT SEAT OUTER BELT

- (a) Install the retractor of front seat outer belt with the bolt.

Torque:

Upper bolt: 4.9 N·m (50 kgf·cm, 43 in·lbf)

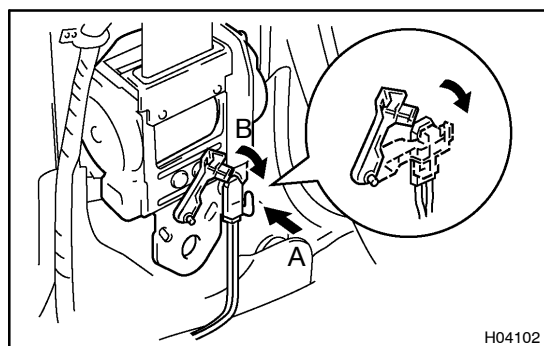


- (b) Connect the pretensioner connector in the order "A" and "B" as shown in the illustration.

2. INSTALL FRONT SEAT OUTER BELT SHOULDER ANCHOR

Torque: 43 N·m (440 kgf·cm, 32 ft·lbf)

3. INSTALL FRONT SEAT OUTER BELT FLOOR ANCHOR

Torque: 43 N·m (440 kgf·cm, 32 ft·lbf)

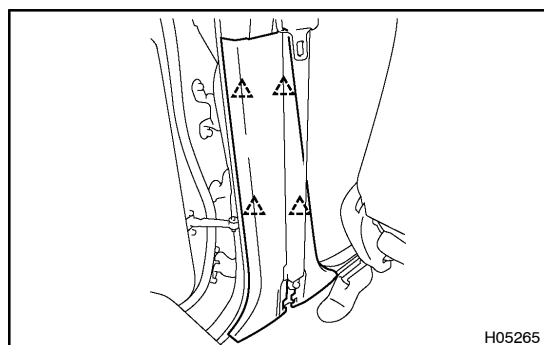

4. INSTALL CENTER PILLAR LOWER GARNISH

- (a) Install the center pillar lower garnish.

- (b) Install the center pillar garnish cover.

5. INSTALL REAR DOOR OPENING TRIM

6. INSTALL REAR DOOR SCUFF PLATE

7. INSTALL FRONT DOOR OPENING TRIM

8. INSTALL FRONT DOOR SCUFF PLATE