

DTC	Always ON	Malfunction in ECU
------------	------------------	---------------------------


CIRCUIT DESCRIPTION


DTC No.	DTC Detecting Condition	Trouble Area
Always ON	Either of the following 1. through 3. is detected: 1. The ECU connectors are OFF from the ECU. 2. There is a malfunction in the ECU internal circuit. 3. The voltage of terminal IG1 is more than 18.5 V.	• Battery • Charging system • Power source circuit • ABS ECU

HINT:

There is a case that TOYOTA hand-held tester cannot be used when ECU is abnormal.

WIRING DIAGRAM

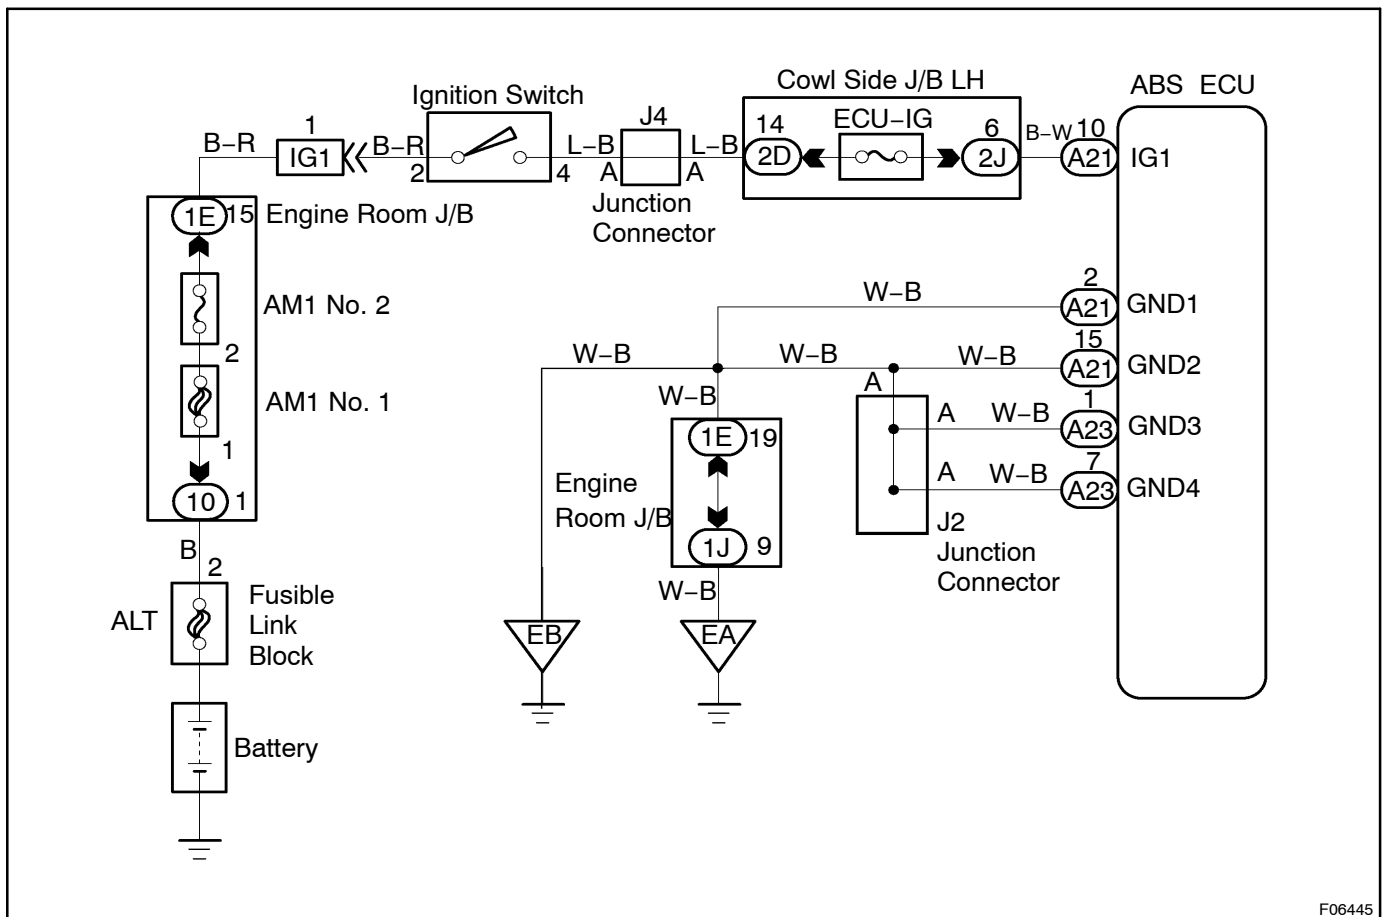

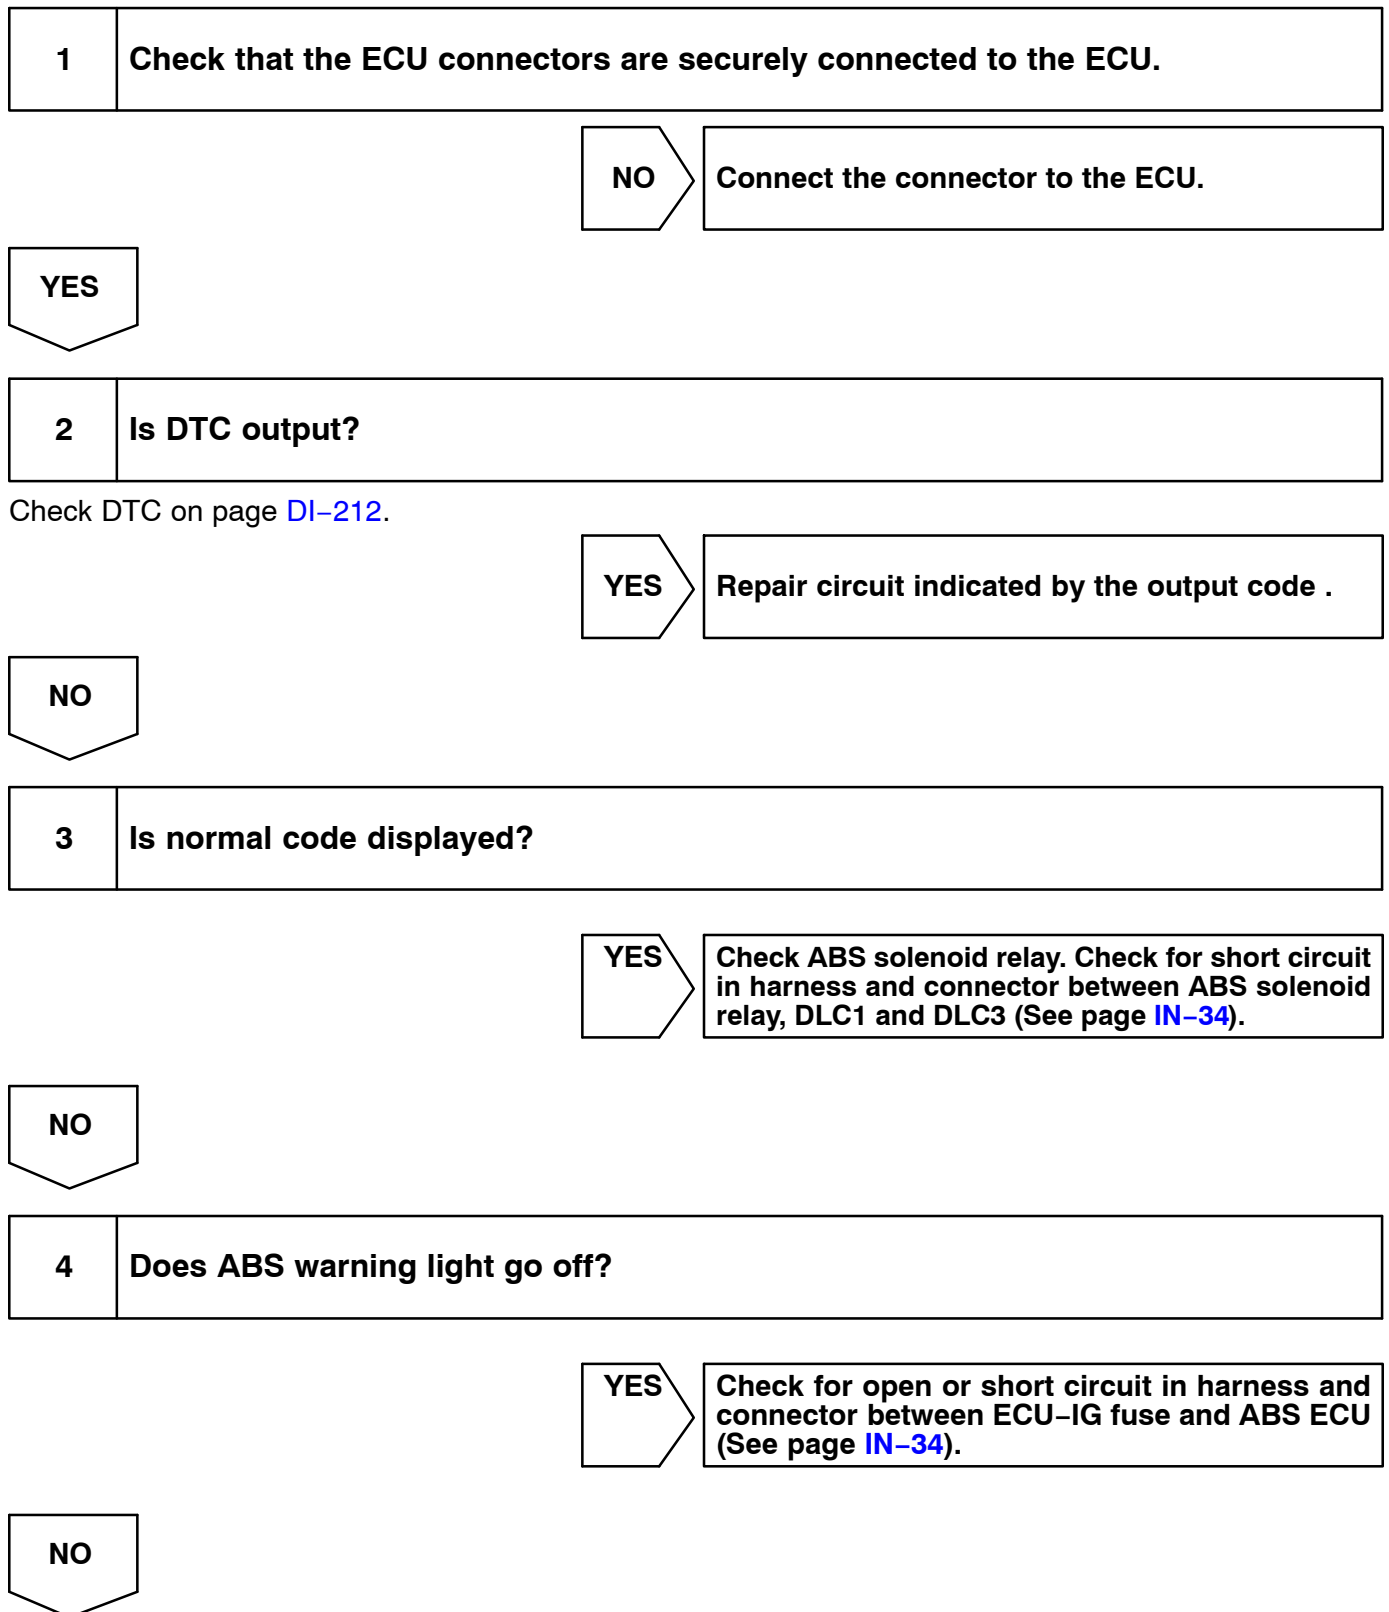INSPECTION PROCEDURE

5	Check battery positive voltage.
----------	--

CHECK:

Check the battery positive voltage.

OK:

Voltage: 10 – 16 V

NG	Check and repair the charging system.
----	---------------------------------------

OK

6	Check operation of the ABS warning light.
----------	--

In case of using TOYOTA hand-held tester:

PREPARATION:

- (a) Connect the TOYOTA hand-held tester to the DLC3.
- (b) Turn the ignition switch ON and push the TOYOTA hand-held tester main switch ON.
- (c) Select the ACTIVE TEST mode on the TOYOTA hand-held tester.

CHECK:

Check that "ON" and "OFF" of the ABS warning light can be shown on the combination meter by the TOYOTA hand-held tester.

In case of not using TOYOTA hand-held tester:

PREPARATION:

- (a) Turn the ignition switch OFF.
- (b) Disconnect the connector from the ABS ECU.
- (c) Turn the ignition switch ON.

CHECK:

Check the ABS warning light condition when pushing in and pulling out the short pin from the DLC1.

OK:

When the short pin is pulled out: ABS warning light goes off

When the short pin is pushed in: ABS warning light goes on

OK	Check and replace ABS ECU.
----	----------------------------

NG

Check for short circuit in harness and connector between combination meter and ABS ECU, combination meter and DLC1 (See page IN-34). Check ABS solenoid relay circuit (See page DI-233).
--