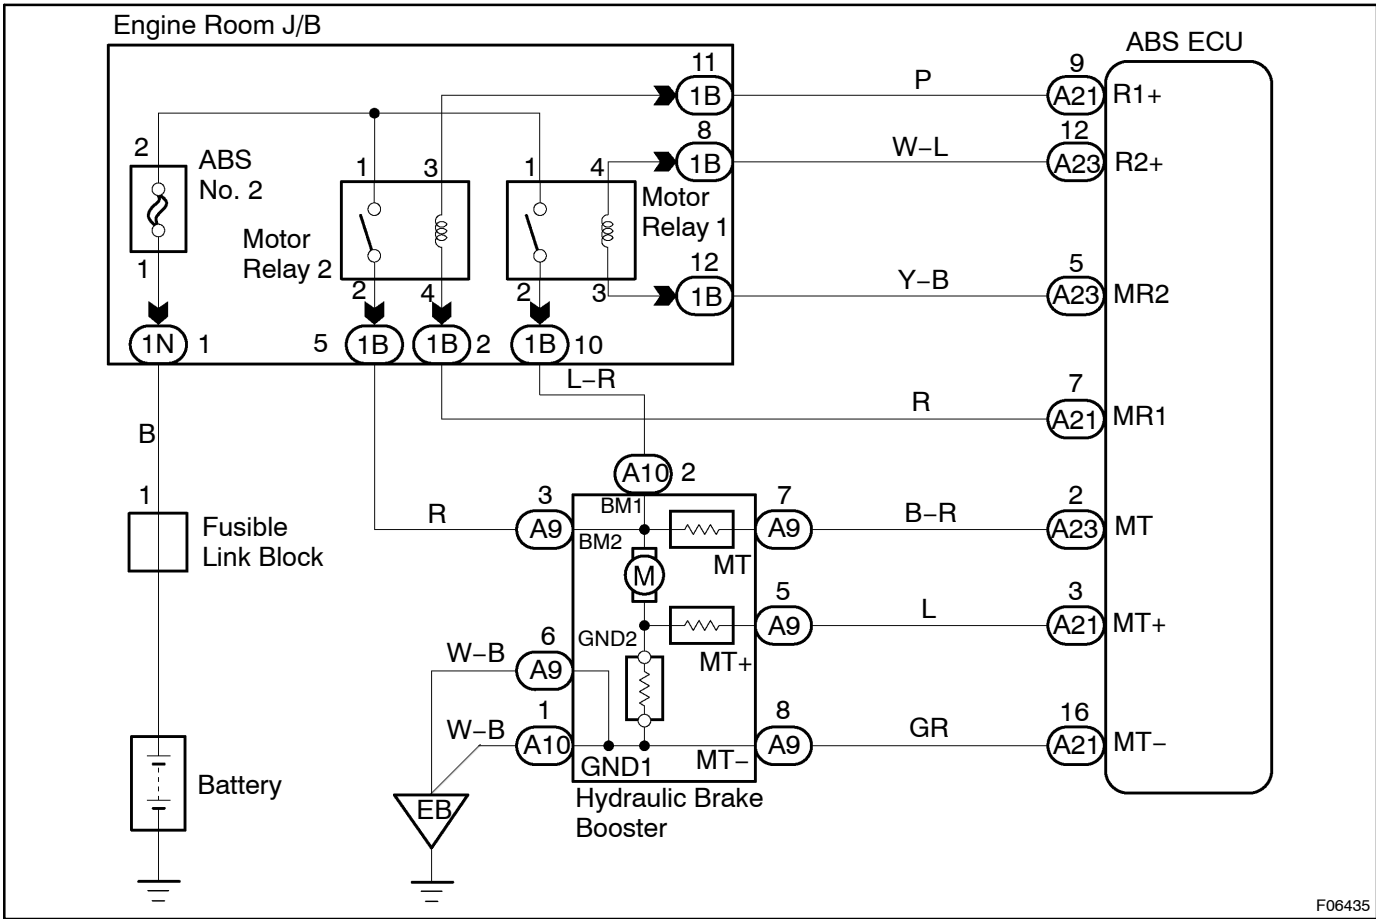


DTC	C1251 / 51	Hydraulic Brake Booster Pump Motor Malfunction
------------	-------------------	---

CIRCUIT DESCRIPTION

DTC No.	DTC Detecting Condition	Trouble Area
C1251 / 51	Either of the following 1. or 2. is detected: - After turning the ignition switch ON, the current of more than 30 A flows to the motor for more than 1 sec. - After turning the ignition switch ON, less than 7 A change in current is detected more than 3 times in a low when the motor is ON.	Hydraulic brake booster pump motor

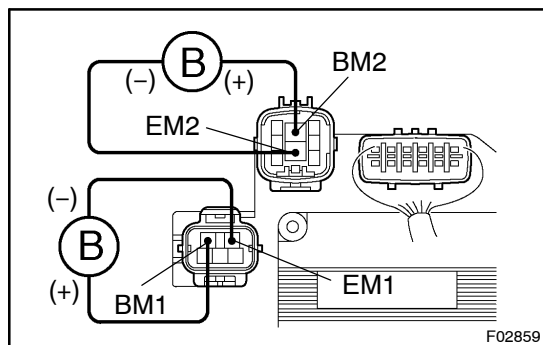
WIRING DIAGRAM



F06435

INSPECTION PROCEDURE

1 Check operation of hydraulic brake booster pump motor.

**PREPARATION:**

Disconnect the 2 connectors from the hydraulic brake booster.

CHECK:

Connect battery positive $\oplus$ lead to BM1 or BM2 terminal and battery negative $\ominus$ lead to EM1 or EM2 terminal of the hydraulic brake booster (pump motor) connector.

OK:

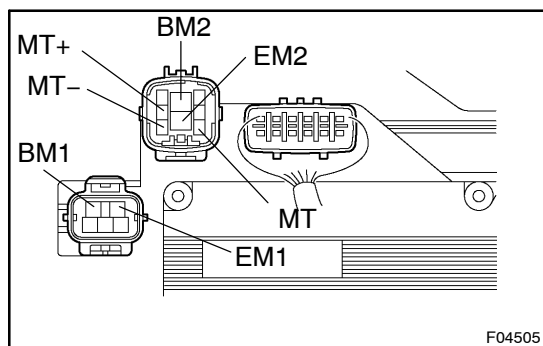
The operation sound of the pump motor should be heard.

NG

Go to step 4.

OK

2 Check hydraulic brake booster resistance.

**CHECK:**

Check resistance between terminals MT+ and MT-, BM1 and MT, BM2 and MT, EM1 and MT+, EM2 and MT+ of the hydraulic brake booster connector.

OK:

30 - 36 Ω

NG

Replace the hydraulic brake booster assembly.

OK

3 Check for open circuit in harness and connector between hydraulic brake booster (MT+, MT-) and ABS ECU (See page IN-34).

NG

Repair or replace harness or connector.

OK

Check and replace ABS ECU.

- 4** Check for open or short circuit in harness and connector between hydraulic brake booster pump motor and hydraulic brake booster (See page [IN-34](#)).

NG

Replace wire harness.

OK

- 5** Check hydraulic brake booster pump motor (See page [BR-64](#)).

NG

Replace hydraulic brake booster pump motor.

OK

Replace hydraulic brake booster.