


Tc Terminal Circuit

CIRCUIT DESCRIPTION

Connecting terminals Tc and E₁ of the DLC1 or Tc and CG of DLC3 causes the ECU to display the DTC by flashing the ABS warning light.

WIRING DIAGRAM

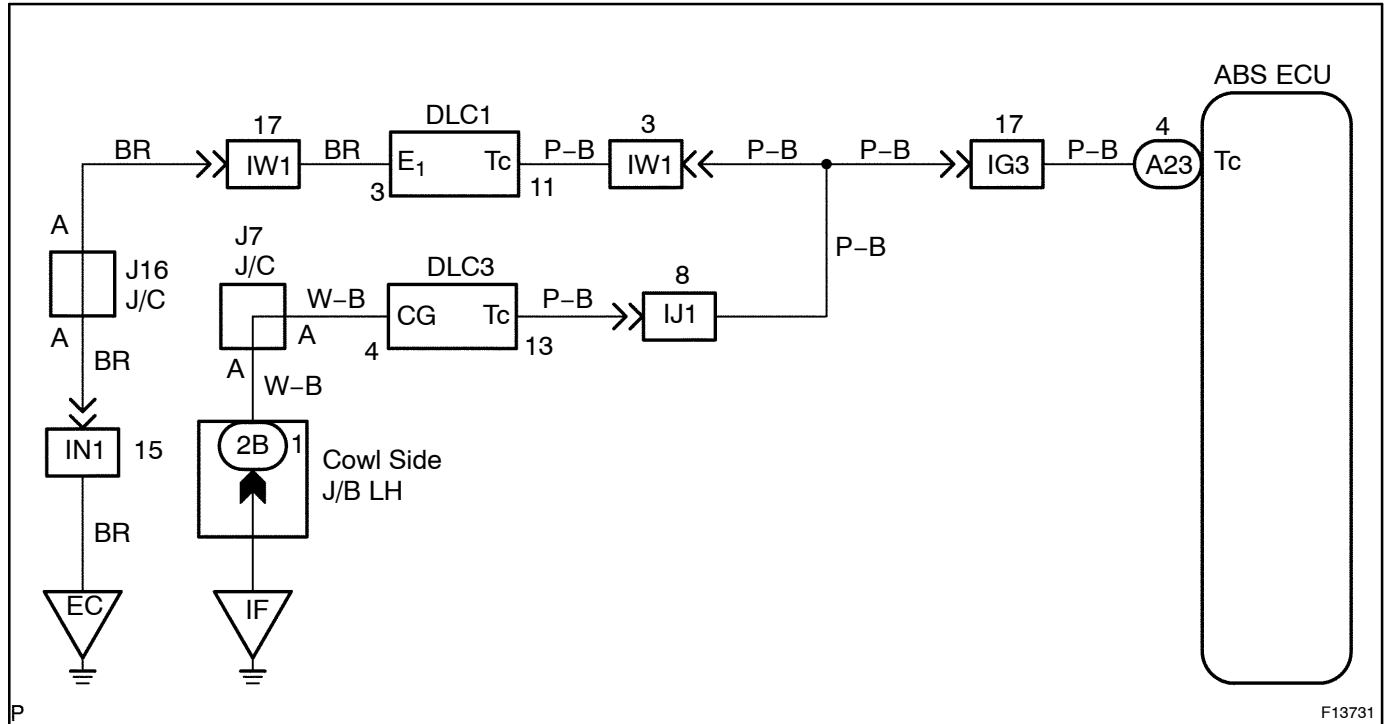


P

F13731

INSPECTION PROCEDURE

- | | |
|---|---|
| 1 | Check voltage between terminals Tc and E₁ of DLC1 or Tc and CG of DLC3. |
|---|---|

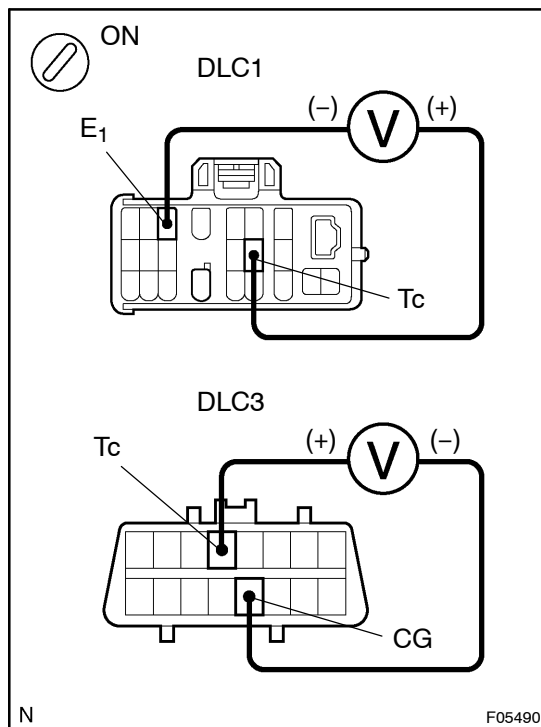**PREPARATION:**

Turn the ignition switch ON.

CHECK:

Measure voltage between terminal Tc and E₁ of DLC1 or Tc and CG of DLC3.

OK:

Voltage: 10 – 14 V

OK

If ABS warning light does not blink even after Tc and E₁ of DLC1 or Tc and CG of DLC3 are connected, the ECU may be defective.

NG

- | | |
|---|--|
| 2 | Ignition switch OFF, and check for open and short circuit in harness and connector between ABS ECU and DLC1 or DLC3, DLC1 or DLC3 and body ground (See page IN-34). |
|---|--|

NG

Repair or replace harness or connector.

OK

Check and replace ABS ECU.