


A/T. P. (Automatic Transmission Parking) Indicator Circuit

CIRCUIT DESCRIPTION

The propeller shaft and wheels are free even when the transmission shift lever is set to P as long as the transfer shift lever is in Neutral position. The A/T.P. indicator light lights up to warn the driver that the propeller shaft and wheels are not locked.

If the A/T.P. indicator light goes on, the transfer shift lever should be shifted to the positions other than N position.

WIRING DIAGRAM

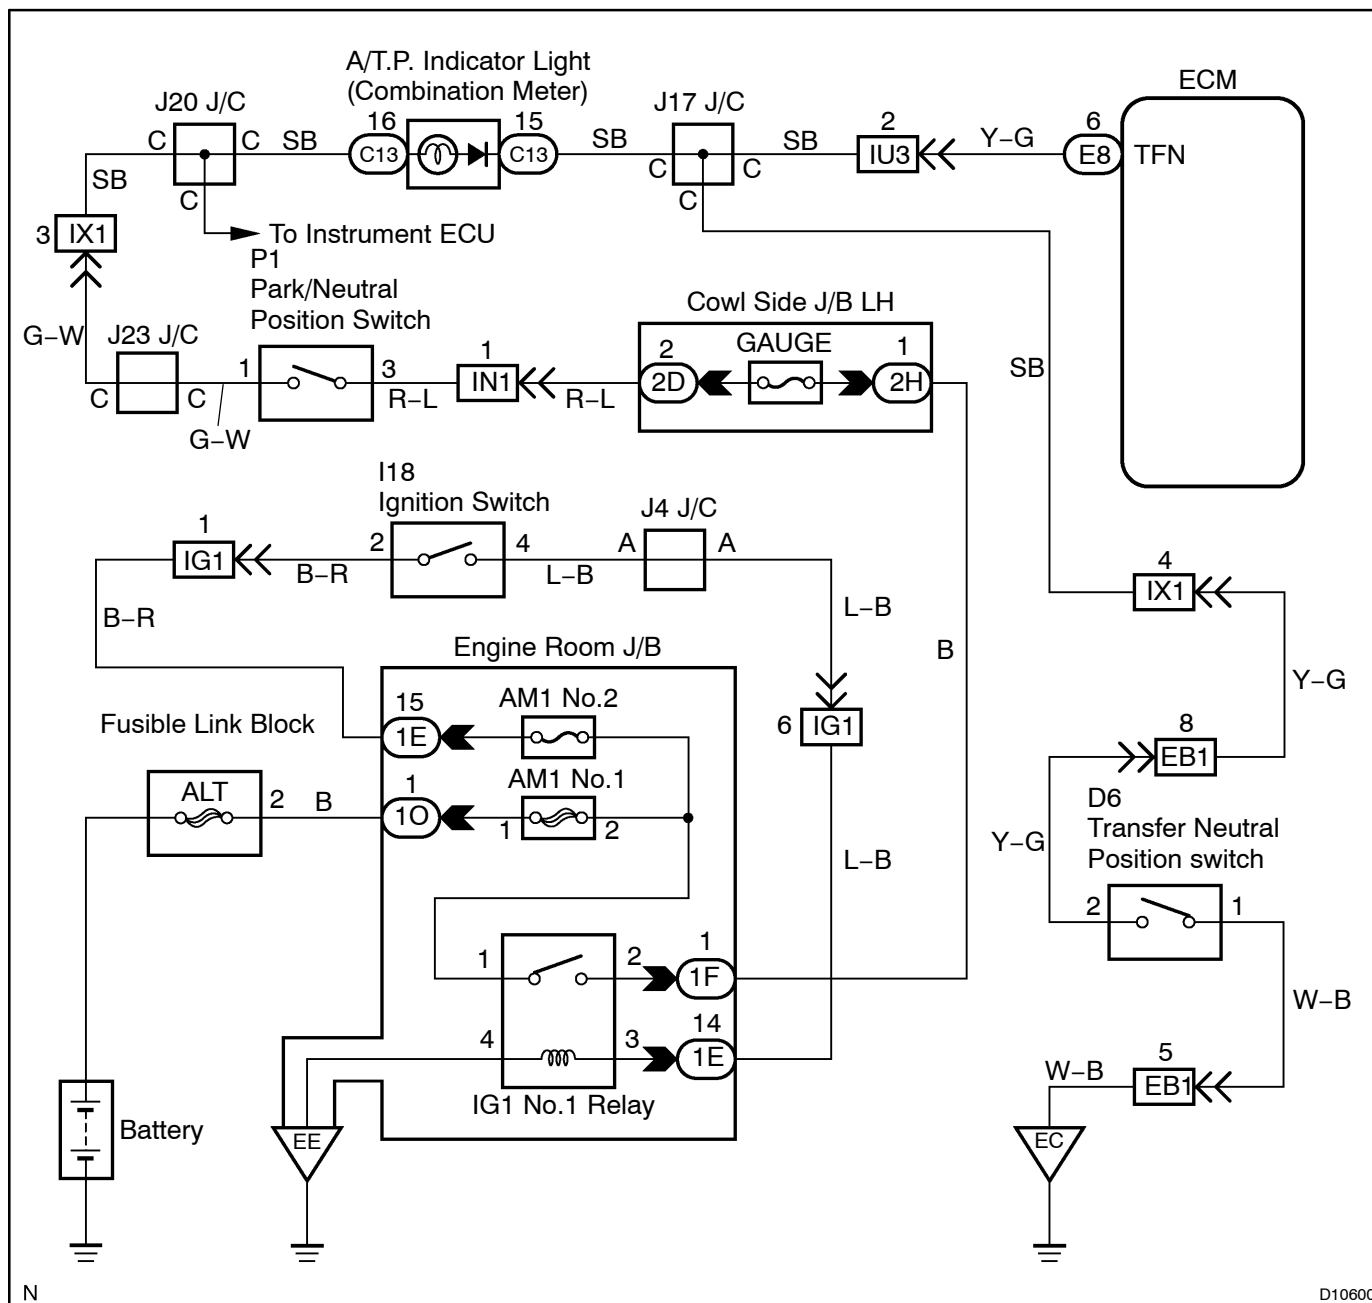

INSPECTION PROCEDURE**1****Check park/neutral position switch (See page [DI-194](#)).****NG****Replace the park/neutral position switch.****OK****2****Check transfer neutral position switch (See page [TR-49](#)).****OK****Replace the transfer neutral position switch.****NG****3****Check combination meter (See page [BE-54](#)).****NG****Repair or replace the combination meter.****OK****Check and replace the harness and connector (See page [IN-34](#)).**