


CIRCUIT DESCRIPTION

WIRING DIAGRAM

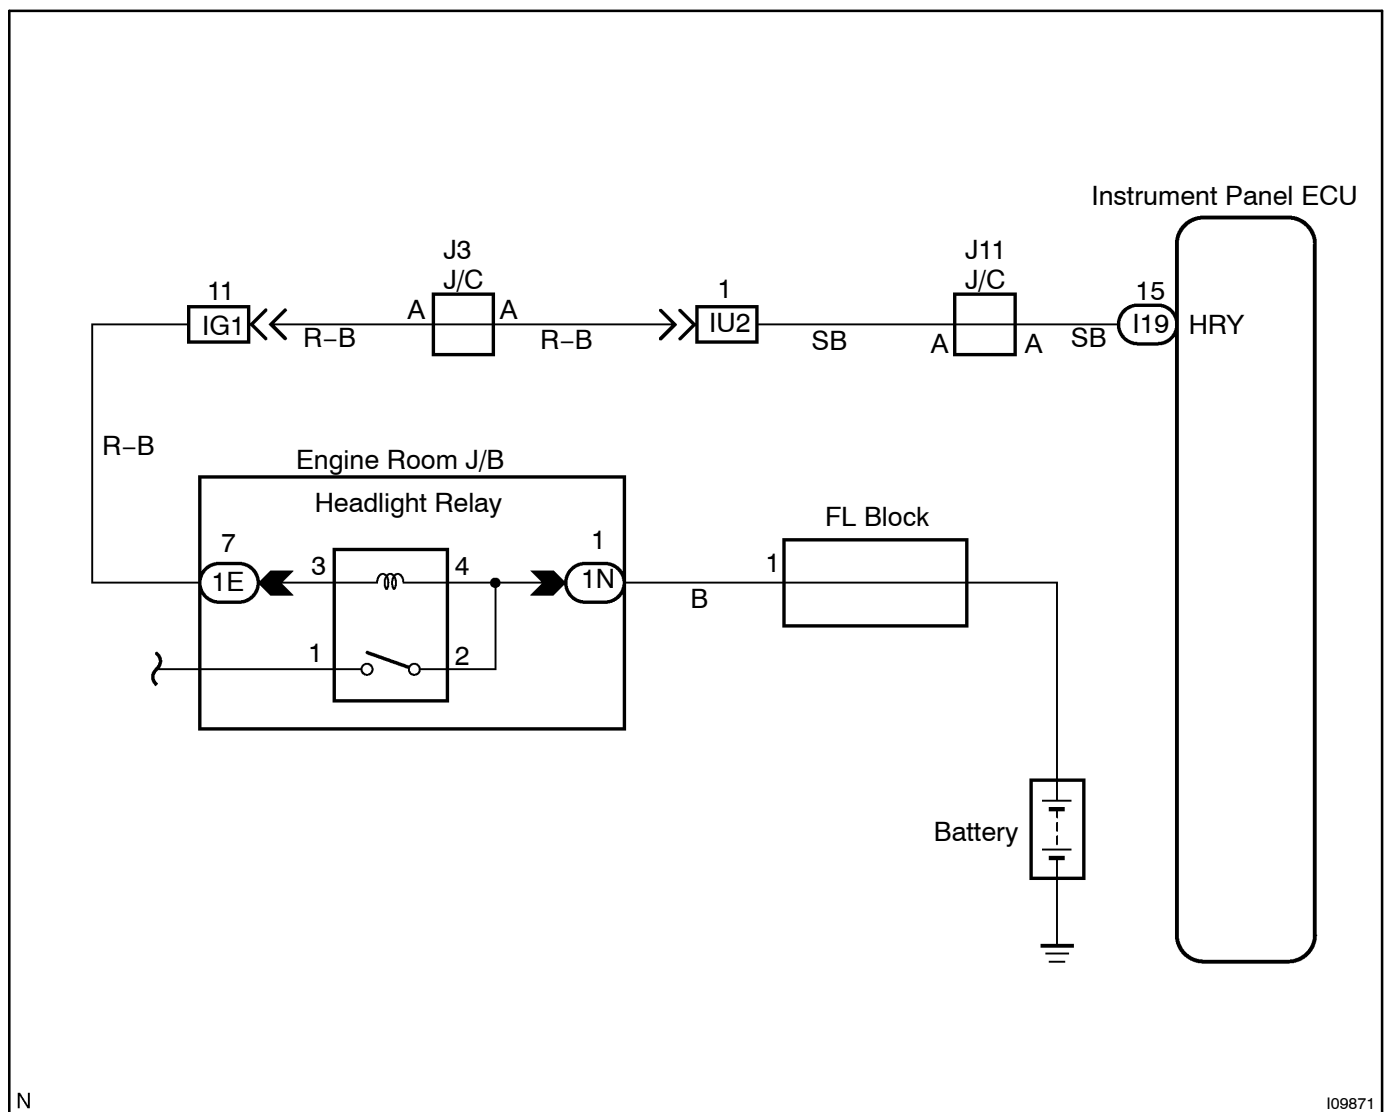

INSPECTION PROCEDURE

1	Check headlight relay (See page BE-23).
---	--

NG	Replace the headlight relay.
----	------------------------------

OK

2	Check wireharness and connector between headlight relay and Body ECU, battery and headlight relay.
---	--

NG	Repair or replace wireharness or connector.
----	---

OK

Proceed to next circuit inspection shown on problem symptoms table (See page DI-723).
--