


Power main relay circuit

CIRCUIT DESCRIPTION

Power main relay will be "ON" by operating the power window switch.

WIRING DIAGRAM

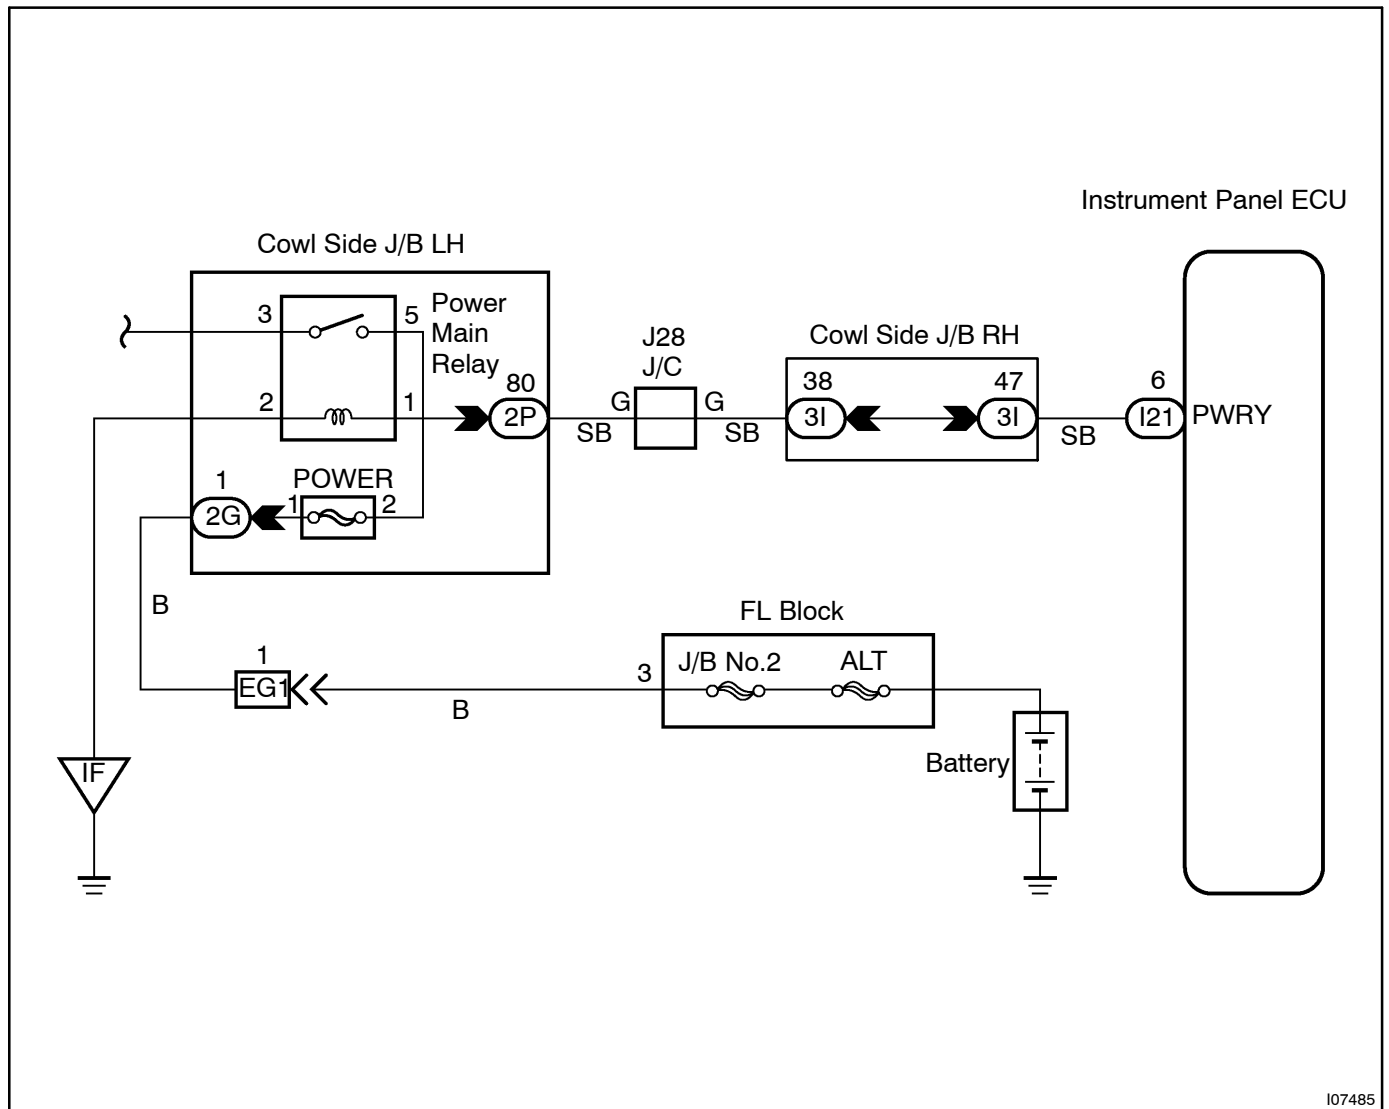

I07485

INSPECTION PROCEDURE

1	Check power main relay (See page BE-23).
----------	---

NG**Replace the power main relay.****OK**

2	Check wireharness and connector between power main relay and Body ECU, battery and power main relay.
----------	---

NG**Repair or replace wireharness or connector.****OK**

**Proceed to next circuit inspection shown on
problem symptoms table
(See page [DI-723](#)).**