


CIRCUIT DESCRIPTION

WIRING DIAGRAM

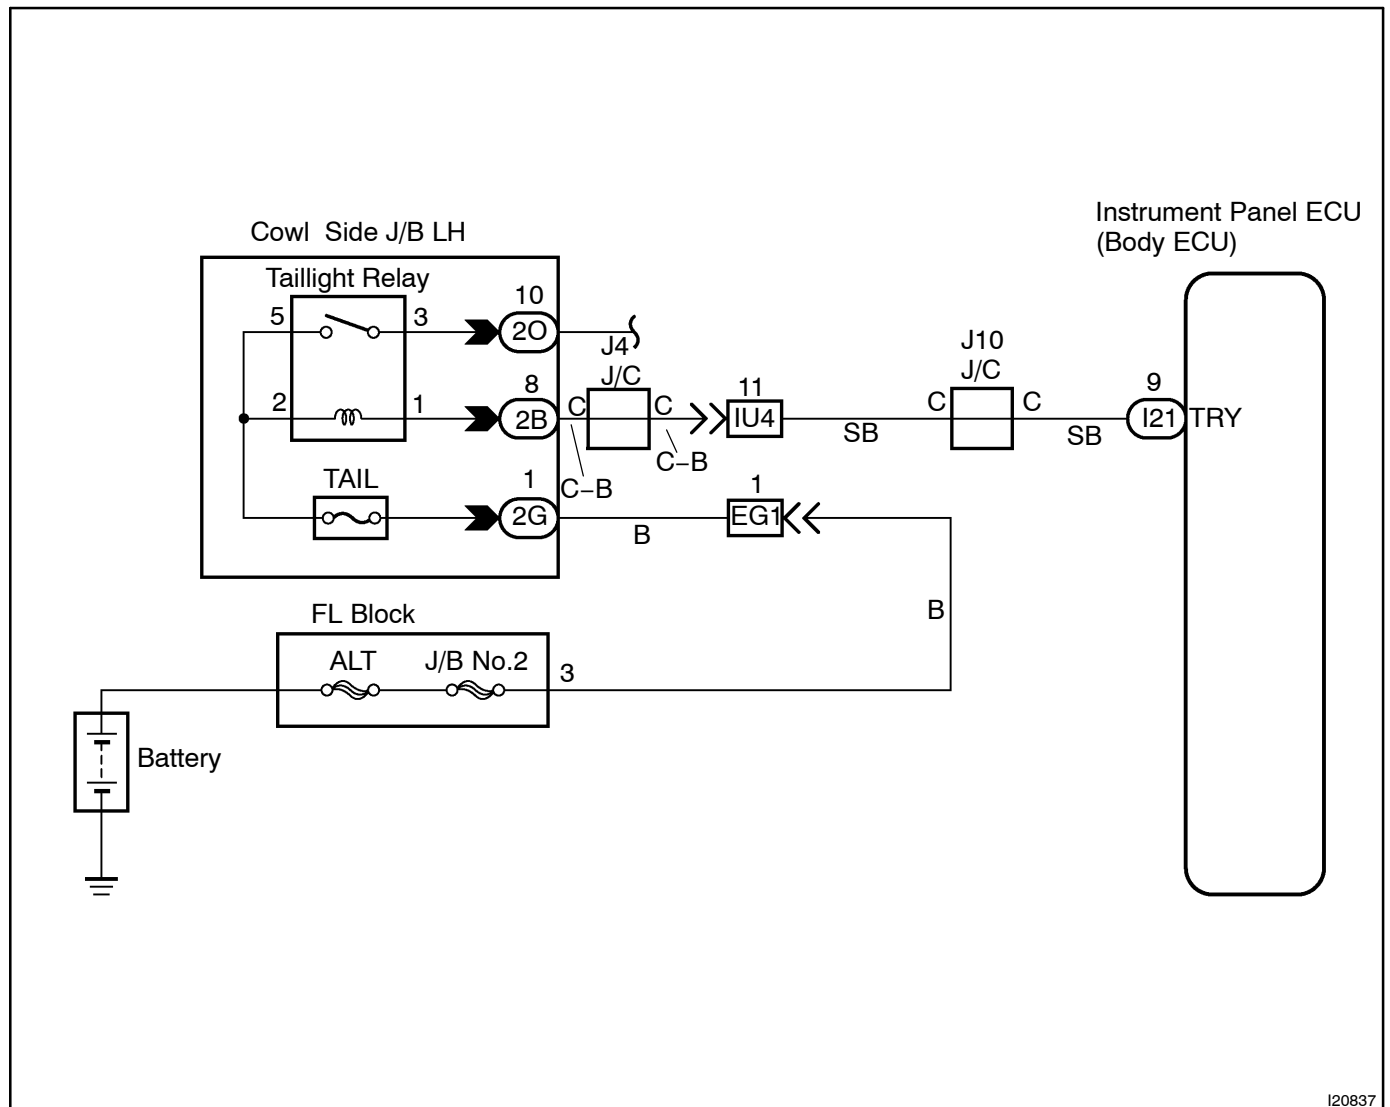

INSPECTION PROCEDURE

1	Check taillight relay (See page BE-23).
----------	--

NG**Replace the taillight relay.****OK**

2	Check wireharness and connector between taillight relay and Body ECU, battery and taillight relay.
----------	---

NG**Repair or replace wireharness or connector.****OK**

**Proceed to next circuit inspection shown on
problem symptoms table
(See page [DI-723](#)).**