

PROBLEM SYMPTOMS TABLE

Symptom	Suspect Area	See page
SET not occurring or CANCEL occurring. (DTC is Normal)	3. Input Signal Circuit 4. Vehicle Speed Sensor Circuit 5. Stop Light Switch Circuit 6. Park/Neutral Position Switch Circuit 7. ECM	DI-690 DI-682 DI-683 DI-194 IN-34
SET not occurring or CANCEL occurring. (DTC is not output)	1. ECM	IN-34
Actual vehicle speed deviates above or below the set speed.	1. Input Signal Circuit 2. ECM	DI-690 IN-34
Gear shifting occurs frequently between 3rd and O/D when driving on uphill road. (Hurling)	1. ECM	IN-34
Cruise control not cancelled, even when brake pedal is depressed.	1. Stop Light Switch Circuit 2. ECM	DI-683 IN-34
Cruise control not cancelled, even when transmission is shifted to "N" position.	1. Park/Neutral Position Switch Circuit 2. ECM	DI-194 IN-34
Cruise control not cancelled, even when clutch pedal is depressed.	1. ECM	IN-34
Control switch does not operate. (SET/COAST, ACC/RES, CANCEL not possible)	1. Cruise Control Switch Circuit 2. ECM	DI-687 IN-34
SET possible at 40 km/h (25 mph) or less, or CANCEL does not operate at 40 km/h (25 mph) or less.	1. Input Signal Circuit 2. ECM	DI-690 IN-34
Poor response is ACCEL and RESUME modes.	1. ECM	IN-34
O/D does not resume, even though the road is not uphill.	1. ECM	IN-34
DTC memory is erased.	1. ECM	IN-34
DTC is not output, or is output when should not be.	1. Diagnosis Circuit 2. ECM	– IN-34
Cruise MAIN indicator light remains ON or fails to light up.	1. Input Signal Circuit 2. CM	DI-690 IN-34