

PROBLEM SYMPTOMS TABLE

Symptom	Suspect Area	See page
Engine does not crank (Does not start)	14. Starter 15. Starter relay	ST-16 ST-18
No initial combustion (Does not start)	1. Engine immobilizer system 2. ECM power source circuit 3. Fuel pump control circuit 4. Fuel pump inertia switch	DI-703 DI-140 DI-119 SF-32
No complete combustion (Does not start)	1. Fuel pump control circuit	DI-119
Under normal condition (Difficult to start)	1. Starter signal circuit 2. Fuel pump control circuit 3. Compression	DI-137 DI-119 EM-3
Cold engine (Difficult to start)	1. Starter signal circuit 2. Fuel pump control circuit	DI-137 DI-119
Hot engine (Difficult to start)	1. Starter signal circuit 2. Fuel pump control circuit	DI-137 DI-119
High engine idle speed (Poor idling)	1. A/C signal circuit (Compressor circuit) 2. ECM power source circuit	DI-891 DI-140
Low engine idle speed (Poor idling)	1. A/C signal circuit (Compressor circuit) 2. Fuel pump control circuit	DI-891 DI-119
Rough idling (Poor idling)	1. Compression 2. Fuel pump control circuit	EM-3 DI-119
Hunting (Poor idling)	1. ECM power source circuit 2. Fuel pump control circuit	DI-140 DI-119
Hesitation/Poor acceleration (Poor driveability)	1. Fuel pump control circuit 2. A/T faulty	DI-119 DI-161
Surging (Poor driveability)	1. Fuel pump control circuit	DI-119
Soon after starting (Engine stall)	1. Engine immobilizer system 2. Fuel pump control circuit	DI-703 DI-119
During A/C operation (Engine stall)	1. A/C signal circuit (Compressor circuit) 2. ECM	DI-891 IN-24