

17. Panel switch does not function. (Navigation screen only)

INSPECTION PROCEDURE

1	Display check mode (Panel switch check screen).
---	---

NG	Replace the multi display.
----	----------------------------

OK

2	Check "AVC-LAN communication circuit". (See page DI-864)
---	---

NG	Replace or repair AVC-LAN circuit.
----	------------------------------------

OK

Replace the navigation ECU.
