

24. Driving direction is opposite to moving direction of vehicle position mark.**INSPECTION PROCEDURE****1****Navigation check mode (vehicle signal check mode REV).****OK****Replace the navigation ECU.****NG****2****Check the navigation ECU.****CHECK:**

Check terminal REV.

OK:**REV: See "Navigation ECU" of "TERMINAL OF ECU".****OK****Replace the navigation ECU.****NG****Replace or repair wire harness.**