

36. No power coming in.**INSPECTION PROCEDURE**

1 Is tape player operating normally?

Yes

Radio assembly faulty.

No

2 Check if CIGAR fuse is OK?

NG

Replace fuse.

OK

3 Is power supplied to ACC terminal of power amplifier?

No

ACC wire harness faulty.

YES

4 Check if RADIO fuse is OK?

No

Replace fuse.

YES

5	Is power supplied to +B terminal of power amplifier?
----------	---

No**+B wire harness faulty.****YES**

6	Check if GND (wire harness side) of power amplifier grounded normally?
----------	---

NG**Ground faulty.****OK**

7	Is power supplied to ACC terminal of radio assembly?
----------	---

No**Power amplifier or wire harness faulty.****YES**

8	Is power supplied to +B terminal of radio receiver assembly?
----------	---

No**Power amplifier or wire harness faulty.****YES**

9	Check if GND (wire harness side) of radio receiver assembly grounded normally?
---	--

NG	Ground faulty.
----	----------------

OK

Radio receiver assembly faulty.
