

PROBLEM SYMPTOMS TABLE

Flow chart No. (See page)	Component	Symptom
1. (DI-800)	Multi display	Black screen (Nothing displayed)
2. (DI-801)		No sound with Power switch pressed. ("AUTO OFF" on audio screen)
3. (DI-802)		No navigation screen displayed when "MAP", "MENU" or "DEST" switch pressed. (Screen cannot be switched.)
4. (DI-805)		No corresponding screen displayed when "AUDIO" or "Information" switch pressed.
5. (DI-806)		No navigation displayed, "Audio OFF" on audio screen and no audio sound.
6. (DI-808)		Screen cannot be dimmed in night time.
7. (DI-810)		Navigation screen not stabilized. (Synchronous error)
8. (DI-811)		Color on navigation screen is unusual (RGB signal error)
9. (DI-813)		Black screen appears when "MAP", "Menu" or "DEST" switch pressed.
10. (DI-814)		Sound of radio, cassette tape or CD only cannot be heard from speaker.
11. (DI-815)		No sound (radio, cassette tape, CD) can be heard from driver side door speaker only.
12. (DI-817)		Map DISC cannot be inserted.
13. (DI-819)		MAP screen display does not appear. (Disc Caution screen does not change.)
14. (DI-820)		MAP is displayed in white or blue screen. (Switch and vehicle position mark is displayed.)
15. (DI-821)		Touch switch does not function. (Navigation screen only)
16. (DI-822)		Touch switch does not function. (A/C control screen only)
17. (DI-823)		Panel switch does not function. (Navigation screen only)
18. (DI-824)		Panel switch does not function. (A/C control screen only)
19. (DI-825)		The screen cannot be change to night mode color.
20. (DI-827)		Vehicle position is deviated from correct point badly.
21. (DI-830)		GPS mark does not appear.

22. (DI-832)		No voice navigation.
23. (DI-833)		Vehicle position rotates without control. (Map rotates without control)
24. (DI-835)		Driving direction is opposite to moving direction of vehicle position mark.
25. (DI-836)	Radio Receiver Assembly	Radio reception poor.
26. (DI-837)		Cassette tape cannot be inserted.
27. (DI-838)		Cassette tape cannot be ejected.
28. (DI-839)		Any speaker does not work.
29. (DI-840)	DVD AUTO Changer	DVD magazine cannot be inserted.
30. (DI-842)		DVD magazine inserted, but no power.
31. (DI-844)		Power coming in, but DVD auto changer not operating..
32. (DI-846)		Sound jumps.
33. (DI-847)		Sound quality poor. (Volume faint)
34. (DI-848)		DVD magazine will not be ejected.
35. (DI-850)		Any speaker does not work.
36. (DI-851)	Power Amplifier	No power coming in.
37. (DI-854)		Any speaker does not work.
38. (DI-855)		No power coming, but woofer amplifier not operating.
39. (DI-858)	Noise	Noise occurs
40. (DI-861)		Noise produced by vibration or shock while driving.
41. (DI-862)		Noise produced when engine starts.