


TERMINALS OF ECU

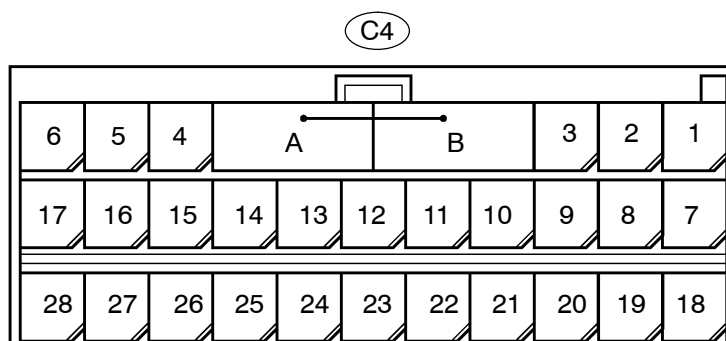

H01318

No.	Symbol	Terminal Name
A	–	Electrical Connector Check Mechanism
B	–	Electrical Connector Check Mechanism
C4 – 3	LA	SRS Warning Light
C4 – 5	IG2	Power Source (IGN Fuse)
C4 – 6	ACC	Power Source (CIG Fuse)
C4 – 7	PR–	Squib (Seat Belt Pretensioner, RH)
C4 – 8	PR+	Squib (Seat Belt Pretensioner, RH)
C4 – 9	+SR	Front Airbag Sensor (RH)
C4 – 10	P+	Squib (Passenger)
C4 – 11	P–	Squib (Passenger)
C4 – 12	SIL	Diagnosis
C4 – 13	D–	Squib (Driver)
C4 – 14	D+	Squib (Driver)
C4 – 15	+SL	Front Airbag Sensor (LH)
C4 – 16	PL+	Squib (Seat Belt Pretensioner, LH)
C4 – 17	PL–	Squib (Seat Belt Pretensioner, LH)
C4 – 19	Tc	Diagnosis
C4 – 20	–SR	Front Airbag Sensor (RH)
C4 – 26	–SL	Front Airbag Sensor (LH)
C4 – 27	E1	Ground
C4 – 28	E2	Ground